


USB Driver Installation Guide for Sync-Rite Plus Communication

Before connecting your laptop to the **Sync-Rite Plus** for communication, you must first download and install the correct USB driver. This driver enables your PC to recognize the Sync-Rite Plus via its USB interface.

You can download the required **CP210x Virtual COM Port (VCP) driver** from one of the following trusted sources:

- **Official Silicon Labs Website:**
<https://www.silabs.com/developer-tools/usb-to-uart-bridge-vcp-drivers?tab=downloads>

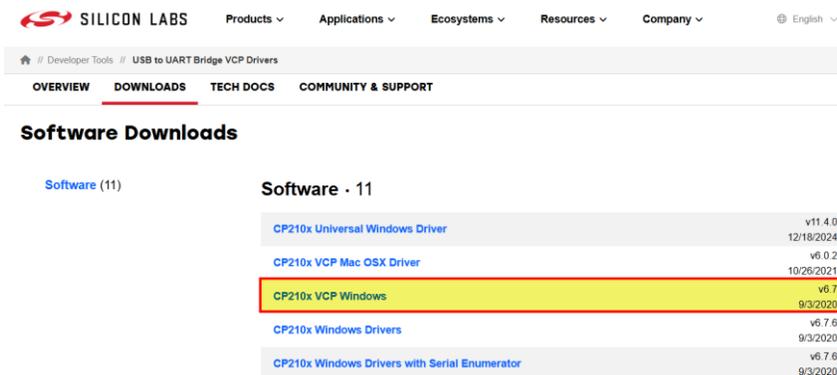

- **Direct Dropbox Download (Hosted by Us):**
https://www.dropbox.com/scl/fi/0q0w7vtaosvpzilvp4nn9/CP210x_VCP_Windows.zip?rlkey=6ueoq3dwmqaovje63h0zjsbte&st=nc8gbqu3&dl=0

Step-by-step Instructions:

1. Download the driver from one of the links above.
2. Locate the downloaded file and **extract the ZIP archive** to a known location.
3. Open **Device Manager** on your PC, prepare to identify the new COM port that appears under "**Ports (COM & LPT)**" once the device is connected.
4. Connect the Sync-Rite Plus device to your laptop using the USB cable, you should be able to identify added port.
5. If the driver does not install automatically:
 - Right-click the new device and choose "**Update driver**".
 - Select "**Browse my computer for drivers**".
 - Point to the folder where you extracted the driver files.
6. Complete the installation. The COM port should now be properly recognized, and communication with the Sync-Rite Plus will be enabled.

If you encounter any issues, please contact our support team (techsupport-em@weg.net)