

## External serial keypad / HMI remota serial Accessory description:

**HMI-SSW05-RS – External Serial Keypad** – This keypad is mounted externally to the SSW-05, with a cable length up to 3m (9.84 ft), and it is installed directly on the panel door.

**CAB-RS-X** – Cables used to connect the SSW-05 to the external serial keypad (HMI-SSW05-RS). Lengths: 1, 2 and 3m (3.28; 6.56 and 9.84 ft).

**NOTE: The External Serial Keypad (HMI-SSW05-RS) does only work with the cable CAB-RS-X**

## Descripción del Opcional:

**HMI-SSW05-RS - HMI remota serial** – Montada externamente a la SSW-05 con un cable de longitud de hasta 3m sobre la puerta del tablero o mesa de comando.

**CAB-RS-X** - Cables utilizados para conexión de la SSW-05 y la HMI remota serial (HMI-SSW05-RS). Los anchos disponibles son 1, 2 y 3m.


**NOTA: La HMI remota serial (HMI-SSW05-RS) funciona solamente en conjunto con cabo CAB-RS-X**

## Descrição do Opcional:

**HMI-SSW05-RS - HMI remota serial** – É montada externamente a SSW-05, com um comprimento de cabo de até 3m, na porta de painel ou mesa de comando.

**CAB-RS-X** - Cabos utilizados para interligar a SSW-05 e a HMI remota serial (HMI-SSW05-RS). Os comprimentos disponíveis são 1, 2 e 3m.

**NOTA: A HMI remota serial (HMI-SSW05-RS) funciona somente em conjunto com o cabo CAB-RS-X**

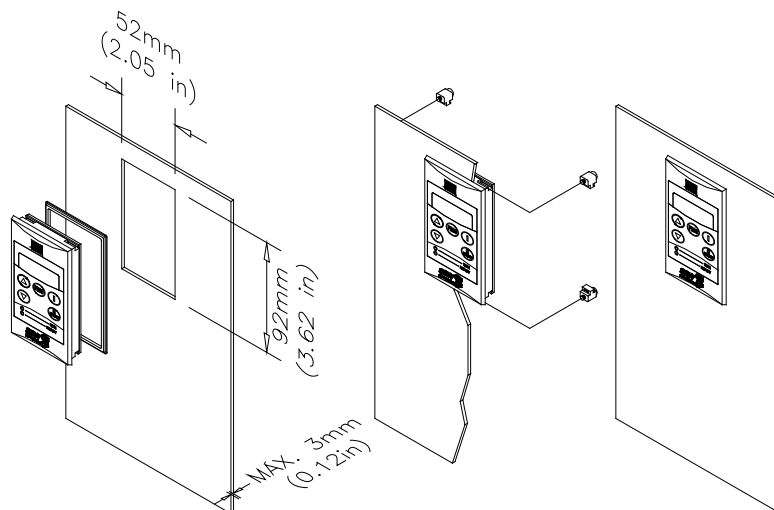

10192839