


# Anybus EtherNet/IP

## SSW900-CETH-IP-N V1.6X

### User's Guide

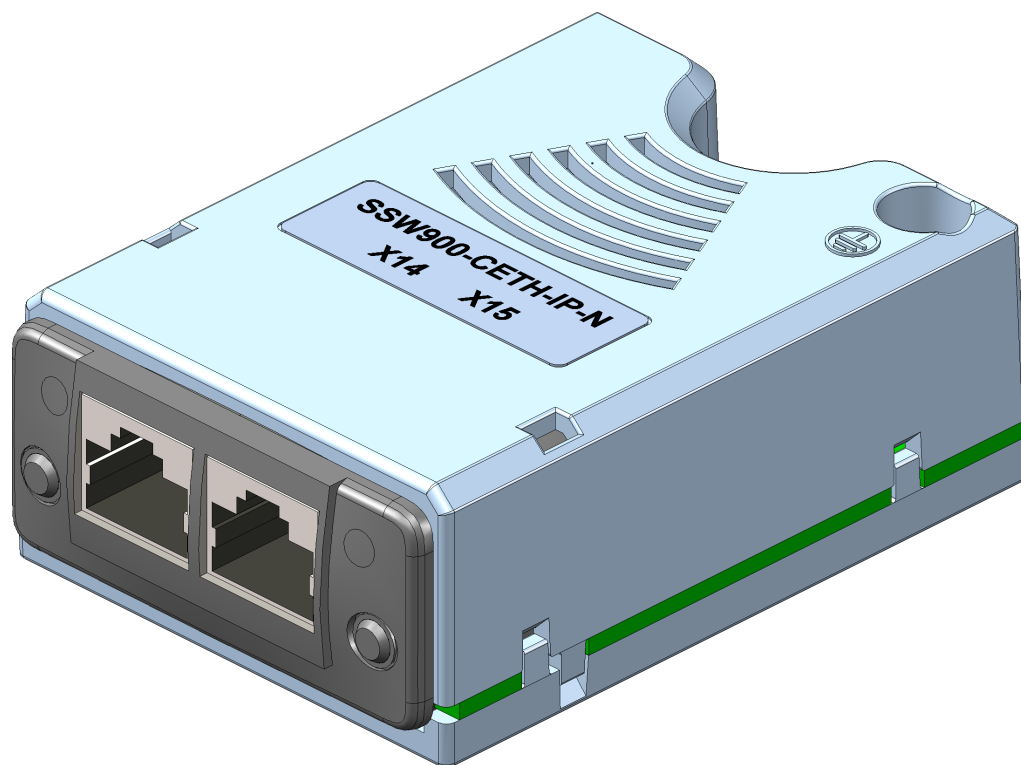



# **User's Guide**

**SSW900-CETH-IP-N**

Software version: 1.6X

Document: 10004627417

Revision: 06

Publication Date: 10/2024

## SUMMARY OF REVISIONS

The information below describes the reviews made in this manual.

Version	Revision	Description	Date
V1.0X	R00	First edition.	02/2017
V1.1X	R01	General Revision.	08/2018
V1.2X	R02	General Revision.	01/2019
V1.3X	R03	Parameters related to the SSW900-CETH-W accessory. Parameter for adjusting the contrast of the HMI display. Text corrections.	02/2021
V1.4X	R04	C6.2.1, C11.4. Text corrections.	11/2021
V1.5X	R05	General Revision.	09/2022
V1.6X	R06	C8.3.11, C8.5.11	10/2024

# CONTENTS

---

<b>ABOUT THE MANUAL</b> .....	<b>0-1</b>
ABBREVIATIONS AND DEFINITIONS .....	0-1
NUMERICAL REPRESENTATION .....	0-1
DOCUMENTS .....	0-1
IMPORTANT NOTICE .....	0-2
TRADEMARKS .....	0-2
<b>1 MAIN CHARACTERISTICS</b> .....	<b>1-1</b>
<b>2 INTERFACE DESCRIPTION</b> .....	<b>2-1</b>
2.1 ANYBUS ETHERNET/IP ACCESSORY .....	2-1
2.2 CONNECTORS .....	2-1
2.3 INDICATION LEDS .....	2-2
<b>3 ETHERNET/IP NETWORK INSTALLATION</b> .....	<b>3-1</b>
3.1 IP ADDRESS .....	3-1
3.2 COMMUNICATION RATE .....	3-1
3.3 CABLE .....	3-1
3.4 NETWORK TOPOLOGY .....	3-1
3.5 RECOMMENDATIONS FOR GROUNDING CONNECTION AND CABLE ROUTING .....	3-2
<b>4 S STATUS</b> .....	<b>4-1</b>
S5 COMMUNICATIONS .....	4-1
S5.1 Status Word .....	4-1
S5.2 Command Word .....	4-1
S5.3 Value for Outputs .....	4-2
S5.3.2 Value for AO .....	4-2
S5.5 Anybus-CC .....	4-3
<b>5 C CONFIGURATIONS</b> .....	<b>5-1</b>
C8 COMMUNICATIONS .....	5-1
C8.1 I/O Data .....	5-1
C8.1.1 Data Read .....	5-1
C8.1.2 Data Write .....	5-2
C8.3 Anybus-CC .....	5-4
C8.3.10 Off Line Error .....	5-6
<b>6 OPERATION IN THE ETHERNET/IP NETWORK</b> .....	<b>6-1</b>
6.1 CYCLIC DATA .....	6-1
6.1.1 Input words .....	6-1
6.1.2 Output Words .....	6-2
6.2 ACYCLIC DATA .....	6-3
6.3 EDS FILE .....	6-3
6.4 MODBUS TCP CONNECTIONS .....	6-3
6.5 SUPPORTED OBJECT CLASSES .....	6-3
6.5.1 Identity Class (01h) .....	6-3
6.5.2 Message Router Class (02h) .....	6-4
6.5.3 Assembly Class (04h) .....	6-4
6.5.4 DLR Class (47h) .....	6-4
6.5.5 QoS Class (48h) .....	6-4
6.5.6 TCP/IP Interface Class (F5h) .....	6-5
6.5.7 Ethernet Link Class (F6h) .....	6-5
6.5.8 Manufacturer Specific Class (A2h) .....	6-6

---

<b>7</b>	<b>STARTUP GUIDE .....</b>	<b>7-1</b>
7.1	INSTALLING THE ACCESSORY .....	7-1
7.2	CONFIGURING THE EQUIPMENT .....	7-1
7.3	CONFIGURING THE MASTER .....	7-1
7.4	COMMUNICATION STATUS .....	7-2
7.5	OPERATION USING PROCESS DATA .....	7-2
7.6	ACCESS TO PARAMETERS – ACYCLIC MESSAGES .....	7-2
<b>8</b>	<b>WEB SERVER .....</b>	<b>8-1</b>
<b>9</b>	<b>FAULTS AND ALARMS .....</b>	<b>9-1</b>
<b>10</b>	<b>QUICK REFERENCES .....</b>	<b>10-1</b>
10.1	PARAMETER STRUCTURE .....	10-1
10.2	PARAMETERS .....	10-3

---

## ABOUT THE MANUAL

This manual supplies the necessary information for the operation of the SSW900 soft-starter using the Anybus EtherNet/IP interface. This manual must be used together with the SSW900 user's manual and programming manual.

## ABBREVIATIONS AND DEFINITIONS

<b>ASCII</b>	American Standard Code for Information Interchange
<b>CIP</b>	Common Industrial Protocol
<b>CRC</b>	Cycling Redundancy Check
<b>DLR</b>	Device Level Ring
<b>EIA</b>	Electronic Industries Alliance
<b>HMI</b>	Human-Machine Interface
<b>ODVA</b>	Open DeviceNet Vendor Association
<b>PLC</b>	Programmable Logic Controller
<b>ro</b>	Read only
<b>rw</b>	Read/write
<b>TIA</b>	Telecommunications Industry Association

## NUMERICAL REPRESENTATION

Decimal numbers are represented by means of digits without suffix. Hexadecimal numbers are represented with the letter 'h' after the number. Binary numbers are represented with the letter 'b' after the number.

## DOCUMENTS

The EtherNet/IP protocol was developed based on the following specifications and documents:

Document	Version	Source
Volume One - Common Industrial Protocol (CIP) Specification	3.17	ODVA
Volume Two - EtherNet/IP Adaptation of CIP	1.18	ODVA

In order to obtain this documentation, consult ODVA, which is nowadays the organization that keeps, publishes and updates the information related to the EtherNet/IP network.

---

## **IMPORTANT NOTICE ABOUT CYBERSECURITY AND COMMUNICATIONS**

This product/equipment can connect and exchange information through networks and communication protocols. It has been designed and subjected to tests to ensure correct operation with other automation systems using the protocols mentioned in this manual. Therefore, it is essential that the customer understands the responsibilities in connection with information and cybersecurity when using this equipment.

Consequently, it is the exclusive obligation of the customer to adopt in-depth defense strategies and implement policies and measures to ensure the security of the system as a whole, including with regard to communications sent and received by the equipment. Among such measures, we can point out the installation of firewalls, antivirus and malware protection applications, data encryption, authentication control and physical user access.

WEG and its affiliates take no liability for damages or losses arising from cybersecurity breaches, including, but not limited to, unauthorized access, intrusion, information, or data leak and/or theft, denial-of-service attacks, or any other form of security breach. Using this product under conditions for which it was not specifically designed is not recommended and may result in damage to the product, the network, and the automation system. Thus, it is essential that the customer understand that the external intervention by third-party software applications, such as sniffers or applications with similar actions, has the potential to cause interruptions or restrictions in the functionality of the equipment.

### **TRADEMARKS**

Anybus® is a registered trademark of HMS Industrial Networks.

EtherNet/IP is a trademark of ODVA, Inc.

All other trademarks are the property of their respective holders.

### 1 MAIN CHARACTERISTICS

Below are the main characteristics for communication of the soft-starter SSW900 with Anybus EtherNet/IP accessory.

- The interface follows the Fast Ethernet 100BASE-TX standard.
- It allows communication using the 10 or 100 Mbps rates in half or full duplex mode.
- It has a built-in, two-port Ethernet switch.
- The Ethernet ports work with Auto-MDIX (automatic medium-dependent interface crossover), a technology which automatically detects the type of cable used and configures the connection accordingly, eliminating the need of cross-over cables.
- It is supplied with an EDS file for the network master configuration.
- Allows up to 50 input words and 20 output words for cyclic data communication.
- Acyclic data available for parameterization.
- Device Level Ring (DLR) and linear network topology supported.
- It features up to 2 Modbus TCP connections.



## 2 INTERFACE DESCRIPTION

The SSW900 soft-starter has two Slots for accessories (Figura 2.1). Parameters S3.5.1 and S3.5.2 present which accessory was recognized by Slot.

The accessories can be connected to any Slot, but only one type of each communication accessory is allowed. The Anybus-CC communication accessories (regardless of the protocol implanted) are identified on these parameters as *Anybus-CC*.

Read the user's manual of the SSW900 soft-starter before installing or using this accessory.

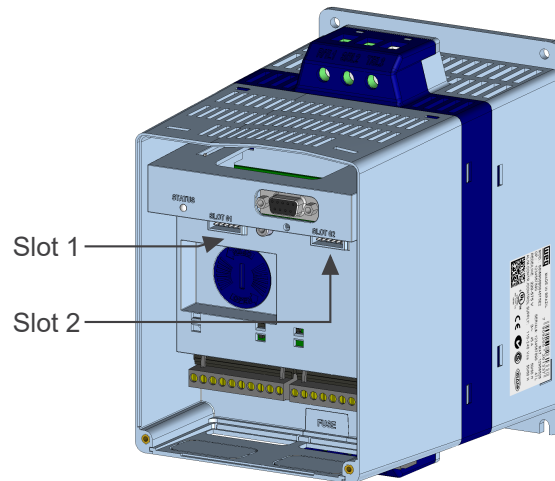



Figure 2.1: Slots for accessories



**NOTE!**

Only one Anybus-CC communication accessory can be connected to the SSW900 soft-starter, even if they are different protocols.

### 2.1 ANYBUS ETHERNET/IP ACCESSORY

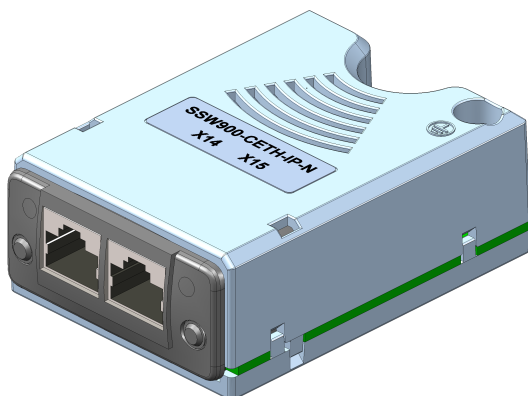

SSW900-CETH-IP-N:

■ Supplied items:

- Installation guide.
- Anybus EtherNet/IP communication module.
- "torx" screw driver for fixing the module.
- It allows the programming of the drive via network configuration software.

### 2.2 CONNECTORS


The accessory for EtherNet/IP communication has two RJ45 connectors for network connection. The connector pin out follows the Fast Ethernet 100BASE-TX standard, using two pairs of cables for data transmission and reception.

The housings of the Ethernet connectors, which are normally connected to the cable shield, have connections between themselves and to the protective earth via an RC circuit.

# INTERFACE DESCRIPTION

## 2.3 INDICATION LEDS

The EtherNet/IP accessory has an LED indicator for the Link status in each Ethernet connector (1 and 2), and two LEDs for state indication, one for the communication module (MS) and another for the network (NS). These LEDs have the following functions and indications.

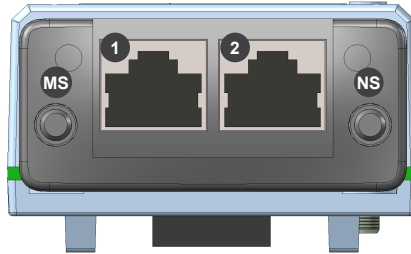

**Table 2.1: LED Link**

State	Description
Off	No link or powered off
Green, solid	Link up, no activity
Green, flashing	Link up and activity

The MS LED indicates the conditions of the module itself. That is, whether it is able to work or not. The table below shows the possible states:

**Table 2.2: State of the EtherNet/IP module**

Status	Description	Comments
Off	No power or initializing	-
Green, solid	Controlled by a Scanner in <i>Run</i> state	-
Green, flashing	Not configured, or Scanner in <i>Idle</i> state	-
Red, solid	Module in error	Reinitializing the equipment is required.
Red, flashing	Recoverable fault	-
Flashing green/red	Equipment performing self-diagnosis	It occurs during initialization.

The NS LED provides information about the state of the EtherNet/IP network. The table below presents the description of those states.

**Table 2.3: State of the EtherNet/IP network**

Status	Description	Comments
Off	No power or no IP address	-
Green, solid	<i>Online</i> , connection established	-
Green, flashing	Waiting for connections	-
Red, solid	Invalid/duplicated IP address, or fatal error	Reinitializing the equipment is required. It indicates that the slave cannot enter the network because of addressing problems. Verify if the address is being used by another equipment or if there are installation problems.
Red, flashing	One or more I/O type connections have expired	The I/O data exchange has been interrupted.
Flashing green/red	Equipment performing self-diagnosis	It occurs during initialization.

### 3 ETHERNET/IP NETWORK INSTALLATION

This chapter presents recommendations related to equipment installation in an EtherNet/IP network.

#### 3.1 IP ADDRESS

Every equipment in an Ethernet network needs an IP address and subnet mask.

The IP addressing is unique in the network, and each equipment must have a different IP. The subnet mask is used to define which IP address range is valid in the network.

The SSW900 soft-starter allows the use of two methods for programming these features, programmable via C8.3.4:

- Parameters: uses the configurations of IP address, mask and gateway as programmed on equipment parameters.
- DHCP: enable the configuration of the SSW900 via DHCP server. The DHCP can automatically assign IP addresses, subnet mask, etc. to the devices on the network. The configurations performed via parameters are disregarded.

**NOTE!**

After changing these properties, for the changes to take effect, the equipment must be turned off and on again, or requesting the settings update via C8.3.1.

#### 3.2 COMMUNICATION RATE

The Ethernet interfaces of the SSW900 soft-starter can communicate using the 10 or 100 Mbps rates in half or full duplex mode.

**NOTE!**

It is important that, for each Ethernet connection made between two points, the baud rate and the duplex mode are set to the same option. If the option AUTO is used in one of the points, you must set the other point also to AUTO, or to half duplex mode.

#### 3.3 CABLE

Recommended characteristics for the cable:

- Standard Ethernet cable, 100Base-TX (FastEthernet), CAT 5e or higher.
- Shielded cable.
- Maximum length between devices: 100 m.

For installation, it is recommended the use of shielded Ethernet cables specific for use in industrial environment.

#### 3.4 NETWORK TOPOLOGY

To connect SSW900 soft-starter in an EtherNet/IP network, usually the star connection is made using an industrial switch.

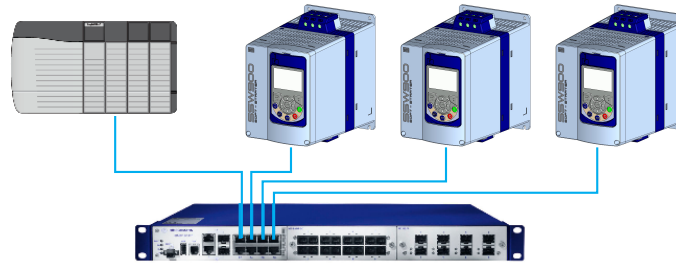


Figure 3.1: Star topology

It is also possible to make the connection in daisy chain, allowing a topology equivalent to a bus.



Figure 3.2: Daisy chain topology



### NOTE!

When the equipment is turned off, the built-in switch is also deactivated, preventing communication with the subsequent equipment.

## 3.5 RECOMMENDATIONS FOR GROUNDING CONNECTION AND CABLE ROUTING

The correct connection with the ground decreases problems caused by interference in an industrial environment. The following are some recommendations about grounding and cable routing:

- Always use shielded twisted pair Ethernet cables and connectors with metallic housing.
- Connect the equipment grounding via grounding terminal. Avoid the cable connection on multiple grounding points, especially where there are grounds with different potentials.
- Pass signal cables and communication cables in dedicated pathways. Prevent laying these cables next to power cables.

## 4 S STATUS

Allows viewing of the SSW reading variables.

### S5 COMMUNICATIONS

HMI monitoring parameters of the communication interfaces.

For a detailed description, refer to the Anybus-CC, CANopen, DeviceNet, Ethernet and Modbus RTU User's Manuals of the SSW according to the interface used.

#### S5.1 Status Word

.1 SSW 0 ... 15 Bit

##### Description:

Word of SSW status.

.1 SSW Word of SSW status.

Bit	Value/Description
Bit 0 Running	0: The motor is not enabled. 1: The motor is enabled.
Bit 1 Gener. Enabled	0: When it is general disabled by any mean. 1: When it is general enabled by all the means.
Bit 2 JOG	0: The JOG function is inactive. 1: The JOG function is active.
Bit 3 Initial Test	0: None. 1: During the initial tests before the motor starting.
Bit 4 Ramp Up	0: It is not accelerating. 1: During the whole acceleration.
Bit 5 Full Voltage	0: There is no full voltage applied to the motor. 1: Full voltage is being applied to the motor.
Bit 6 Bypass	0: With open bypass. 1: With closed bypass.
Bit 7 Ramp Down	0: It is not decelerating. 1: During the whole deceleration.
Bit 8 Remote	0: Local. 1: Remote.
Bit 9 Braking	0: It is not executing braking. 1: During the braking process.
Bit 10 FWD/REV	0: It is not reverting the rotation direction. 1: During the rotation reversion process.
Bit 11 Reverse	0: Forward rotation. 1: Reverse rotation.
Bit 12 Ton	0: None. 1: Time before start (C5.7.2).
Bit 13 Toff	0: None. 1: Time after stop (C5.7.3).
Bit 14 Alarm	0: The SSW is not in alarm condition. 1: The SSW is in alarm condition. Note: The active alarm codes can be read by means of the menu D2.1.
Bit 15 Fault	0: The SSW is not in fault condition. 1: The SSW is in fault condition. Note: The active fault code can be read by means of the menu D1.1.

#### S5.2 Command Word

.5 Slot1 0 ... 15 Bit

.6 Slot2 0 ... 15 Bit

## S STATUS

### Description:

Command word of all sources of the SSW. The RUN/STOP and JOG commands of the sources which are not active will be reset.

**.5 Slot1** Control word via any communication accessory connected to Slot 1.

**.6 Slot2** Command word via any communication accessory connected to Slot 2.

Bit	Value/Description
Bit 0 Start/Stop	<b>0</b> : stopping by ramp. <b>1</b> : starting by ramp.
Bit 1 Gener. Enabled	<b>0</b> : general disable. <b>1</b> : general enable.
Bit 2 JOG	<b>0</b> : no JOG. <b>1</b> : with JOG.
Bit 3 FWD/REV	<b>0</b> : clockwise CW. <b>1</b> : counterclockwise CCW.
Bit 4 LOC/REM	<b>0</b> : local. <b>1</b> : remote.
Bit 5 ... 6 Reserved	
Bit 7 Reset	<b>0</b> → <b>1</b> : execute fault reset (if a fault is active). Note: Only in the 0 to 1 transition command.
Bit 8 ... 15 Reserved	



### NOTE!

If the RUN/STOP and JOG commands are by a certain source and it is active, only these commands can be viewed in S5.2. For security reasons, all the other commands of the other sources which are not active will be reset.

## S5.3 Value for Outputs

.1 DO Value 0 ... 15 Bit

### Description:

Value for digital and analog outputs via communication.

**.1 DO Value** Value for the digital outputs via network interfaces.

Bit	Value/Description
Bit 0 DO1	<b>0</b> : Inactive. <b>1</b> : Active.
Bit 1 DO2	<b>0</b> : Inactive. <b>1</b> : Active.
Bit 2 DO3	<b>0</b> : Inactive. <b>1</b> : Active.
Bit 3 ... 15 Reserved	

## S5.3.2 Value for AO

.1 AO in 10 bits 0 ... 1023

### Description:

Value for the analog output via network interfaces.

**.1 AO in 10 bits** Value for the analog output via network interfaces: 0...1023. 0=0% and 1023=100%.

## S5.5 Anybus-CC

.1 Identification	0 ... 25
.2 Comm. Status	0 ... 8

### Description:

Status of the Anybus communication accessory and the protocols that use this interface.

**.1 Identification** It allows identifying the connected Anybus module.

Indication	Description
0 = Disabled	Communication module not installed.
1 ... 15 = Reserved	
16 = Profibus DP	Profibus DP module.
17 = DeviceNet	DeviceNet Module.
18 = Reserved	
19 = EtherNet/IP	EtherNet/IP module.
20 = Reserved	
21 = Modbus TCP	Modbus TCP module.
22 = Reserved	
23 = PROFINET IO	PROFINET IO module.
24 = PROFINET S2	
25 = Reserved	

**.2 Comm. Status** It informs the communication module status.

Indication	Description
0 = Setup	Module identified, waiting for configuration data (automatic).
1 = Init	Module executing the interface initialization (automatic).
2 = Wait Comm	Module initialized, but without communication with the network master.
3 = Idle	Communication with the network master established, but in idle or programming mode.
4 = Data Active	Communication with the network master established, and I/O data being communicated successfully. "Online".
5 = Error	Not available.
6 = Reserved	
7 = Exception	Serious error on the communication interface. The interface requires reinitialization.
8 = Access Error	Access error between the equipment and Anybus interface. Requires interface reset.

## 5 C CONFIGURATIONS

This menu allows the programming of all SSW configuration parameters.

### C8 COMMUNICATIONS

To change information via communication network, the SSW has several standard protocols.

The following necessary accessories and protocols are available:

Protocol	Accessory
CANopen	SSW900-CAN-W
DeviceNet	SSW900-CDN-N, SSW900-CAN-W
EtherNet/IP	SSW900-CETH-IP-N, SSW900-CETH-W
Modbus RTU	SSW900-CRS485-W
Modbus TCP	SSW900-CMB-TCP-N, SSW900-CETH-W
Profibus DP	SSW900-CPDP-N
PROFINET IO	SSW900-CPN-IO-N
PROFINET S2	SSW900-CPN-S2-N

For further details regarding the SSW configuration to operate these protocols, refer to the SSW Communication Manual.

#### C8.1 I/O Data

Configure network data exchange area.

Use this for cyclic communication over SSW900-CAN-W module (DeviceNet), SSW900-CPDP-N, SSW900-CDN-N, SSW900-CETH-IP-N, SSW900-CPN-IO-N and SSW900-CETH-W (EtherNet/IP). For SSW900-CRS485-W using Modbus RTU protocol or modules SSW900-CMB-TCP-N and SSW900-CETH-W using Modbus TCP protocol, a contiguous area of holding registers (@1500-@1549 and @1600-@1619) can be accessed using standard Modbus functions.

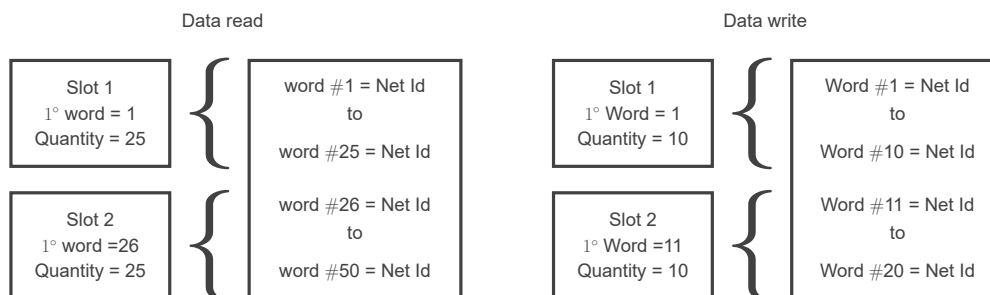


Figure 5.1: Example of data setting

##### C8.1.1 Data Read

Configure a set of 16 bit parameters to read over the network.

C8.1.1 Data Read		
C8.1.1.1 Slot 1 1st Word		
Range:	1 ... 50	Default: 1
Properties:	Stopped	

##### Description:

It sets the index of the first programmable read word for data communication (inputs for master).



## C CONFIGURATIONS

### C8.1.1 Data Read

#### C8.1.1.2 Slot 1 Quantity

<b>Range:</b>	1 ... 50	<b>Default:</b> 1
<b>Properties:</b>	Stopped	

**Description:**

It sets the number of read words for data communication (inputs for master), from the first word on.

### C8.1.1 Data Read

#### C8.1.1.3 Slot 2 1st Word

<b>Range:</b>	1 ... 50	<b>Default:</b> 26
<b>Properties:</b>	Stopped	

**Description:**

It sets the index of the first programmable read word for data communication (inputs for master).

### C8.1.1 Data Read

#### C8.1.1.4 Slot 2 Quantity

<b>Range:</b>	1 ... 50	<b>Default:</b> 1
<b>Properties:</b>	Stopped	

**Description:**

It set the number of read words for data communication (inputs for master), from the first word on.

### C8.1.1 Data Read

#### C8.1.1.5 Word #1

C8.1.1.5 to C8.1.1.54

### C8.1.1 Data Read

#### C8.1.1.54 Word #50

<b>Range:</b>	0 ... 65535	<b>Default:</b> 0
<b>Properties:</b>	Stopped	

**Description:**

Select the net address of other parameter, which content will be available as reading data for fieldbus interfaces (inputs: sent to master).

The data size of the referenced parameter must be considered. If data size is bigger than 16 bits, the next data read word configuration must be set to the same net address.

### C8.1.2 Data Write

Configure a set of 16 bit parameters to write over the network.

### C8.1.2 Data Write

#### C8.1.2.1 Slot 1 1st Word

<b>Range:</b>	1 ... 20	<b>Default:</b> 1
<b>Properties:</b>	Stopped	

**Description:**

It sets the index of the first programmable write word for data communication (outputs for master).

### C8.1.2 Data Write

#### C8.1.2.2 Slot 1 Quantity

<b>Range:</b>	1 ... 20	<b>Default:</b> 1
<b>Properties:</b>	Stopped	

**Description:**

It sets the number of write words for data communication (outputs for master), from the first word on.

<b>C8.1.2 Data Write</b>		
<b>C8.1.2.3 Slot 2 1st Word</b>		
Range:	1 ... 20	<b>Default: 11</b>
Properties:	Stopped	

**Description:**

It sets the index of the first programmable write word for data communication (outputs for master).

<b>C8.1.2 Data Write</b>		
<b>C8.1.2.4 Slot 2 Quantity</b>		
Range:	1 ... 20	<b>Default: 1</b>
Properties:	Stopped	

**Description:**

It sets the number of write words for data communication (outputs for master), from the first word on.

<b>C8.1.2 Data Write</b>		
<b>C8.1.2.5 Update Delay</b>		
Range:	0.0 ... 999.9 s	<b>Default: 0.0</b>
Properties:		

**Description:**

Whenever there is a transition from offline (without cyclic data) to online (with cyclic write data), the data received via communication networks (write words) is ignored during this programmed time, remaining in the state it was before the beginning of the reception.

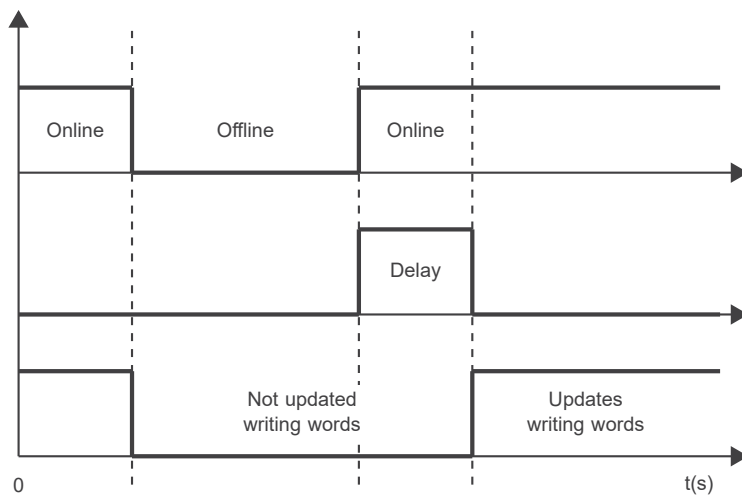


Figure 5.2: Delay in the update of the I/O words

<b>C8.1.2 Data Write</b>		
<b>C8.1.2.6 Word #1</b>		

C8.1.2.6 to C8.1.2.25

<b>C8.1.2 Data Write</b>		
<b>C8.1.2.25 Word #20</b>		
Range:	0 ... 65535	<b>Default: 0</b>
Properties:	Stopped	

## C CONFIGURATIONS

### Description:

Select the net address of other parameter, which content will be available as writing data for fieldbus interfaces (outputs: received from master).

The data size of the referenced parameter must be considered. If data size is bigger than 16 bits, the next data write word configuration must be set to the same net address.

### C8.3 Anybus-CC

Configuration for the Anybus-CC communication and protocols that use this interface.

For a detailed description, refer to the SSW900 Anybus-CC User's Manual specific for the desired protocol, supplied in electronic format.

#### C8.3 Anybus-CC

##### C8.3.1 Update Configuration

<b>Range:</b>	0 ... 1	<b>Default:</b> 0
<b>Properties:</b>	Stopped	

### Description:

It allows forcing a reinitialization of the Anybus-CC communication module for the configurations done in the parameters of menus C8.1 and C8.3 to be applied.

The reinitialization implies communication loss. After the process is completed, this parameter automatically goes back to Regular Operation.

Indication	Description
0 = Normal Operation	No action.
1 = Update configuration	Reinitializes the Anybus module.

#### C8.3 Anybus-CC

##### C8.3.4 IP Address Configuration

<b>Range:</b>	0 ... 2	<b>Default:</b> 1
<b>Properties:</b>		

### Description:

It allows to choose how to set the IP address for the modules Anybus-CC EtherNet/IP, Modbus TCP, PROFINET IO or PROFINET S2.

Indication	Description
0 = Parameters	The programming of the IP address, configurations of the subnet mask and gateway must be done through parameters C8.3.5, C8.3.6 and C8.3.7.
1 = DHCP	Enables the DHCP function. The IP address and other network configurations are received from a DHCP server via network.
2 = DCP	The IP address and other network configurations are received via DCP (PROFINET).



### NOTE!

After changing this configuration, for the modification to be effective, the equipment must be turned off and then turned on again, or the configurations must be updated through C8.3.1.

#### C8.3 Anybus-CC

##### C8.3.5 IP Address

<b>Range:</b>	0.0.0.0 ... 255.255.255.255	<b>Default:</b> 192.168.0.10
<b>Properties:</b>		

**Description:**

It allows programming the IP address of the module Anybus-CC EtherNet/IP, Modbus TCP, PROFINET IO or PROFINET S2. It is only effective if C8.3.4 = Parameters.



**NOTE!**

After changing this configuration, for the modification to be effective, the equipment must be turned off and then turned on again, or the configurations must be updated through C8.3.1.

**C8.3 Anybus-CC**

**C8.3.6 CIDR**

**Range:** 0 ... 31

**Default:** 24

**Properties:**

**Description:**

It allows programming the subnet mask used by the module Anybus-CC EtherNet/IP, Modbus TCP, PROFINET IO or PROFINET S2. It is only effective if C8.3.4 = Parameters.

Indication	Description
0 = Reserved	
1 = 128.0.0.0	Subnet mask.
2 = 192.0.0.0	Subnet mask.
3 = 224.0.0.0	Subnet mask.
4 = 240.0.0.0	Subnet mask.
5 = 248.0.0.0	Subnet mask.
6 = 252.0.0.0	Subnet mask.
7 = 254.0.0.0	Subnet mask.
8 = 255.0.0.0	Subnet mask.
9 = 255.128.0.0	Subnet mask.
10 = 255.192.0.0	Subnet mask.
11 = 255.224.0.0	Subnet mask.
12 = 255.240.0.0	Subnet mask.
13 = 255.248.0.0	Subnet mask.
14 = 255.252.0.0	Subnet mask.
15 = 255.254.0.0	Subnet mask.
16 = 255.255.0.0	Subnet mask.
17 = 255.255.128.0	Subnet mask.
18 = 255.255.192.0	Subnet mask.
19 = 255.255.224.0	Subnet mask.
20 = 255.255.240.0	Subnet mask.
21 = 255.255.248.0	Subnet mask.
22 = 255.255.252.0	Subnet mask.
23 = 255.255.254.0	Subnet mask.
24 = 255.255.255.0	Subnet mask. Factory setting.
25 = 255.255.255.128	Subnet mask.
26 = 255.255.255.192	Subnet mask.
27 = 255.255.255.224	Subnet mask.
28 = 255.255.255.240	Subnet mask.
29 = 255.255.255.248	Subnet mask.
30 = 255.255.255.252	Subnet mask.
31 = 255.255.255.254	Subnet mask.



**NOTE!**

After changing this configuration, for the modification to be effective, the equipment must be turned off and then turned on again, or the configurations must be updated through C8.3.1.

## C CONFIGURATIONS

### C8.3 Anybus-CC

#### C8.3.7 Gateway

**Range:** 0.0.0.0 ... 255.255.255.255 **Default:** 0.0.0.0  
**Properties:**

#### Description:

It allows programming the IP address of the standard gateway used by the module Anybus-CC EtherNet/IP, Modbus TCP, PROFINET IO or PROFINET S2. It is only effective if C8.3.4 = Parameters.



#### NOTE!

After changing this configuration, for the modification to be effective, the equipment must be turned off and then turned on again, or the configurations must be updated through C8.3.1.

#### C8.3.10 Off Line Error

Protection against interruption in the communication with the network master.

If for some reason there is an interruption in the communication between the product and the network master, a communication error will be indicated, alarm A129 or fault F129 will be shown on the HMI, depending on the programming of C8.3.10.1, and the action programmed in C8.3.10.2 will be executed.

It only occurs after the equipment is online. This error is generated for the modules Anybus-CC DeviceNet, EtherNet/IP, Profibus DP and PROFINET.

#### C8.3.10 Off Line Error

##### C8.3.10.1 Mode

**Range:** 0 ... 2 **Default:** 2  
**Properties:**

#### Description:

It allows configuring the tripping mode of the protection against interruption in the communication with the network master.

Indication	Description
0 = Inactive	No tripping.
1 = Fault F129	Trips as fault. Disables the motor.
2 = Alarm A129	Trips as alarm. Action described in C8.3.10.2.

#### C8.3.10 Off Line Error

##### C8.3.10.2 Alarm Action

**Range:** 0 ... 4 **Default:** 2  
**Properties:**

#### Description:

Action for the Anybus-CC Offline communication alarm.

The actions described in this parameter are executed through the writing of the respective bits in the control word of the SLOT to which the accessory Anybus-CC DeviceNet, EtherNet/IP, Profibus DP or PROFINET is connected. Thus, for the commands to be effective, the equipment must be programmed to be controlled by the network interface used. This programming is done through menu C8.3.10.

Indication	Description
0 = Indicates Only	No action is taken; the equipment remains in the current state.
1 = Ramp Stop	The stop by ramp command is executed, and the motor stops according to the programmed deceleration ramp.
2 = General Disable	The equipment is general disabled, and the motor stops by inertia.
3 = Change to LOC	The equipment is commanded to local mode.
4 = Change to REM	The equipment is commanded to remote mode.



**NOTE!**

The alarm action will only have a function if the error tripping mode C8.3.10.1 is programmed for Alarm A129.

**C8.3 Anybus-CC**

**C8.3.11 Web Server Config**

**Range:** 0 ... 1

**Default:** 0

**Properties:**

**Description:**

It allows enabling/disabling the web server to limit the soft-starter exposure over the network.

Indication	Description
0 = Disabled	Protocol disabled.
1 = Enabled	Protocol enabled.



**NOTE!**

After changing this configuration, for the modification to be effective, the equipment must be turned off and then turned on again, or the configurations must be updated through C8.3.1.

## 6 OPERATION IN THE ETHERNET/IP NETWORK

### 6.1 CYCLIC DATA

Cyclic data is the data normally used for status monitoring and equipment control. For EtherNet/IP protocol, the interface supports an I/O connection that allows communication up to 50 input words and 20 output words.

It is necessary the configuration to be made both at the slave and master.

#### 6.1.1 Input words

The SSW900 soft-starter has a reading area with 50 16-bit words available for cyclic data exchange of communication networks. The data available in the reading area (Input) is sent to the master of the network. This area is shared between the two Slots.

To map an object in the reading area, follow the steps below.

1. Configure parameter C8.1.1.1 (Slot 1) or C8.1.1.3 (Slot 2). Those parameters indicate which of the reading words starts the input area for the specific Slot.
2. Configure on parameter C8.1.1.2 (Slot 1) or C8.1.1.4 (Slot 2) the quantity of input words which must be transmitted via network.
3. Parameters C8.1.1.5 to C8.1.1.54 enable to configure the data that must be provided on the reading words. Those parameters must contain the network addresses (Net Id) of the data that must be transmitted on the respective reading words. The Net Id list is available on the table 10.2. Consider the size of each parameter mentioned in this list when programming each word.

#### Example

The example below presents a configuration for Slot 2. Considering the following parameters to be mapped:

- S3.1.3.1 Status Word SSW.
- S1.2.4 Main Line Voltage Average.
- S1.1.4 Current Average.
- S1.5.4 Output Power & P.F. P. F..

Searching parameter information on the table 10.2:

Mapped Parameter	Net Id	Size	Qty Mapped Words	Example Value
S3.1.3.1 Status Word SSW	680	16bit	1	99
S1.2.4 Main Line Voltage Average	4	16bit	1	2186 (218.6 V)
S1.1.4 Current Average	24	32bit	2	23 (2.3 A)
S1.5.4 Output Power & P.F. P. F.	8	8bit	1	14 (0.14)

Therefore, the configuration must be performed as shown below:

1. C8.1.1.3 Data Read Slot 2 1st Word = 26 → first word transmitted via network is the word #26.
2. C8.1.1.4 Data Read Slot 2 Quantity = 5 → sum of the column “Qty mapped words”.
3. Table 6.1 presents the configuration parameters of the words and the content of the reading words.

**Table 6.1:** Example of configuration of the writing words.

Configuration Parameter	Mapped Parameter	Net Id	Input Area Value
C8.1.1.30 Data Read Word #26	S3.1.3.1	680	0063h
C8.1.1.31 Data Read Word #27	S1.2.4	4	088Ah
C8.1.1.32 Data Read Word #28	S1.1.4	24	0017h (S1.1.4 low word)
C8.1.1.33 Data Read Word #29	S1.1.4	24	0000h (S1.1.4 high word)
C8.1.1.34 Data Read Word #30	S1.5.4	8	000Eh



**NOTE!**

- Mapping of invalid parameters or not available will return zero value.
- The data is transmitted as an integer value, without the indication of the decimal places.
- To obtain the network address (Net Id) of the parameters and the number of decimal places, refer to the item 10.

## 6.1.2 Output Words

The SSW900 soft-starter has a writing area with 20 16-bit words available for cyclic data exchange of communication networks. The data available in the write area (Output) is received from the network master. This area is shared between the two Slots.

To map an object in the writing area, follow the steps below.

1. Configure parameter C8.1.2.1 (Slot 1) or C8.1.2.3 (Slot 2). Those parameters indicate which of the writing words starts the output area for the specific Slot.
2. Configure on parameter C8.1.2.2 (Slot 1) or C8.1.2.4 (Slot 2) the quantity of reading words which must be transmitted via network.
3. Parameters C8.1.2.6 to C8.1.2.25 enable to configure the data that must be provided on the writing words. Those parameters must contain the network address (Net Id) of the data that must be transmitted on the respective writing words. The Net Id list is available on the table 10.2. Consider the size of each parameter mentioned in list when programming each word.

### Exemplo

The example below presents a configuration for Slot 1. Considering the following parameters to be mapped:

- S5.2.5 Command Word Slot1.
- S5.3.1 Value for Outputs DO Value.
- S5.3.2.1 Value for AO AO in 10 bits.

Searching parameter information on the table 10.2:

Mapped Parameter	Net Id	Size	Qty Mapped Words	Example Value
S5.2.5 Command Word Slot1	685	16bit	1	19 = 0013h
S5.3.1 Value for Outputs DO Value	695	16bit	1	7 = 0007h
S5.3.2.1 Value for AO AO in 10 bits	696	16bit	1	1023 = 03FFh

Therefore, the configuration must be performed as shown below:

1. C8.1.2.1 Data Write Slot 1 1st Word = 1 → first word transmitted via network is the word #1.
2. C8.1.2.2 Data Write Slot 1 Quantity = 3 → sum of column “Qty mapped words”.
3. The table 6.2 presents the configuration parameters of the words and the content of the writing words.

*Table 6.2: Example of configuration of the writing words.*

Configuration Parameter	Mapped Parameter	Net Id	Output Area Value
C8.1.2.6 Data Write Word #1	S5.2.5	685	0013h
C8.1.2.7 Data Write Word #2	S5.3.1	695	0007h
C8.1.2.8 Data Write Word #3	S5.3.2.1	696	03FFh





**NOTE!**

- Mapping of readonly parameters (status, diagnostics) or invalid parameters will have no effect.
- Parameters that have the property *Stopped*, when mapped on the writing words, are only changed when the motor is stopped.
- The parameters written using these words are not saved in non-volatile memory. Thus, if the equipment is turned off and back on, these parameters will return to their original value.
- The data is transmitted as an integer value, without the indication of the decimal places.
- To obtain the network address (Net Id) of the parameters, refer to the item 10.

## 6.2 ACYCLIC DATA

In addition to the cyclic data, the interface also provides acyclic data via *explicit messaging*. Using this type of communication, you can access any equipment parameter. Access to this type of data is commonly done using instructions for reading or writing data, which should indicate the class, instance, and attribute to the desired parameter. The Manufacturer Specific Class (A2h) describes how to address the parameters for SSW900 soft-starter.

## 6.3 EDS FILE

Each device on an EtherNet/IP network has an EDS configuration file, which contains information about the device functions on the network. This file is used by a master or configuration software to program devices present at EtherNet/IP network.

The EDS file is available from WEG website (<http://www.weg.net>). It is important to note if the EDS configuration file is compatible with the firmware version of the SSW900 soft-starter.

## 6.4 MODBUS TCP CONNECTIONS

The accessory for EtherNet/IP also provides up to 2 Modbus TCP connections. These connections can be used for parameterization.

## 6.5 SUPPORTED OBJECT CLASSES

Any EtherNet/IP equipment is modeled as a set of objects. The objects are responsible for defining the function that each device will have. The following sections present detailed information about these object classes.

### 6.5.1 Identity Class (01h)

Provides general information about the device identity such as VendorID, Product Name, Serial Number, etc.. The following attributes are implemented:

*Table 6.3: Identity Class instance attributes*

Attribute	Method	Name	Default	Description
1	GET	Vendor ID	355h	Manufacturer identifier.
2	GET	Device Type	2bh	Product Type.
3	GET	Product Code	1300h	Product Code.
4	GET	Revision		Firmware revision.
5	GET	Status		Device status.
6	GET	Serial Number		Serial Number.
7	GET	Product Name	SSW900 Anybus-CC	Product name.

# OPERATION IN THE ETHERNET/IP NETWORK

## 6.5.2 Message Router Class (02h)

Provides information on the explicit message router object. This class does not have any attribute implemented in the SSW900.

## 6.5.3 Assembly Class (04h)

This class is responsible for grouping several attributes in only one connection. Only the attribute Data (3) is implemented in the SSW900.

**Table 6.4:** Assembly class instance attributes

Attribute	Method	Name	Description
3	GET	Data	Data contained in the assembly object.

The Assembly class contains the following instances in the SSW900:

**Table 6.5:** Assembly class instances

Instance	Size	Description
100	up to 50 bytes	Producing Instance.
150	up to 100 bytes	Consuming Instance.

## 6.5.4 DLR Class (47h)

The following attributes have been implemented:

**Table 6.6:** DLR Class attributes

Attribute	Method	Name	Min/Max	Description
1	GET	Revision	1 - 65535	Revision of the DLR Object Class Definition upon which the implementation is based.

**Table 6.7:** DLR Class instance attributes

Attribute	Method	Name	Min/Max	Default	Description
1	GET	Network Topology	0 - 1	-	0 = Linear 1 = Ring
2	GET	Network Status	0 - 4	-	0 = Normal 1 = Ring Fault 2 = Unexpected Loop Detected 3 = Partial Network Fault 4 = Rapid Fault/Restore Cycle
10	GET	Active Supervisor Address	-	-	
12	GET	Capability Flags	-	81h	Announce-based ring node, supports the Flush_Tables frame

## 6.5.5 QoS Class (48h)

The following attributes have been implemented:

**Table 6.8:** QoS Class attributes

Attribute	Method	Name	Min/Max	Description
1	GET	Revision	1 - 65535	Revision of the QoS Object Class Definition upon which the implementation is based.

**Table 6.9: QoS Class instance attributes**

Attribute	Method	Name	Min/Max	Default	Description
1	SET	802.1Q Tag Enable	0 - 1	0	0 = Disabled 1 = Enabled
4	SET	DSCP Urgent	-	55	CIP transport class 1 messages with priority Urgent
5	SET	DSCP Scheduled	-	47	CIP transport class 1 messages with priority Scheduled
6	SET	DSCP High	-	43	CIP transport class 1 messages with priority High
7	SET	DSCP Low	-	31	CIP transport class 1 messages with priority Low
8	SET	DSCP Explicit	-	27	CIP UCMM and CIP class 3

## 6.5.6 TCP/IP Interface Class (F5h)

The following attributes have been implemented:

**Table 6.10: TCP/IP Interface Class attributes**

Attribute	Method	Name	Min/Max	Description
1	GET	Revision	1 - 65535	Revision of the TCP/IP Interface Object Class Definition upon which the implementation is based.

**Table 6.11: TCP/IP Interface Class instance attributes**

Attribute	Method	Name	Min/Max	Default	Description
1	GET	Status	-	-	
2	GET	Configuration Capability	-	-	
3	GET/SET	Configuration Control	-	-	
4	GET	Physical Link Object	-	-	
5	GET/SET	Interface Configuration	-	-	
6	GET/SET	Host Name	-	-	
8	GET/SET	TTL Value	-	-	
9	GET/SET	Mcast Config	-	-	
10	SET	Select Acq	-	-	
11	SET	Last Conflict Detected	-	-	
12	SET	EIP QuickConnect	-	-	

## 6.5.7 Ethernet Link Class (F6h)

The following attributes have been implemented:

**Table 6.12: Ethernet Link Class attributes**

Attribute	Method	Name	Min/Max	Description
1	GET	Revision	1 - 65535	Revision of the Ethernet Link Object Class Definition upon which the implementation is based.
2	GET	Max Instance	1 - 65535	Maximum instance number.
3	GET	Number of instances	1 - 65535	

**Table 6.13:** Ethernet Link Class instance attributes

Attribute	Method	Name	Min/Max	Default	Description
1	GET	Interface Speed	-	-	
2	GET	Interface Flags	-	-	
3	GET	Physical Address	-	-	
4	GET	Interface Counters	-	-	
5	GET	Media Counters	-	-	
6	GET/SET	Interface Control	-	-	
7	GET	Interface Type	-	-	
8	GET	Interface State	-	-	
9	GET/SET	Admin State	-	-	
10	GET	Interface Label	-	-	

### 6.5.8 Manufacturer Specific Class (A2h)

The Manufacturer Specific Class is used for mapping all SSW900 parameters. This class allows the user to read from and write to any parameter through the network. The Manufacturer Specific Class use EtherNet/IP explicit messages.

**Table 6.14:** Manufacturer Specific Class attributes

Attribute	Method	Name	Min/Max	Description
1	GET	Revision	1 - 65535	Revision of the Manufacturer Specific Class definition upon which the implementation is based.
2	GET	Max Instance	1 - 65535	Maximum instance number.
3	GET	Number of instances	1 - 65535	

**Table 6.15:** Manufacturer Specific Class instance attributes

Attribute	Method	Name	Min/Max	Description
5	GET/SET	Value	0 - 65535	



**NOTE!**

- For instances of this class, the SSW900 uses only attribute 5.
- The data is transmitted as an integer value, without the indication of the decimal places.
- To obtain the network address (Net Id) used to identify the instance number of the parameters, refer to the item 10.

## 7 STARTUP GUIDE

The main steps to start up the SSW900 soft-starter in EtherNet/IP network are described below. These steps represent an example of use. Check out the specific chapters for details on the indicated steps.

### 7.1 INSTALLING THE ACCESSORY

1. Install the communication accessory, as indicated in the installation guide supplied with the accessory.
2. With the module installed, during the recognition stage, the MS and NS LEDs test routine will be performed. After this stage, the MS LED must turn on in green.
3. Observe the content of parameter S5.5.1. Check if the module was recognized. The detection is done automatically and does not require the user's intervention.
4. Connect the cables, considering the recommended instructions in network installation, as described in item 3.5:
  - Use shielded cable.
  - Properly ground network equipment.
  - Avoid laying communication cables next to power cables.

### 7.2 CONFIGURING THE EQUIPMENT

1. Follow the recommendations described in the user manual to program the device parameters related to the motor parameterization, desired functions for the I/O signals, etc.
2. Program the command sources as desired for the application in menu C3.
3. Configure communication parameters, such as DHCP, IP address, communication rate, etc. in C8.3.
4. Program the desired action for the equipment in case of communication fault in C8.3.10.
5. Define which data will be read and written at soft-starter SSW900 using menu C8.1. Among the main parameters that can be used to control the device, we can mention:
  - S3.1.3.1 Status Word SSW (read).
  - S5.2.5 Command Word Slot1 (write).
  - S5.2.6 Command Word Slot2 (write).
6. Once the parameters are set, if any of the parameters described in the previous steps were changed, the equipment must be powered off and on again, or an update must be performed by C8.3.1.

### 7.3 CONFIGURING THE MASTER

The way the network configuration is done depends greatly on the used client and the configuration tool. It is essential to know the tools used to perform this activity. In general, the following steps are necessary to perform the network configuration.

1. Load the EDS file<sup>1</sup> to the list of devices in the network configuration tool.
2. Select SSW900 soft-starter from the available list of devices on the network configuration tool. This can be done manually or automatically, if allowed by the tool. The EtherNet/IP module is described in the network as "Generic Ethernet Module".
3. For the master configuration, in addition to the IP address used by the EtherNet/IP module, you must indicate the number of instances of I/O and the amount of data exchanged with the master in each instance. For the communication module for EtherNet/IP, the following values must be programmed:
  - Input instance: 100

---

<sup>1</sup>The EDS file is available from WEG website (<http://www.weg.net>). It is important to note if the EDS configuration file is compatible with the firmware version of the SSW900 soft-starter.

- Output instance: 150

Once configured, the NS LED will be on in green. It is in this condition that cyclic data exchange effectively occurs between the slave and the master of the network.

### 7.4 COMMUNICATION STATUS

Once the network is assembled and the master programmed, it is possible to use the LEDs and parameters of the equipment to identify some status related to the communication.

- The MS, NS and Link LEDs provide information about the status of the interface and communication.
- The parameter S5.5.2 indicates the status of communication between the device and the network master.

The master of the network must also supply information about the communication with the slave.

### 7.5 OPERATION USING PROCESS DATA

Once the communication is established, the data mapped in the I/O area is automatically updated between master and slave. Among the main parameters that can be used to control the device, we can mention:

- S3.1.3.1 Status Word SSW.
- S5.2.5 Command Word Slot1.
- S5.2.6 Command Word Slot2.

It is important to know these parameters to program the master as desired for the application.

### 7.6 ACCESS TO PARAMETERS – ACYCLIC MESSAGES

Besides the I/O data (cyclic) communication, the EtherNet/IP protocol also defines a kind of acyclic telegram (*explicit messages*), used especially in asynchronous tasks, such as parameter setting and configuration of the equipment.

The EDS file provides the full parameter list of the equipment, which can be accessed via *explicit messages*. The item 6.2 describes how to address the parameters of the soft-starter SSW900 via acyclic messages.

## 8 WEB SERVER

Besides the communication protocol, the Ethernet interface also provides a WEB server with a simple HTML page to access SSW900 soft-starter data. If the IP address is known, you can use a web browser by typing the IP address in the browser address bar, and it will present a web page with links to interface settings and device data.

**Anybus-CC EtherNet/IP (2-Port)**  
**Network configuration**

IP Configuration	
IP address:	192.168.0.10
Subnet mask:	255.255.255.0
Gateway:	0.0.0.0
Host name:	
Domain name:	
DNS1:	0.0.0.0
DNS2:	0.0.0.0
DHCP:	<input type="checkbox"/>
<a href="#">Store settings</a>	

SMTP Settings	
SMTP Server:	
SMTP User:	
SMTP Pswd:	
<a href="#">Store settings</a>	

Ethernet Configuration	
Comm 1:	Auto
Comm 2:	Auto
<a href="#">Store settings</a>	

▶ Main ▶ Network interface

*Figure 8.1: WEB page for interface configuration*

In the interface settings, it presents several fields for programming the IP address, subnet, DHCP, among others. The parameter list of the equipment can also be accessed through the WEB browser via "Parameter Data" link. This list is presented in a simplified format, with only the integer values, with no indication of decimal places.



**NOTE!**

For security reasons, access to the WEB server is disabled by default and it can be enabled using the parameter C8.3.11.

## 9 FAULTS AND ALARMS

Fault/Alarm	Description	Possible Causes
<b>F129/A129:</b> Anybus Offline	It indicates communication interruption of Anybus-CC accessory with network master.	<ul style="list-style-type: none"> <li>■ The master PLC went to the idle or programming state.</li> <li>■ Programming error, the number of programmed I/O words in the slave differs from the number adjusted in the master.</li> <li>■ Lose of communication with the master (broken cable, disconnected connector etc.).</li> </ul>
<b>F130:</b> Anybus Access Fault	It indicates access error to the Anybus-CC communication module. It actuates when the SSW cannot exchange data with the Anybus-CC accessory, when the Anybus module identifies some internal fault, or when there is a hardware incompatibility. In order to remove this fault, it is necessary to power the SSW off and on again.	<ul style="list-style-type: none"> <li>■ Check that the accessory is properly fitted.</li> <li>■ Check that the equipment firmware version supports the Anybus accessory.</li> <li>■ Hardware errors due to improper handling or installation of the accessory, for example, may cause this error.</li> <li>■ If possible, carry out tests by replacing the communication accessory.</li> </ul>
<b>F132/A132:</b> Anybus Idle	It indicates that network master changed to idle or programming state.	<ul style="list-style-type: none"> <li>■ How to detect this condition depends on the communication protocol and the network master.</li> </ul>



## 10 QUICK REFERENCES

### 10.1 PARAMETER STRUCTURE

Level 1	Level 2	Level 3	Page
S Status	S1 Measurements	S1.1 Current	10-3
		S1.2 Main Line Voltage	
		S1.3 Output Voltage	
		S1.4 SCR Blocking Voltage	
		S1.5 Output Power & P.F.	
		S1.6 P.L.L.	
		S1.7 Motor Torque	
		S1.8 Control Voltage	
	S2 I/O	S2.1 Digital	10-4
		S2.2 Analog Output	
	S3 SSW900	S3.1 SSW Status	10-4
		S3.2 Software Version	
		S3.3 SSW Model	
		S3.4 Fan Status	
		S3.5 Accessories	
	S4 Temperatures	S4.1 SCRs Temperature	10-7
		S4.2 Thermal Class Status	
		S4.3 Motor Temperature	
S5 Communications	S5.1 Status Word	10-7	
	S5.2 Command Word		
	S5.3 Value for Outputs		
	S5.4 RS485 Serial		
	S5.5 Anybus-CC		
	S5.6 Configuration Mode		
	S5.7 CANopen/DeviceNet		
	S5.8 Ethernet		
	S5.9 Bluetooth		
S6 SoftPLC	S6.1 SoftPLC Status	10-12	
	S6.2 Scan Cycle Time		
	S6.3 Value for Outputs		
	S6.4 Parameter		
D Diagnostics	D1 Fault	D1.1 Actual	10-14
		D1.2 Fault History	
	D2 Alarms	D2.1 Actual	10-14
		D2.2 Alarm History	
	D3 Events	10-14	
	D4 Motor On		D4.1 Start Current
			D4.2 Real Start Time
			D4.3 Current Full Voltage
			D4.4 Main Line Voltage
			D4.5 Main Line Frequency
	D4.6 kWh Counter		
	D4.7 Number Start		
	D5 Temperatures	D5.1 SCRs Maximum	10-14
		D5.2 Motor Maximum	
	D6 Hours Control	10-15	
	D7 Changed Parameters	10-15	

## QUICK REFERENCES

Level 1	Level 2	Level 3	Page	
C Configurations	C1	Starting and Stopping	10-15	
	C2	Nominal Motor Data	10-16	
	C3	LOC/REM Selection	10-16	
	C4	I/O	10-16	
			C4.1 Digital Inputs	
			C4.2 Digital Outputs	
			C4.3 Analog Output	
	C5	Protections	10-20	
			C5.1 Voltage Protections	
			C5.2 Current Protections	
			C5.3 Torque Protections	
			C5.4 Power Protections	
			C5.5 Phase Sequence	
			C5.6 Bypass Protections	
			C5.7 Time Protections	
			C5.8 Motor Thermal Protection	
		C5.9 Motor Thermal Class		
		C5.10 SSW Short Circuit		
		C5.11 Fault Auto-Reset		
C6	HMI	10-27		
		C6.1 Password		
		C6.2 Language		
		C6.3 Date and Time		
		C6.4 Main Screen		
		C6.5 LCD Display		
		C6.6 Communication Timeout		
C7	Special Functions	10-28		
		C7.1 Forward/Reverse		
		C7.2 Kick Start		
		C7.3 Jog		
		C7.4 Braking		
C8	Communications	10-28		
		C8.1 I/O Data		
		C8.2 RS485 Serial		
		C8.3 Anybus-CC		
		C8.4 CANopen/DeviceNet		
		C8.5 Ethernet		
		C8.6 Bluetooth		
C9	SSW900	10-35		
		C9.1 Nominal Data		
		C9.2 Types of Connections		
		C9.3 Accessories Config.		
		C9.4 Fan Configuration		
C10	Load / Save Parameters	10-37		
		C10.1 Load / Save User		
		C10.2 Copy Function HMI		
		C10.3 Erase Diagnostics		
		C10.4 Load Factory Default		
		C10.5 Save Changed Param.		
C11	SoftPLC	10-38		
		C11.3 Parameter		
A Assistant	A1 Oriented Start-up	10-39		

## 10.2 PARAMETERS

**Table 10.2:** Characteristics of the parameters for the communication protocol

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
<b>S1 Status/Measurements</b>								
S1.1	Current							
S1.1.1	R Phase	0.0 to 14544.0 A	1	26	UDINT	26	32bit	2
S1.1.2	S Phase	0.0 to 14544.0 A	1	28	UDINT	28	32bit	2
S1.1.3	T Phase	0.0 to 14544.0 A	1	30	UDINT	30	32bit	2
S1.1.4	Average	0.0 to 14544.0 A	1	24	UDINT	24	32bit	2
S1.1.5	Motor %In	0.0 to 999.9 %	1	2	UINT	2	16bit	1
S1.1.6	SSW %In	0.0 to 999.9 %	1	1	UINT	1	16bit	1
S1.2	Main Line Voltage							
S1.2.1	R-S Line	0.0 to 999.9 V	1	33	UINT	33	16bit	1
S1.2.2	S-T Line	0.0 to 999.9 V	1	34	UINT	34	16bit	1
S1.2.3	T-R Line	0.0 to 999.9 V	1	35	UINT	35	16bit	1
S1.2.4	Average	0.0 to 999.9 V	1	4	UINT	4	16bit	1
S1.2.5	Motor %Vn	0.0 to 999.9 %	1	3	UINT	3	16bit	1
S1.2.6	SSW %Vn	0.0 to 999.9 %	1	5	UINT	5	16bit	1
S1.3	Output Voltage							
S1.3.1	Average	0.0 to 999.9 V	1	7	UINT	7	16bit	1
S1.3.2	Motor %Vn	0.0 to 999.9 %	1	6	UINT	6	16bit	1
S1.4	SCR Blocking Voltage							
S1.4.1	R-U Blocking	0.0 to 999.9 V	1	21	UINT	21	16bit	1
S1.4.2	S-V Blocking	0.0 to 999.9 V	1	22	UINT	22	16bit	1
S1.4.3	T-W Blocking	0.0 to 999.9 V	1	23	UINT	23	16bit	1
S1.5	Output Power & P.F.							
S1.5.1	Active	0.0 to 11700.0 kW	1	10	UDINT	10	32bit	2
S1.5.2	Apparent	0.0 to 11700.0 kVA	1	12	UDINT	12	32bit	2
S1.5.3	Reactive	0.0 to 11700.0 kVA <sub>r</sub>	1	14	UDINT	14	32bit	2
S1.5.4	P. F.	0.00 to 1.00	2	8	USINT	8	8bit	1
S1.6	P.L.L.							
S1.6.1	Status	0 = Off 1 = Ok		16	USINT	16	enum	1
S1.6.2	Frequency	0.0 to 99.9 Hz	1	17	UINT	17	16bit	1
S1.6.3	Sequence	0 = Invalid 1 = RST / 123 2 = RTS / 132		18	USINT	18	enum	1
S1.7	Motor Torque							
S1.7.1	Motor %Tn	0.0 to 999.9 %	1	9	UINT	9	16bit	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
S1.8	Control Voltage							
S1.8.1	Input	0.0 to 999.9 V	1	71	UINT	71	16bit	1
S1.8.2	+5V	0.00 to 9.99 V	2	72	UINT	72	16bit	1
S1.8.3	+12V	0.0 to 99.9 V	1	73	UINT	73	16bit	1
S1.8.4	+Vbat	0.00 to 9.99 V	2	75	UINT	75	16bit	1
S1.8.5	+48V	0.0 to 99.9 V	1	76	UINT	76	16bit	1
S2 Status\I/O								
S2.1	Digital							
S2.1.1	Inputs	Bit 0 = DI1 Bit 1 = DI2 Bit 2 = DI3 Bit 3 = DI4 Bit 4 = DI5 Bit 5 = DI6 Bit 6 ... 15 = Reserved		677	WORD	677	16bit	1
S2.1.2	Outputs	Bit 0 = DO1 Bit 1 = DO2 Bit 2 = DO3 Bit 3 ... 15 = Reserved		678	WORD	678	16bit	1
S2.2	Analog Output							
S2.2.1	Percent	0.00 to 100.00 %	2	673	UINT	673	16bit	1
S2.2.2	Current	0.000 to 20.000 mA	3	674	UINT	674	16bit	1
S2.2.3	Voltage	0.000 to 10.000 V	3	675	UINT	675	16bit	1
S2.2.4	10 bits	0 to 1023	0	676	UINT	676	16bit	1
S3 Status\SSW900								
S3.1	SSW Status							
S3.1.1	Actual	0 = Ready 1 = Initial Test 2 = Fault 3 = Ramp Up 4 = Full Voltage 5 = Bypass 6 = Reserved 7 = Ramp Down 8 = Braking 9 = FWD/REV 10 = Jog 11 = Start Delay		679	USINT	679	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
S3.1.2	Active Command Source	12 = Re-start Delay 13 = General Disabled 14 = Configuration  0 = HMI Keys LOC 1 = HMI Keys REM 2 = Dlx LOC 3 = Dlx REM 4 = USB LOC 5 = USB REM 6 = SoftPLC LOC 7 = SoftPLC REM 8 = Slot 1 LOC 9 = Slot 1 REM 10 = Slot 2 LOC 11 = Slot 2 REM		232	USINT	232	enum	1
S3.1.3	Status Word							
S3.1.3.1	SSW	Bit 0 = Running Bit 1 = Gener. Enabled Bit 2 = JOG Bit 3 = Initial Test Bit 4 = Ramp Up Bit 5 = Full Voltage Bit 6 = Bypass Bit 7 = Ramp Down Bit 8 = Remote Bit 9 = Braking Bit 10 = FWD/REV Bit 11 = Reverse Bit 12 = Ton Bit 13 = Toff Bit 14 = Alarm Bit 15 = Fault		680	WORD	680	16bit	1
S3.1.4	Configuration Mode							
S3.1.4.1	Status	Bit 0 = System Initialization Bit 1 = Firmware Download Bit 2 = Oriented Start-Up Bit 3 = Incompatible Bit 4 = Reset Needs		692	WORD	692	16bit	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		Bit 5 = Copy HMI Bit 6 = Test Mode Bit 7 ... 15 = Reserved						
S3.2	Software Version							
S3.2.1	Package	0.00 to 99.99	2	328	UINT	328	16bit	1
S3.2.2	Details							
S3.2.2.1	Control 1 V	0.00 to 99.99	2	330	UINT	330	16bit	1
S3.2.2.2	Control 1 rev.	-32768 to 32767	0	327	INT	327	s16bit	1
S3.2.2.3	Bootloader V	0.00 to 99.99	2	329	UINT	329	16bit	1
S3.2.2.4	Bootloader rev.	-32768 to 32767	0	323	INT	323	s16bit	1
S3.2.2.5	HMI rev.	-32768 to 32767	0	322	INT	322	s16bit	1
S3.2.2.6	Control 2 V	0.00 to 99.99	2	331	UINT	331	16bit	1
S3.2.2.7	Control 2 rev.	-32768 to 32767	0	326	INT	326	s16bit	1
S3.2.2.8	Accessory 1 V	0.00 to 99.99	2	333	UINT	333	16bit	1
S3.2.2.9	Accessory 1 rev.	-32768 to 32767	0	324	INT	324	s16bit	1
S3.2.2.10	Accessory 2 V	0.00 to 99.99	2	334	UINT	334	16bit	1
S3.2.2.11	Accessory 2 rev.	-32768 to 32767	0	325	INT	325	s16bit	1
S3.3	SSW Model							
S3.3.1	Current	0 = 10 to 30 A 1 = 45 to 105 A 2 = 130 to 200 A 3 = 255 to 412 A 4 = 480 to 670 A 5 = 820 to 950 A 6 = 1100 to 1400 A		294	USINT	294	enum	1
S3.3.2	Voltage	0 = 220 to 575 V 1 = 380 to 690 V		296	USINT	296	enum	1
S3.3.3	Control Voltage	0 = 110 to 240 V 1 = 110 to 130 V 2 = 220 to 240 V 3 = 24 V		297	USINT	297	enum	1
S3.3.4	Serial Number	0 to 4294967295	0	298	UDINT	298	32bit	2
S3.4	Fan Status							
S3.4.1	Actual	0 = Off 1 = On		293	USINT	293	enum	1
S3.5	Accessories							
S3.5.1	Slot 1			335	USINT	335	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		0 = Without 1 = Anybus-CC 2 = RS-485 3 = PT100 4 = I/Os Exp. 5 = Profibus 6 = CAN 7 = Ethernet 8 = External Current Acqu.						
S3.5.2	Slot 2	0 = Without 1 = Anybus-CC 2 = RS-485 3 = PT100 4 = I/Os Exp. 5 = Profibus 6 = CAN 7 = Ethernet 8 = External Current Acqu.		336	USINT	336	enum	1
<b>S4 Status\Temperatures</b>								
S4.1	SCRs Temperature							
S4.1.1	Actual	-22 to 260 °C	0	60	INT	60	s16bit	1
S4.2	Thermal Class Status							
S4.2.1	Of Maximum	0.0 to 100.0 %	1	50	UINT	50	16bit	1
S4.3	Motor Temperature							
S4.3.1	Channel 1	-20 to 260 °C	0	63	INT	63	s16bit	1
S4.3.2	Channel 2	-20 to 260 °C	0	64	INT	64	s16bit	1
S4.3.3	Channel 3	-20 to 260 °C	0	65	INT	65	s16bit	1
S4.3.4	Channel 4	-20 to 260 °C	0	66	INT	66	s16bit	1
S4.3.5	Channel 5	-20 to 260 °C	0	67	INT	67	s16bit	1
S4.3.6	Channel 6	-20 to 260 °C	0	68	INT	68	s16bit	1
<b>S5 Status\Communications</b>								
S5.1	Status Word							
S5.1.1	SSW	Bit 0 = Running Bit 1 = Gener. Enabled Bit 2 = JOG Bit 3 = Initial Test Bit 4 = Ramp Up Bit 5 = Full Voltage Bit 6 = Bypass		680	WORD	680	16bit	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		Bit 7 = Ramp Down Bit 8 = Remote Bit 9 = Braking Bit 10 = FWD/REV Bit 11 = Reverse Bit 12 = Ton Bit 13 = Toff Bit 14 = Alarm Bit 15 = Fault						
S5.2	Command Word							
S5.2.1	Dlx	Bit 0 = Start/Stop Bit 1 = Gener. Enabled Bit 2 = JOG Bit 3 = FWD/REV Bit 4 = LOC/REM Bit 5 ... 6 = Reserved Bit 7 = Reset Bit 8 = Brake Bit 9 = Emergency Start Bit 10 ... 15 = Reserved		683	WORD	683	16bit	1
S5.2.2	HMI Key	Bit 0 = Start/Stop Bit 1 = Gener. Enabled Bit 2 = JOG Bit 3 = FWD/REV Bit 4 = LOC/REM Bit 5 ... 6 = Reserved Bit 7 = Reset Bit 8 ... 15 = Reserved		681	WORD	681	16bit	1
S5.2.3	USB	Bit 0 = Start/Stop Bit 1 = Gener. Enabled Bit 2 = JOG Bit 3 = FWD/REV Bit 4 = LOC/REM Bit 5 ... 6 = Reserved Bit 7 = Reset Bit 8 ... 15 = Reserved		682	WORD	682	16bit	1
S5.2.4	SoftPLC	Bit 0 = Start/Stop		684	WORD	684	16bit	1



Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		Bit 1 = Gener. Enabled Bit 2 = JOG Bit 3 = FWD/REV Bit 4 = LOC/REM Bit 5 ... 6 = Reserved Bit 7 = Reset Bit 8 ... 15 = Reserved						
S5.2.5	Slot1	Bit 0 = Start/Stop Bit 1 = Gener. Enabled Bit 2 = JOG Bit 3 = FWD/REV Bit 4 = LOC/REM Bit 5 ... 6 = Reserved Bit 7 = Reset Bit 8 ... 15 = Reserved		685	WORD	685	16bit	1
S5.2.6	Slot2	Bit 0 = Start/Stop Bit 1 = Gener. Enabled Bit 2 = JOG Bit 3 = FWD/REV Bit 4 = LOC/REM Bit 5 ... 6 = Reserved Bit 7 = Reset Bit 8 ... 15 = Reserved		686	WORD	686	16bit	1
S5.3	Value for Outputs							
S5.3.1	DO Value	Bit 0 = DO1 Bit 1 = DO2 Bit 2 = DO3 Bit 3 ... 15 = Reserved		695	WORD	695	16bit	1
S5.3.2	Value for AO							
S5.3.2.1	AO in 10 bits	0 to 1023	0	696	UINT	696	16bit	1
S5.4	RS485 Serial							
S5.4.1	Interface Status	0 = Off 1 = On 2 = Timeout Error		735	USINT	735	enum	1
S5.4.2	Received Telegram	0 to 65535	0	736	UINT	736	16bit	1
S5.4.3	Transmitted Telegram	0 to 65535	0	737	UINT	737	16bit	1
S5.4.4	Telegram with Error	0 to 65535	0	738	UINT	738	16bit	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
S5.4.5	Reception Errors	0 to 65535	0	739	UINT	739	16bit	1
S5.5	Anybus-CC							
S5.5.1	Identification	0 = Disabled 1 ... 15 = Reserved 16 = Profibus DP 17 = DeviceNet 18 = Reserved 19 = EtherNet/IP 20 = Reserved 21 = Modbus TCP 22 = Reserved 23 = PROFINET IO 24 = PROFINET S2 25 = Reserved		750	USINT	750	enum	1
S5.5.2	Comm. Status	0 = Setup 1 = Init 2 = Wait Comm 3 = Idle 4 = Data Active 5 = Error 6 = Reserved 7 = Exception 8 = Access Error		751	USINT	751	enum	1
S5.6	Configuration Mode							
S5.6.1	Status	Bit 0 = System Initialization Bit 1 = Firmware Download Bit 2 = Oriented Start-Up Bit 3 = Incompatible Bit 4 = Reset Needs Bit 5 = Copy HMI Bit 6 = Test Mode Bit 7 ... 15 = Reserved		692	WORD	692	16bit	1
S5.6.2	Control	Bit 0 = Abort Startup Bit 1 ... 15 = Reserved		693	WORD	693	16bit	1
S5.7	CANopen/DeviceNet							
S5.7.1	CAN Controller Status	0 = Disabled		705	USINT	705	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		1 = Auto-baud 2 = CAN Enabled 3 = Warning 4 = Error Passive 5 = Bus Off 6 = No Bus Power						
S5.7.2	Received Telegram	0 to 65535	0	706	UINT	706	16bit	1
S5.7.3	Transmitted Telegram	0 to 65535	0	707	UINT	707	16bit	1
S5.7.4	Bus Off Counter	0 to 65535	0	708	UINT	708	16bit	1
S5.7.5	Lost Messages	0 to 65535	0	709	UINT	709	16bit	1
S5.7.6	CANopen Comm. Status	0 = Disabled 1 = Reserved 2 = Comm. Enabled 3 = ErrorCtrl.Enab 4 = Guarding Error 5 = HeartbeatError		721	USINT	721	enum	1
S5.7.7	CANopen Node State	0 = Disabled 1 = Initialization 2 = Stopped 3 = Operational 4 = PreOperational		722	USINT	722	enum	1
S5.7.8	DNet Network Status	0 = Offline 1 = OnLine,NotConn 2 = OnLine,Conn 3 = Conn.Timed-out 4 = Link Failure 5 = Auto-Baud		716	USINT	716	enum	1
S5.7.9	DeviceNet Master Status	0 = Run 1 = Idle		717	USINT	717	enum	1
S5.8	Ethernet							
S5.8.1	MBTCP: Communication Status	0 = Disabled 1 = No connection 2 = Connected 3 = Timeout Error		860	USINT	860	enum	1
S5.8.2	MBTCP: Active Connections	0 to 4	0	863	USINT	863	8bit	1
S5.8.3	EIP Master Status			869	USINT	869	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
S5.8.4	EIP Communication Status	0 = Run 1 = Idle		870	USINT	870	enum	1
S5.8.5	Interface Status	0 = Disabled 1 = No connection 2 = Connected 3 = Timeout in I/O Connection 4 = Duplicated IP		889	WORD	889	16bit	1
S5.8.6	Current IP Address	0.0.0.0 to 255.255.255.255		846	UDINT	846	ip_address	2
S5.9	Bluetooth							
<b>S6 Status\SoftPLC</b>								
S6.1	SoftPLC Status							
S6.1.1	Actual	0 = No Application 1 = Install. App. 2 = Incompat. App. 3 = App. Stopped 4 = App. Running		1100	USINT	1100	enum	1
S6.2	Scan Cycle Time							
S6.2.1	Actual	0 to 65535 ms	0	1102	UINT	1102	16bit	1
S6.3	Value for Outputs							
S6.3.1	DO Value	Bit 0 = DO1 Bit 1 = DO2 Bit 2 = DO3 Bit 3 ... 15 = Reserved		697	WORD	697	16bit	1
S6.3.2	AO Value							
S6.3.2.1	AO in 10 bits	0 to 1023	0	698	UINT	698	16bit	1
S6.4	Parameter							
S6.4.1	User #1	-10000 to 10000	0	1110	DINT	1110	s32bit	2
S6.4.2	User #2	-10000 to 10000	0	1112	DINT	1112	s32bit	2
S6.4.3	User #3	-10000 to 10000	0	1114	DINT	1114	s32bit	2
S6.4.4	User #4	-10000 to 10000	0	1116	DINT	1116	s32bit	2
S6.4.5	User #5	-10000 to 10000	0	1118	DINT	1118	s32bit	2
S6.4.6	User #6	-10000 to 10000	0	1120	DINT	1120	s32bit	2
S6.4.7	User #7	-10000 to 10000	0	1122	DINT	1122	s32bit	2
S6.4.8	User #8	-10000 to 10000	0	1124	DINT	1124	s32bit	2

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
S6.4.9	User #9	-10000 to 10000	0	1126	DINT	1126	s32bit	2
S6.4.10	User #10	-10000 to 10000	0	1128	DINT	1128	s32bit	2
S6.4.11	User #11	-10000 to 10000	0	1130	DINT	1130	s32bit	2
S6.4.12	User #12	-10000 to 10000	0	1132	DINT	1132	s32bit	2
S6.4.13	User #13	-10000 to 10000	0	1134	DINT	1134	s32bit	2
S6.4.14	User #14	-10000 to 10000	0	1136	DINT	1136	s32bit	2
S6.4.15	User #15	-10000 to 10000	0	1138	DINT	1138	s32bit	2
S6.4.16	User #16	-10000 to 10000	0	1140	DINT	1140	s32bit	2
S6.4.17	User #17	-10000 to 10000	0	1142	DINT	1142	s32bit	2
S6.4.18	User #18	-10000 to 10000	0	1144	DINT	1144	s32bit	2
S6.4.19	User #19	-10000 to 10000	0	1146	DINT	1146	s32bit	2
S6.4.20	User #20	-10000 to 10000	0	1148	DINT	1148	s32bit	2
S6.4.21	User #21	-10000 to 10000	0	1150	DINT	1150	s32bit	2
S6.4.22	User #22	-10000 to 10000	0	1152	DINT	1152	s32bit	2
S6.4.23	User #23	-10000 to 10000	0	1154	DINT	1154	s32bit	2
S6.4.24	User #24	-10000 to 10000	0	1156	DINT	1156	s32bit	2
S6.4.25	User #25	-10000 to 10000	0	1158	DINT	1158	s32bit	2
S6.4.26	User #26	-10000 to 10000	0	1160	DINT	1160	s32bit	2
S6.4.27	User #27	-10000 to 10000	0	1162	DINT	1162	s32bit	2
S6.4.28	User #28	-10000 to 10000	0	1164	DINT	1164	s32bit	2
S6.4.29	User #29	-10000 to 10000	0	1166	DINT	1166	s32bit	2
S6.4.30	User #30	-10000 to 10000	0	1168	DINT	1168	s32bit	2
S6.4.31	User #31	-10000 to 10000	0	1170	DINT	1170	s32bit	2
S6.4.32	User #32	-10000 to 10000	0	1172	DINT	1172	s32bit	2
S6.4.33	User #33	-10000 to 10000	0	1174	DINT	1174	s32bit	2
S6.4.34	User #34	-10000 to 10000	0	1176	DINT	1176	s32bit	2
S6.4.35	User #35	-10000 to 10000	0	1178	DINT	1178	s32bit	2
S6.4.36	User #36	-10000 to 10000	0	1180	DINT	1180	s32bit	2
S6.4.37	User #37	-10000 to 10000	0	1182	DINT	1182	s32bit	2
S6.4.38	User #38	-10000 to 10000	0	1184	DINT	1184	s32bit	2
S6.4.39	User #39	-10000 to 10000	0	1186	DINT	1186	s32bit	2
S6.4.40	User #40	-10000 to 10000	0	1188	DINT	1188	s32bit	2
S6.4.41	User #41	-10000 to 10000	0	1190	DINT	1190	s32bit	2
S6.4.42	User #42	-10000 to 10000	0	1192	DINT	1192	s32bit	2
S6.4.43	User #43	-10000 to 10000	0	1194	DINT	1194	s32bit	2
S6.4.44	User #44	-10000 to 10000	0	1196	DINT	1196	s32bit	2
S6.4.45	User #45	-10000 to 10000	0	1198	DINT	1198	s32bit	2
S6.4.46	User #46	-10000 to 10000	0	1200	DINT	1200	s32bit	2
S6.4.47	User #47	-10000 to 10000	0	1202	DINT	1202	s32bit	2
S6.4.48	User #48	-10000 to 10000	0	1204	DINT	1204	s32bit	2
S6.4.49	User #49	-10000 to 10000	0	1206	DINT	1206	s32bit	2
S6.4.50	User #50	-10000 to 10000	0	1208	DINT	1208	s32bit	2

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
D1 Diagnostics\Fault								
D1.1	Actual							
D1.1.1	Fxxx	0 to 999	0	90	UINT	90	16bit	1
D1.2	Fault History							
D2 Diagnostics\Alarms								
D2.1	Actual							
D2.1.1	Axxx 1	0 to 999	0	91	UINT	91	16bit	1
D2.1.2	Axxx 2	0 to 999	0	92	UINT	92	16bit	1
D2.1.3	Axxx 3	0 to 999	0	93	UINT	93	16bit	1
D2.1.4	Axxx 4	0 to 999	0	94	UINT	94	16bit	1
D2.1.5	Axxx 5	0 to 999	0	95	UINT	95	16bit	1
D2.2	Alarm History							
D3 Diagnostics\Events								
D4 Diagnostics\Motor On								
D4.1	Start Current							
D4.1.1	Maximum	0.0 to 14544.0 A	1	36	UDINT	36	32bit	2
D4.1.2	Average	0.0 to 14544.0 A	1	38	UDINT	38	32bit	2
D4.2	Real Start Time							
D4.2.1	Actual	0 to 999 s	0	48	UINT	48	16bit	1
D4.2.2	Final	0 to 999 s	0	49	UINT	49	16bit	1
D4.3	Current Full Voltage							
D4.3.1	Maximum	0.0 to 14544.0 A	1	40	UDINT	40	32bit	2
D4.4	Main Line Voltage							
D4.4.1	Maximum	0.0 to 999.9 V	1	54	UINT	54	16bit	1
D4.4.2	Minimum	0.0 to 999.9 V	1	55	UINT	55	16bit	1
D4.5	Main Line Frequency							
D4.5.1	Maximum	0.0 to 99.9 Hz	1	56	UINT	56	16bit	1
D4.5.2	Minimum	0.0 to 99.9 Hz	1	57	UINT	57	16bit	1
D4.6	kWh Counter							
D4.6.1	Total	0.0 to 429496729.5 kWh	1	52	UDINT	52	32bit	2
D4.7	Number Start							
D4.7.1	Total	0 to 65535	0	59	UINT	59	16bit	1
D5 Diagnostics\Temperatures								
D5.1	SCRs Maximum							
D5.1.1	Total	-22 to 260 °C	0	77	INT	77	s16bit	1
D5.2	Motor Maximum							
D5.2.1	Channel 1	-20 to 260 °C	0	80	INT	80	s16bit	1
D5.2.2	Channel 2	-20 to 260 °C	0	81	INT	81	s16bit	1
D5.2.3	Channel 3	-20 to 260 °C	0	82	INT	82	s16bit	1
D5.2.4	Channel 4	-20 to 260 °C	0	83	INT	83	s16bit	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
D5.2.5	Channel 5	-20 to 260 °C	0	84	INT	84	s16bit	1
D5.2.6	Channel 6	-20 to 260 °C	0	85	INT	85	s16bit	1
D6 Diagnostics\Hours Control								
D6.1	Powered	0 to 4294967295 s	0	42	UDINT	42	TIME	2
D6.2	Enabled	0 to 4294967295 s	0	44	UDINT	44	TIME	2
D6.3	Fan ON	0 to 4294967295 s	0	46	UDINT	46	TIME	2
D7 Diagnostics\Changed Parameters C1 Configurations\Starting and Stopping								
C1.1	Types of Control	0 = Voltage Ramp 1 = Voltage Ramp + Current Limit 2 = Current Limit 3 = Current Ramp 4 = Pump Control 5 = Torque Control 6 = D.O.L. SCR		202	USINT	202	enum	1
C1.2	Initial Start Voltage	25 to 90 %	0	101	USINT	101	8bit	1
C1.3	Maximum Start Time	1 to 999 s	0	102	UINT	102	16bit	1
C1.4	Start End Detection	0 = Time 1 = Automatic		106	USINT	106	enum	1
C1.5	Initial Current Ramp	150 to 600 %	0	111	UINT	111	16bit	1
C1.6	Current Ramp Time	1 to 99 %	0	112	USINT	112	8bit	1
C1.7	Current Limit	150 to 600 %	0	110	UINT	110	16bit	1
C1.8	Start Torque Chara.	1 = Constant 2 = Linear 3 = Square		120	USINT	120	enum	1
C1.9	Initial Start Torque	10 to 300 %	0	121	UINT	121	16bit	1
C1.10	End Start Torque	10 to 300 %	0	122	UINT	122	16bit	1
C1.11	Minimum Start Torque	10 to 300 %	0	123	UINT	123	16bit	1
C1.12	Min.Start Torq. Time	1 to 99 %	0	124	USINT	124	8bit	1
C1.13	Stop Time	0 to 999 s	0	104	UINT	104	16bit	1
C1.14	Step Down Volt. Stop	60 to 100 %	0	103	USINT	103	8bit	1
C1.15	End Voltage Stop	30 to 55 %	0	105	USINT	105	8bit	1
C1.16	Stop Torque Characte.	1 = Constant 2 = Linear 3 = Square		125	USINT	125	enum	1
C1.17	End Stop Torque	10 to 100 %	0	126	USINT	126	8bit	1
C1.18	Minimum Stop Torque	10 to 100 %	0	127	USINT	127	8bit	1
C1.19	Min. Stop Torque Time	1 to 99 %	0	128	USINT	128	8bit	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
<b>C2 Configurations\Nominal Motor Data</b>								
C2.1	Voltage	1 to 999 V	0	400	UINT	400	16bit	1
C2.2	Current	0.1 to 2424.0 A	1	401	UINT	401	16bit	1
C2.3	Speed	1 to 3600 rpm	0	402	UINT	402	16bit	1
C2.4	Power	0.1 to 1950.0 kW	1	404	UINT	404	16bit	1
C2.5	P.F. Power Factor	0.01 to 1.00	2	405	USINT	405	8bit	1
C2.6	S.F. Service Factor	0.01 to 1.50	2	406	USINT	406	8bit	1
<b>C3 Configurations\LOC/REM Selection</b>								
C3.1	Mode	0 = Always LOC 1 = Always REM 2 = HMI LR Key LOC 3 = HMI LR Key REM 4 = Dlx 5 = USB LOC 6 = USB REM 7 = SoftPLC LOC 8 = SoftPLC REM 9 = Slot 1 LOC 10 = Slot 1 REM 11 = Slot 2 LOC 12 = Slot 2 REM		220	USINT	220	enum	1
C3.2	LOC Command	0 = HMI Keys 1 = Dlx 2 = USB 3 = SoftPLC 4 = Slot 1 5 = Slot 2		229	USINT	229	enum	1
C3.3	REM Command	0 = HMI Keys 1 = Dlx 2 = USB 3 = SoftPLC 4 = Slot 1 5 = Slot 2		230	USINT	230	enum	1
C3.4	Commands Copy	0 = No 1 = Yes		231	USINT	231	enum	1
<b>C4 Configurations\I/O</b>								
C4.1	Digital Inputs							



Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C4.1.1	DI1	0 = Not Used 1 = Start / Stop 2 = Start (3 Wires) 3 = Stop (3 Wires) 4 = General Enable 5 = LOC / REM 6 = JOG 7 = FWD / REV 8 = No External Fault 9 = No External Alarm 10 = Brake 11 = Reset 12 = Load User 1/2 13 ... 16 = Reserved		263	USINT	263	enum	1
C4.1.2	DI2	0 = Not Used 1 = Start / Stop 2 = Start (3 Wires) 3 = Stop (3 Wires) 4 = General Enable 5 = LOC / REM 6 = JOG 7 = FWD / REV 8 = No External Fault 9 = No External Alarm 10 = Brake 11 = Reset 12 = Load User 1/2 13 ... 16 = Reserved		264	USINT	264	enum	1
C4.1.3	DI3	0 = Not Used 1 = Start / Stop 2 = Start (3 Wires) 3 = Stop (3 Wires) 4 = General Enable 5 = LOC / REM 6 = JOG 7 = FWD / REV 8 = No External Fault 9 = No External Alarm 10 = Brake		265	USINT	265	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		11 = Reset 12 = Load User 1/2 13 = Reserved 14 = Emergency Start 15 ... 16 = Reserved						
C4.1.4	DI4	0 = Not Used 1 = Start / Stop 2 = Start (3 Wires) 3 = Stop (3 Wires) 4 = General Enable 5 = LOC / REM 6 = JOG 7 = FWD / REV 8 = No External Fault 9 = No External Alarm 10 = Brake 11 = Reset 12 = Load User 1/2 13 ... 16 = Reserved		266	USINT	266	enum	1
C4.1.5	DI5	0 = Not Used 1 = Start / Stop 2 = Start (3 Wires) 3 = Stop (3 Wires) 4 = General Enable 5 = LOC / REM 6 = JOG 7 = FWD / REV 8 = No External Fault 9 = No External Alarm 10 = Brake 11 = Reset 12 = Load User 1/2 13 ... 16 = Reserved		267	USINT	267	enum	1
C4.1.6	DI6	0 = Not Used 1 = Start / Stop 2 = Start (3 Wires) 3 = Stop (3 Wires) 4 = General Enable 5 = LOC / REM		268	USINT	268	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		6 = JOG 7 = FWD / REV 8 = No External Fault 9 = No External Alarm 10 = Brake 11 = Reset 12 = Load User 1/2 13 ... 14 = Reserved 15 = Mot. Thermistor A032 16 = Mot. Thermistor F032						
C4.2	Digital Outputs							
C4.2.1	DO1	0 = Not Used 1 = Running 2 = Full Voltage 3 = Bypass 4 = FWD / REV K1 5 = DC Braking 6 = Without Fault 7 = With Fault 8 = Without Alarm 9 = With Alarm 10 = No Fault / Alarm 11 = SoftPLC 12 = Communication 13 = I motor % > Value 14 = Breaker Shunt Trip		275	USINT	275	enum	1
C4.2.2	DO2	0 = Not Used 1 = Running 2 = Full Voltage 3 = Bypass 4 = FWD / REV K2 5 = DC Braking 6 = Without Fault 7 = With Fault 8 = Without Alarm 9 = With Alarm 10 = No Fault / Alarm 11 = SoftPLC 12 = Communication 13 = I motor % > Value		276	USINT	276	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C4.2.3	DO3	14 = Breaker Shunt Trip  0 = Not Used 1 = Running 2 = Full Voltage 3 = Bypass 4 = Not Used 5 = DC Braking 6 = Without Fault 7 = With Fault 8 = Without Alarm 9 = With Alarm 10 = No Fault / Alarm 11 = SoftPLC 12 = Communication 13 = I motor % > Value 14 = Breaker Shunt Trip		277	USINT	277	enum	1
C4.2.4	DO Comparison Value	10.0 to 500.0 %	1	278	UINT	278	16bit	1
C4.3	Analog Output							
C4.3.1	Function	0 = Not Used 1 = SSW Current % 2 = Line Voltage % 3 = Output Voltage % 4 = Power Factor 5 = Thermal Class Prot. 6 = Output Power W 7 = Output Power VA 8 = Motor Torque % 9 = Value to AO 10 = SCRs Temperature 11 = SoftPLC		251	USINT	251	enum	1
C4.3.2	Gain	0.000 to 9.999	3	252	UINT	252	16bit	1
C4.3.3	Signal	0 = 0 to 20mA 1 = 4 to 20mA 2 = 20mA to 0 3 = 20 to 4mA 4 = 0 to 10V 5 = 10V to 0		253	USINT	253	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C5.1	Voltage Protections							
C5.1.1	Motor Undervoltage							
C5.1.1.1	Mode	0 = Inactive 1 = Fault F002 2 = Alarm A002		900	USINT	900	enum	1
C5.1.1.2	Level	0 to 30 %Vn	0	901	USINT	901	8bit	1
C5.1.1.3	Time	0.1 to 10.0 s	1	902	USINT	902	8bit	1
C5.1.2	Motor Overvoltage							
C5.1.2.1	Mode	0 = Inactive 1 = Fault F016 2 = Alarm A016		903	USINT	903	enum	1
C5.1.2.2	Level	0 to 20 %Vn	0	904	USINT	904	8bit	1
C5.1.2.3	Time	0.1 to 10.0 s	1	905	USINT	905	8bit	1
C5.1.3	Motor Voltage Imbalance							
C5.1.3.1	Mode	0 = Inactive 1 = Fault F001 2 = Alarm A001		906	USINT	906	enum	1
C5.1.3.2	Level	0 to 30 %Vn	0	907	USINT	907	8bit	1
C5.1.3.3	Time	0.1 to 10.0 s	1	908	USINT	908	8bit	1
C5.2	Current Protections							
C5.2.1	Motor Undercurrent							
C5.2.1.1	Mode	0 = Inactive 1 = Fault F065 2 = Alarm A065		910	USINT	910	enum	1
C5.2.1.2	Level	0 to 99 %In	0	911	USINT	911	8bit	1
C5.2.1.3	Time	1 to 99 s	0	912	USINT	912	8bit	1
C5.2.2	Motor Overcurrent							
C5.2.2.1	Mode	0 = Inactive 1 = Fault F066 2 = Alarm A066		913	USINT	913	enum	1
C5.2.2.2	Level	0 to 99 %In	0	914	USINT	914	8bit	1
C5.2.2.3	Time	1 to 99 s	0	915	USINT	915	8bit	1
C5.2.3	Current Imbalance							
C5.2.3.1	Mode	0 = Inactive 1 = Fault F074		916	USINT	916	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C5.2.3.2	Level	2 = Alarm A074 0 to 30 %In	0	917	USINT	917	8bit	1
C5.2.3.3	Time	1 to 99 s	0	918	USINT	918	8bit	1
C5.3	Torque Protections							
C5.3.1	Undertorque							
C5.3.1.1	Mode	0 = Inactive 1 = Fault F078 2 = Alarm A078		950	USINT	950	enum	1
C5.3.1.2	Level	0 to 99 %Tn	0	951	USINT	951	8bit	1
C5.3.1.3	Time	1 to 99 s	0	952	USINT	952	8bit	1
C5.3.2	Overtorque							
C5.3.2.1	Mode	0 = Inactive 1 = Fault F079 2 = Alarm A079		953	USINT	953	enum	1
C5.3.2.2	Level	0 to 99 %Tn	0	954	USINT	954	8bit	1
C5.3.2.3	Time	1 to 99 s	0	955	USINT	955	8bit	1
C5.4	Power Protections							
C5.4.1	Underpower							
C5.4.1.1	Mode	0 = Inactive 1 = Fault F080 2 = Alarm A080		960	USINT	960	enum	1
C5.4.1.2	Level	0 to 99 %Pn	0	961	USINT	961	8bit	1
C5.4.1.3	Time	1 to 99 s	0	962	USINT	962	8bit	1
C5.4.2	Overpower							
C5.4.2.1	Mode	0 = Inactive 1 = Fault F081 2 = Alarm A081		963	USINT	963	enum	1
C5.4.2.2	Level	0 to 99 %Pn	0	964	USINT	964	8bit	1
C5.4.2.3	Time	1 to 99 s	0	965	USINT	965	8bit	1
C5.5	Phase Sequence							
C5.5.1	Mode	0 = Inactive 1 = RST - Fault F067 2 = RTS - Fault F068		930	USINT	930	enum	1
C5.6	Bypass Protections							
C5.6.1	Undercurrent	0 = Inactive		919	USINT	919	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C5.6.2	Overcurrent	1 = Fault F076		920	USINT	920	enum	1
C5.6.3	Closed	0 = Inactive 1 = Fault F063		921	USINT	921	enum	1
C5.7	Time Protections							
C5.7.1	Before Start	0.5 to 999.9 s	1	931	UINT	931	16bit	1
C5.7.2	After Stop	2.0 to 999.9 s	1	932	UINT	932	16bit	1
C5.7.3	Between Start	2 to 9999 s	0	933	UINT	933	16bit	1
C5.8	Motor Thermal Protection							
C5.8.1	Ch1 Installed Sensor							
C5.8.1.1	Mode	0 = Off 1 = On 2 = On Stator		1006	USINT	1006	enum	1
C5.8.2	Ch1 Sensor Fault							
C5.8.2.1	Mode	0 = Fault F109 and F117 1 = Alarm A109 and A117		998	USINT	998	enum	1
C5.8.3	Ch1 Overtemperature							
C5.8.3.1	Mode	0 = Fault F101 1 = Alarm A101 2 = F101 and A101		966	USINT	966	enum	1
C5.8.3.2	Fault Level	0 to 250 °C	0	967	USINT	967	8bit	1
C5.8.3.3	Alarm Level	0 to 250 °C	0	968	USINT	968	8bit	1
C5.8.3.4	Alarm Reset	0 to 250 °C	0	969	USINT	969	8bit	1
C5.8.4	Ch2 Installed Sensor							
C5.8.4.1	Mode	0 = Off 1 = On 2 = On Stator		1007	USINT	1007	enum	1
C5.8.5	Ch2 Sensor Fault							
C5.8.5.1	Mode	0 = Fault F110 and F118 1 = Alarm A110 and A118		999	USINT	999	enum	1
C5.8.6	Ch2 Overtemperature							
C5.8.6.1	Mode	0 = Fault F102		970	USINT	970	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		1 = Alarm A102 2 = F102 and A102						
C5.8.6.2	Fault Level	0 to 250 °C	0	971	USINT	971	8bit	1
C5.8.6.3	Alarm Level	0 to 250 °C	0	972	USINT	972	8bit	1
C5.8.6.4	Alarm Reset	0 to 250 °C	0	973	USINT	973	8bit	1
C5.8.7	Ch3 Installed Sensor							
C5.8.7.1	Mode	0 = Off 1 = On 2 = On Stator		1008	USINT	1008	enum	1
C5.8.8	Ch3 Sensor Fault							
C5.8.8.1	Mode	0 = Fault F111 and F119 1 = Alarm A111 and A119		1000	USINT	1000	enum	1
C5.8.9	Ch3 Overtemperature							
C5.8.9.1	Mode	0 = Fault F103 1 = Alarm A103 2 = F103 and A103		974	USINT	974	enum	1
C5.8.9.2	Fault Level	0 to 250 °C	0	975	USINT	975	8bit	1
C5.8.9.3	Alarm Level	0 to 250 °C	0	976	USINT	976	8bit	1
C5.8.9.4	Alarm Reset	0 to 250 °C	0	977	USINT	977	8bit	1
C5.8.10	Ch4 Installed Sensor							
C5.8.10.1	Mode	0 = Off 1 = On 2 = On Stator		1009	USINT	1009	enum	1
C5.8.11	Ch4 Sensor Fault							
C5.8.11.1	Mode	0 = Fault F112 and F120 1 = Alarm A112 and A120		1001	USINT	1001	enum	1
C5.8.12	Ch4 Overtemperature							
C5.8.12.1	Mode	0 = Fault F104 1 = Alarm A104 2 = F104 and A104		978	USINT	978	enum	1
C5.8.12.2	Fault Level	0 to 250 °C	0	979	USINT	979	8bit	1
C5.8.12.3	Alarm Level	0 to 250 °C	0	980	USINT	980	8bit	1
C5.8.12.4	Alarm Reset	0 to 250 °C	0	981	USINT	981	8bit	1
C5.8.13	Ch5 Installed Sensor							
C5.8.13.1	Mode			1010	USINT	1010	enum	1



Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		0 = Off 1 = On 2 = On Stator						
C5.8.14	Ch5 Sensor Fault							
C5.8.14.1	Mode	0 = Fault F113 and F121 1 = Alarm A113 and A121		1002	USINT	1002	enum	1
C5.8.15	Ch5 Overtemperature							
C5.8.15.1	Mode	0 = Fault F105 1 = Alarm A105 2 = F105 and A105		982	USINT	982	enum	1
C5.8.15.2	Fault Level	0 to 250 °C	0	983	USINT	983	8bit	1
C5.8.15.3	Alarm Level	0 to 250 °C	0	984	USINT	984	8bit	1
C5.8.15.4	Alarm Reset	0 to 250 °C	0	985	USINT	985	8bit	1
C5.8.16	Ch6 Installed Sensor							
C5.8.16.1	Mode	0 = Off 1 = On 2 = On Stator		1011	USINT	1011	enum	1
C5.8.17	Ch6 Sensor Fault							
C5.8.17.1	Mode	0 = Fault F114 and F122 1 = Alarm A114 and A122		1003	USINT	1003	enum	1
C5.8.18	Ch6 Overtemperature							
C5.8.18.1	Mode	0 = Fault F106 1 = Alarm A106 2 = F106 and A106		986	USINT	986	enum	1
C5.8.18.2	Fault Level	0 to 250 °C	0	987	USINT	987	8bit	1
C5.8.18.3	Alarm Level	0 to 250 °C	0	988	USINT	988	8bit	1
C5.8.18.4	Alarm Reset	0 to 250 °C	0	989	USINT	989	8bit	1
C5.9	Motor Thermal Class							
C5.9.1	Programming Mode	0 = Standard 1 = Custom		934	USINT	934	enum	1
C5.9.2	Action Mode	0 = Inactive 1 = Fault F005 2 = Alarm A005 3 = F005 and A005		935	USINT	935	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C5.9.3	Alarm Level	0 to 100 %	0	936	USINT	936	8bit	1
C5.9.4	Alarm Reset	0 to 100 %	0	937	USINT	937	8bit	1
C5.9.5	Motor Temperature	0 = T.C. + PT100 1 = T.C. + Th.lm.		938	USINT	938	enum	1
C5.9.6	Thermal Class	0 = Automatic 1 = Class 10 2 = Class 15 3 = Class 20 4 = Class 25 5 = Class 30 6 = Class 35 7 = Class 40 8 = Class 45		939	USINT	939	enum	1
C5.9.7	Motor Data							
C5.9.7.1	Insulation Class	0 = Class A 105°C 1 = Class E 120°C 2 = Class B 130°C 3 = Class F 155°C 4 = Class H 180°C 5 = Class N 200°C 6 = Class R 220°C 7 = Class S 240°C 8 = Class 250°C		940	USINT	940	enum	1
C5.9.7.2	Temperature Rise	0 to 200 °C	0	942	USINT	942	8bit	1
C5.9.7.3	Ambient Temperature	0 to 200 °C	0	941	USINT	941	8bit	1
C5.9.7.4	Locked Rotor Time	1 to 100 s	0	943	USINT	943	8bit	1
C5.9.7.5	Locked Rotor Current	2.0 to 10.0 x	1	944	USINT	944	8bit	1
C5.9.7.6	Heating Time Constant	1 to 2880 min	0	945	UINT	945	16bit	1
C5.9.7.7	Cooling Time Constant	1 to 8640 min	0	946	UINT	946	16bit	1
C5.9.8	Thermal Image							
C5.9.8.1	Reset	0 to 8640 min	0	947	UINT	947	16bit	1
C5.10	SSW Short Circuit							
C5.10.1	Motor Off	0 = Inactive 1 = Fault F019		922	USINT	922	enum	1
C5.10.2	Motor On	0 = Inactive 1 = Fault F020		923	USINT	923	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C5.11	Fault Auto-Reset							
C5.11.1	Mode	0 = Off 1 = On		207	USINT	207	enum	1
C5.11.2	Time	3 to 600 s	0	208	UINT	208	16bit	1
C6 Configurations\HMI								
C6.1	Password							
C6.1.1	Password	0 to 9999	0	210	UINT	210	16bit	1
C6.1.2	Password Options	0 = Off 1 = On 2 = Change Password		200	USINT	200	enum	1
C6.2	Language							
C6.2.1	Language	0 = Português 1 = English 2 = Español 3 = Français 4 = Downloaded		201	USINT	201	enum	1
C6.3	Date and Time							
C6.3.1	Date and Time	yy/mm/dd and hh:mm:ss		196	SHORT_STRING	196	date	4
C6.3.2	Day of the Week	0 = Sunday 1 = Monday 2 = Tuesday 3 = Wednesday 4 = Thursday 5 = Friday 6 = Saturday		195	USINT	195	enum	1
C6.4	Main Screen							
C6.5	LCD Display							
C6.5.1	Backlight	1 to 15	0	218	USINT	218	8bit	1
C6.5.2	Contrast	0 to 100 %	0	219	USINT	219	8bit	1
C6.6	Communication Timeout							
C6.6.1	Mode	0 = Inactive 1 = Fault F127 2 = Alarm A127		190	USINT	190	enum	1
C6.6.2	Alarm Action	0 = Indicates Only 1 = Ramp Stop		191	USINT	191	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C6.6.3	Time	2 = General Disable 3 = Change to LOC 4 = Change to REM 1 to 999 s	0	192	UINT	192	16bit	1
<b>C7 Configurations\Special Functions</b>								
C7.1	Forward/Reverse							
C7.1.1	Mode	0 = Inactive 1 = By Contactor 2 = Only for JOG		228	USINT	228	enum	1
C7.2	Kick Start							
C7.2.1	Mode	0 = Off 1 = On		520	USINT	520	enum	1
C7.2.2	Time	0.1 to 2.0 s	1	521	USINT	521	8bit	1
C7.2.3	Voltage	70 to 90 %	0	522	USINT	522	8bit	1
C7.2.4	Current	300 to 700 %	0	523	UINT	523	16bit	1
C7.3	Jog							
C7.3.1	Mode	0 = Off 1 = On		510	USINT	510	enum	1
C7.3.2	Level	10 to 100 %	0	511	USINT	511	8bit	1
C7.4	Braking							
C7.4.1	Mode	0 = Inactive 1 = Reverse 2 = Optimal 3 = DC		500	USINT	500	enum	1
C7.4.2	Time	1 to 299 s	0	501	UINT	501	16bit	1
C7.4.3	Level	30 to 70 %	0	502	USINT	502	8bit	1
C7.4.4	End	0 = Inactive 1 = Automatic		503	USINT	503	enum	1
<b>C8 Configurations\Communications</b>								
C8.1	I/O Data							
C8.1.1	Data Read							
C8.1.1.1	Slot 1 1st Word	1 to 50	0	712	USINT	712	8bit	1
C8.1.1.2	Slot 1 Quantity	1 to 50	0	713	USINT	713	8bit	1
C8.1.1.3	Slot 2 1st Word	1 to 50	0	753	USINT	753	8bit	1
C8.1.1.4	Slot 2 Quantity	1 to 50	0	754	USINT	754	8bit	1
C8.1.1.5	Word #1	0 to 65535	0	1300	UINT	1300	16bit	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C8.1.1.6	Word #2	0 to 65535	0	1301	UINT	1301	16bit	1
C8.1.1.7	Word #3	0 to 65535	0	1302	UINT	1302	16bit	1
C8.1.1.8	Word #4	0 to 65535	0	1303	UINT	1303	16bit	1
C8.1.1.9	Word #5	0 to 65535	0	1304	UINT	1304	16bit	1
C8.1.1.10	Word #6	0 to 65535	0	1305	UINT	1305	16bit	1
C8.1.1.11	Word #7	0 to 65535	0	1306	UINT	1306	16bit	1
C8.1.1.12	Word #8	0 to 65535	0	1307	UINT	1307	16bit	1
C8.1.1.13	Word #9	0 to 65535	0	1308	UINT	1308	16bit	1
C8.1.1.14	Word #10	0 to 65535	0	1309	UINT	1309	16bit	1
C8.1.1.15	Word #11	0 to 65535	0	1310	UINT	1310	16bit	1
C8.1.1.16	Word #12	0 to 65535	0	1311	UINT	1311	16bit	1
C8.1.1.17	Word #13	0 to 65535	0	1312	UINT	1312	16bit	1
C8.1.1.18	Word #14	0 to 65535	0	1313	UINT	1313	16bit	1
C8.1.1.19	Word #15	0 to 65535	0	1314	UINT	1314	16bit	1
C8.1.1.20	Word #16	0 to 65535	0	1315	UINT	1315	16bit	1
C8.1.1.21	Word #17	0 to 65535	0	1316	UINT	1316	16bit	1
C8.1.1.22	Word #18	0 to 65535	0	1317	UINT	1317	16bit	1
C8.1.1.23	Word #19	0 to 65535	0	1318	UINT	1318	16bit	1
C8.1.1.24	Word #20	0 to 65535	0	1319	UINT	1319	16bit	1
C8.1.1.25	Word #21	0 to 65535	0	1320	UINT	1320	16bit	1
C8.1.1.26	Word #22	0 to 65535	0	1321	UINT	1321	16bit	1
C8.1.1.27	Word #23	0 to 65535	0	1322	UINT	1322	16bit	1
C8.1.1.28	Word #24	0 to 65535	0	1323	UINT	1323	16bit	1
C8.1.1.29	Word #25	0 to 65535	0	1324	UINT	1324	16bit	1
C8.1.1.30	Word #26	0 to 65535	0	1325	UINT	1325	16bit	1
C8.1.1.31	Word #27	0 to 65535	0	1326	UINT	1326	16bit	1
C8.1.1.32	Word #28	0 to 65535	0	1327	UINT	1327	16bit	1
C8.1.1.33	Word #29	0 to 65535	0	1328	UINT	1328	16bit	1
C8.1.1.34	Word #30	0 to 65535	0	1329	UINT	1329	16bit	1
C8.1.1.35	Word #31	0 to 65535	0	1330	UINT	1330	16bit	1
C8.1.1.36	Word #32	0 to 65535	0	1331	UINT	1331	16bit	1
C8.1.1.37	Word #33	0 to 65535	0	1332	UINT	1332	16bit	1
C8.1.1.38	Word #34	0 to 65535	0	1333	UINT	1333	16bit	1
C8.1.1.39	Word #35	0 to 65535	0	1334	UINT	1334	16bit	1
C8.1.1.40	Word #36	0 to 65535	0	1335	UINT	1335	16bit	1
C8.1.1.41	Word #37	0 to 65535	0	1336	UINT	1336	16bit	1
C8.1.1.42	Word #38	0 to 65535	0	1337	UINT	1337	16bit	1
C8.1.1.43	Word #39	0 to 65535	0	1338	UINT	1338	16bit	1
C8.1.1.44	Word #40	0 to 65535	0	1339	UINT	1339	16bit	1
C8.1.1.45	Word #41	0 to 65535	0	1340	UINT	1340	16bit	1
C8.1.1.46	Word #42	0 to 65535	0	1341	UINT	1341	16bit	1
C8.1.1.47	Word #43	0 to 65535	0	1342	UINT	1342	16bit	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C8.1.1.48	Word #44	0 to 65535	0	1343	UINT	1343	16bit	1
C8.1.1.49	Word #45	0 to 65535	0	1344	UINT	1344	16bit	1
C8.1.1.50	Word #46	0 to 65535	0	1345	UINT	1345	16bit	1
C8.1.1.51	Word #47	0 to 65535	0	1346	UINT	1346	16bit	1
C8.1.1.52	Word #48	0 to 65535	0	1347	UINT	1347	16bit	1
C8.1.1.53	Word #49	0 to 65535	0	1348	UINT	1348	16bit	1
C8.1.1.54	Word #50	0 to 65535	0	1349	UINT	1349	16bit	1
C8.1.2	Data Write							
C8.1.2.1	Slot 1 1st Word	1 to 20	0	714	USINT	714	8bit	1
C8.1.2.2	Slot 1 Quantity	1 to 20	0	715	USINT	715	8bit	1
C8.1.2.3	Slot 2 1st Word	1 to 20	0	755	USINT	755	8bit	1
C8.1.2.4	Slot 2 Quantity	1 to 20	0	756	USINT	756	8bit	1
C8.1.2.5	Update Delay	0.0 to 999.9 s	1	899	UINT	899	16bit	1
C8.1.2.6	Word #1	0 to 65535	0	1400	UINT	1400	16bit	1
C8.1.2.7	Word #2	0 to 65535	0	1401	UINT	1401	16bit	1
C8.1.2.8	Word #3	0 to 65535	0	1402	UINT	1402	16bit	1
C8.1.2.9	Word #4	0 to 65535	0	1403	UINT	1403	16bit	1
C8.1.2.10	Word #5	0 to 65535	0	1404	UINT	1404	16bit	1
C8.1.2.11	Word #6	0 to 65535	0	1405	UINT	1405	16bit	1
C8.1.2.12	Word #7	0 to 65535	0	1406	UINT	1406	16bit	1
C8.1.2.13	Word #8	0 to 65535	0	1407	UINT	1407	16bit	1
C8.1.2.14	Word #9	0 to 65535	0	1408	UINT	1408	16bit	1
C8.1.2.15	Word #10	0 to 65535	0	1409	UINT	1409	16bit	1
C8.1.2.16	Word #11	0 to 65535	0	1410	UINT	1410	16bit	1
C8.1.2.17	Word #12	0 to 65535	0	1411	UINT	1411	16bit	1
C8.1.2.18	Word #13	0 to 65535	0	1412	UINT	1412	16bit	1
C8.1.2.19	Word #14	0 to 65535	0	1413	UINT	1413	16bit	1
C8.1.2.20	Word #15	0 to 65535	0	1414	UINT	1414	16bit	1
C8.1.2.21	Word #16	0 to 65535	0	1415	UINT	1415	16bit	1
C8.1.2.22	Word #17	0 to 65535	0	1416	UINT	1416	16bit	1
C8.1.2.23	Word #18	0 to 65535	0	1417	UINT	1417	16bit	1
C8.1.2.24	Word #19	0 to 65535	0	1418	UINT	1418	16bit	1
C8.1.2.25	Word #20	0 to 65535	0	1419	UINT	1419	16bit	1
C8.2	RS485 Serial							
C8.2.1	Serial Protocol	0 ... 1 = Reserved 2 = Modbus RTU		730	USINT	730	enum	1
C8.2.2	Address	1 to 247	0	731	USINT	731	8bit	1
C8.2.3	Baud Rate	0 = 9600 bits/s 1 = 19200 bits/s		732	USINT	732	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C8.2.4	Bytes Config.	2 = 38400 bits/s 3 = 57600 bits/s  0 = 8 bits, no, 1 1 = 8 bits, even, 1 2 = 8 bits, odd, 1 3 = 8 bits, no, 2 4 = 8 bits, even, 2 5 = 8 bits, odd, 2		733	USINT	733	enum	1
C8.2.5	Timeout							
C8.2.5.1	Mode	0 = Inactive 1 = Fault F128 2 = Alarm A128		740	USINT	740	enum	1
C8.2.5.2	Alarm Action	0 = Indicates Only 1 = Ramp Stop 2 = General Disable 3 = Change to LOC 4 = Change to REM		741	USINT	741	enum	1
C8.2.5.3	Timeout	0.0 to 999.9 s	1	734	UINT	734	16bit	1
C8.3	Anybus-CC							
C8.3.1	Update Configuration	0 = Normal Operation 1 = Update configuration		749	USINT	749	enum	1
C8.3.2	Address	0 to 255	0	757	USINT	757	8bit	1
C8.3.3	Baud Rate	0 = 125 kbps 1 = 250 kbps 2 = 500 kbps 3 = Autobaud		758	USINT	758	enum	1
C8.3.4	IP Address Configuration	0 = Parameters 1 = DHCP 2 = DCP		760	USINT	760	enum	1
C8.3.5	IP Address	0.0.0.0 to 255.255.255.255		762	UDINT	762	ip_address	2
C8.3.6	CIDR	0 = Reserved 1 = 128.0.0.0 2 = 192.0.0.0 3 = 224.0.0.0		761	USINT	761	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		4 = 240.0.0.0 5 = 248.0.0.0 6 = 252.0.0.0 7 = 254.0.0.0 8 = 255.0.0.0 9 = 255.128.0.0 10 = 255.192.0.0 11 = 255.224.0.0 12 = 255.240.0.0 13 = 255.248.0.0 14 = 255.252.0.0 15 = 255.254.0.0 16 = 255.255.0.0 17 = 255.255.128.0 18 = 255.255.192.0 19 = 255.255.224.0 20 = 255.255.240.0 21 = 255.255.248.0 22 = 255.255.252.0 23 = 255.255.254.0 24 = 255.255.255.0 25 = 255.255.255.128 26 = 255.255.255.192 27 = 255.255.255.224 28 = 255.255.255.240 29 = 255.255.255.248 30 = 255.255.255.252 31 = 255.255.255.254						
C8.3.7	Gateway	0.0.0.0 to 255.255.255.255		766	UDINT	766	ip_address	2
C8.3.8	Station Name Suffix	0 to 254	0	770	USINT	770	8bit	1
C8.3.9	Modbus TCP Timeout							
C8.3.9.1	Mode	0 = Inactive 1 = Fault F131 2 = Alarm A131		771	USINT	771	enum	1
C8.3.9.2	Alarm Action	0 = Indicates Only 1 = Ramp Stop 2 = General Disable 3 = Change to LOC 4 = Change to REM		772	USINT	772	enum	1
C8.3.9.3	Modbus TCP Timeout	0.0 to 999.9 s	1	759	UINT	759	16bit	1



Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C8.3.10	Off Line Error							
C8.3.10.1	Mode	0 = Inactive 1 = Fault F129 2 = Alarm A129		897	USINT	897	enum	1
C8.3.10.2	Alarm Action	0 = Indicates Only 1 = Ramp Stop 2 = General Disable 3 = Change to LOC 4 = Change to REM		898	USINT	898	enum	1
C8.3.11	Web Server Config	0 = Disabled 1 = Enabled		798	USINT	798	enum	1
C8.4	CANopen/DeviceNet							
C8.4.1	Protocol	0 = Disabled 1 = CANopen 2 = DeviceNet		700	USINT	700	enum	1
C8.4.2	Address	0 to 127	0	701	USINT	701	8bit	1
C8.4.3	Baud Rate	0 = 1 Mbps/Auto 1 = Reserved 2 = 500 Kbps 3 = 250 Kbps 4 = 125 Kbps 5 = 100 Kbps/Auto 6 = 50 Kbps/Auto 7 = 20 Kbps/Auto 8 = 10 Kbps/Auto		702	USINT	702	enum	1
C8.4.4	Bus Off Reset	0 = Manual 1 = Automatic		703	USINT	703	enum	1
C8.4.5	CAN Error							
C8.4.5.1	Mode	0 = Inactive 1 = Fault 2 = Alarm		723	USINT	723	enum	1
C8.4.5.2	Alarm Action	0 = Indicates Only 1 = Ramp Stop		724	USINT	724	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		2 = General Disable 3 = Change to LOC 4 = Change to REM						
C8.5	Ethernet							
C8.5.1	IP Address Config	0 = Parameters 1 = DHCP		850	USINT	850	enum	1
C8.5.2	IP Address	0.0.0.0 to 255.255.255.255		852	UDINT	852	ip_address	2
C8.5.3	CIDR Sub-net	0 = Reserved 1 = 128.0.0.0 2 = 192.0.0.0 3 = 224.0.0.0 4 = 240.0.0.0 5 = 248.0.0.0 6 = 252.0.0.0 7 = 254.0.0.0 8 = 255.0.0.0 9 = 255.128.0.0 10 = 255.192.0.0 11 = 255.224.0.0 12 = 255.240.0.0 13 = 255.248.0.0 14 = 255.252.0.0 15 = 255.254.0.0 16 = 255.255.0.0 17 = 255.255.128.0 18 = 255.255.192.0 19 = 255.255.224.0 20 = 255.255.240.0 21 = 255.255.248.0 22 = 255.255.252.0 23 = 255.255.254.0 24 = 255.255.255.0 25 = 255.255.255.128 26 = 255.255.255.192 27 = 255.255.255.224 28 = 255.255.255.240 29 = 255.255.255.248 30 = 255.255.255.252 31 = 255.255.255.254		855	USINT	855	enum	1
C8.5.4	Gateway	0.0.0.0 to 255.255.255.255		856	UDINT	856	ip_address	2

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C8.5.5	MBTCP: TCP Port	0 to 65535	0	865	UINT	865	16bit	1
C8.5.7	EIP Data Profile	0 ... 9 = Reserved 10 = 110/160-Configurable I/O		871	USINT	871	enum	1
C8.5.9	Modbus TCP Error							
C8.5.9.1	Mode	0 = Inactive 1 = Fault F149 2 = Alarm A149		893	USINT	893	enum	1
C8.5.9.2	Alarm Action	0 = Indicates Only 1 = Ramp Stop 2 = General Disable 3 = Change to LOC 4 = Change to REM		894	USINT	894	enum	1
C8.5.9.3	Timeout	0.0 to 999.9 s	1	868	UINT	868	16bit	1
C8.5.10	EtherNet/IP Error							
C8.5.10.1	Mode	0 = Inactive 1 = Fault F147 2 = Alarm A147		895	USINT	895	enum	1
C8.5.10.2	Alarm Action	0 = Indicates Only 1 = Ramp Stop 2 = General Disable 3 = Change to LOC 4 = Change to REM		896	USINT	896	enum	1
C8.5.11	Web Server Config	0 = Disabled 1 = Enabled		798	USINT	798	enum	1
C8.6	Bluetooth							
C8.6.1	Mode	0 = Off 1 = On		800	USINT	800	enum	1
C9 Configurations\SSW900								
C9.1	Nominal Data							
C9.1.1	Current	0 = 10 A 1 = 17 A 2 = 24 A 3 = 30 A		295	USINT	295	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		4 = 45 A 5 = 61 A 6 = 85 A 7 = 105 A 8 = 130 A 9 = 171 A 10 = 200 A 11 = 255 A 12 = 312 A 13 = 365 A 14 = 412 A 15 = 480 A 16 = 604 A 17 = 670 A 18 = 820 A 19 = 950 A 20 = 1100 A 21 = 1400 A						
C9.2	Types of Connections							
C9.2.1	Delta Inside	0 = Off 1 = On		150	USINT	150	enum	1
C9.2.2	External Bypass	0 = Without 1 = With		140	USINT	140	enum	1
C9.3	Accessories Config.							
C9.3.1	Slot 1	0 = Automatic 1 = Anybus-CC 2 = RS-485 3 = PT100 4 = I/Os Exp. 5 = Profibus 6 = CAN 7 = Ethernet 8 = External Current Acqu.		337	USINT	337	enum	1
C9.3.2	Slot 2	0 = Automatic 1 = Anybus-CC 2 = RS-485 3 = PT100		338	USINT	338	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		4 = I/Os Exp. 5 = Profibus 6 = CAN 7 = Ethernet 8 = External Current Acqu.						
C9.4	Fan Configuration							
C9.4.1	Mode	0 = Always Off 1 = Always On 2 = Controlled		203	USINT	203	enum	1
C10 Configurations\Load / Save Parameters								
C10.1	Load / Save User							
C10.1.1	Mode	0 = Not Used 1 = Load User 1 2 = Load User 2 3 = Reserved 4 = Save User 1 5 = Save User 2 6 = Reserved		206	USINT	206	enum	1
C10.2	Copy Function HMI							
C10.2.1	Mode	0 = Off 1 = SSW -> HMI 2 = HMI -> SSW		319	USINT	319	enum	1
C10.3	Erase Diagnostics							
C10.3.1	Mode	0 ... 1 = Not Used 2 = Fault 3 = Alarms 4 = Events 5 = Motor ON 6 = Temperaturas 7 = Hours Control 8 = Thermal Class Status		205	USINT	205	enum	1
C10.4	Load Factory Default							
C10.4.1	Mode	0 = No 1 = Yes		204	USINT	204	enum	1
C10.5	Save Changed Param.							
C10.5.1	Mode			209	USINT	209	enum	1

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
		0 = No 1 = Yes						
C11 Configurations\SoftPLC								
C11.1	Mode	0 = Stop Program 1 = Run Program		1101	USINT	1101	enum	1
C11.2	Action App. Not Running	0 = Inactive 1 = Alarm A708 2 = Fault F708		1103	USINT	1103	enum	1
C11.3	Parameter							
C11.3.1	User #1	-10000 to 10000	0	1110	DINT	1110	s32bit	2
C11.3.2	User #2	-10000 to 10000	0	1112	DINT	1112	s32bit	2
C11.3.3	User #3	-10000 to 10000	0	1114	DINT	1114	s32bit	2
C11.3.4	User #4	-10000 to 10000	0	1116	DINT	1116	s32bit	2
C11.3.5	User #5	-10000 to 10000	0	1118	DINT	1118	s32bit	2
C11.3.6	User #6	-10000 to 10000	0	1120	DINT	1120	s32bit	2
C11.3.7	User #7	-10000 to 10000	0	1122	DINT	1122	s32bit	2
C11.3.8	User #8	-10000 to 10000	0	1124	DINT	1124	s32bit	2
C11.3.9	User #9	-10000 to 10000	0	1126	DINT	1126	s32bit	2
C11.3.10	User #10	-10000 to 10000	0	1128	DINT	1128	s32bit	2
C11.3.11	User #11	-10000 to 10000	0	1130	DINT	1130	s32bit	2
C11.3.12	User #12	-10000 to 10000	0	1132	DINT	1132	s32bit	2
C11.3.13	User #13	-10000 to 10000	0	1134	DINT	1134	s32bit	2
C11.3.14	User #14	-10000 to 10000	0	1136	DINT	1136	s32bit	2
C11.3.15	User #15	-10000 to 10000	0	1138	DINT	1138	s32bit	2
C11.3.16	User #16	-10000 to 10000	0	1140	DINT	1140	s32bit	2
C11.3.17	User #17	-10000 to 10000	0	1142	DINT	1142	s32bit	2
C11.3.18	User #18	-10000 to 10000	0	1144	DINT	1144	s32bit	2
C11.3.19	User #19	-10000 to 10000	0	1146	DINT	1146	s32bit	2
C11.3.20	User #20	-10000 to 10000	0	1148	DINT	1148	s32bit	2
C11.3.21	User #21	-10000 to 10000	0	1150	DINT	1150	s32bit	2
C11.3.22	User #22	-10000 to 10000	0	1152	DINT	1152	s32bit	2
C11.3.23	User #23	-10000 to 10000	0	1154	DINT	1154	s32bit	2
C11.3.24	User #24	-10000 to 10000	0	1156	DINT	1156	s32bit	2
C11.3.25	User #25	-10000 to 10000	0	1158	DINT	1158	s32bit	2
C11.3.26	User #26	-10000 to 10000	0	1160	DINT	1160	s32bit	2
C11.3.27	User #27	-10000 to 10000	0	1162	DINT	1162	s32bit	2
C11.3.28	User #28	-10000 to 10000	0	1164	DINT	1164	s32bit	2
C11.3.29	User #29	-10000 to 10000	0	1166	DINT	1166	s32bit	2
C11.3.30	User #30	-10000 to 10000	0	1168	DINT	1168	s32bit	2

Parameter	Description	Range of values	Decimal places	Instance Class=A2h Attr=5	CIP data type	Net Id	Size	Qty mapped words
C11.3.31	User #31	-10000 to 10000	0	1170	DINT	1170	s32bit	2
C11.3.32	User #32	-10000 to 10000	0	1172	DINT	1172	s32bit	2
C11.3.33	User #33	-10000 to 10000	0	1174	DINT	1174	s32bit	2
C11.3.34	User #34	-10000 to 10000	0	1176	DINT	1176	s32bit	2
C11.3.35	User #35	-10000 to 10000	0	1178	DINT	1178	s32bit	2
C11.3.36	User #36	-10000 to 10000	0	1180	DINT	1180	s32bit	2
C11.3.37	User #37	-10000 to 10000	0	1182	DINT	1182	s32bit	2
C11.3.38	User #38	-10000 to 10000	0	1184	DINT	1184	s32bit	2
C11.3.39	User #39	-10000 to 10000	0	1186	DINT	1186	s32bit	2
C11.3.40	User #40	-10000 to 10000	0	1188	DINT	1188	s32bit	2
C11.3.41	User #41	-10000 to 10000	0	1190	DINT	1190	s32bit	2
C11.3.42	User #42	-10000 to 10000	0	1192	DINT	1192	s32bit	2
C11.3.43	User #43	-10000 to 10000	0	1194	DINT	1194	s32bit	2
C11.3.44	User #44	-10000 to 10000	0	1196	DINT	1196	s32bit	2
C11.3.45	User #45	-10000 to 10000	0	1198	DINT	1198	s32bit	2
C11.3.46	User #46	-10000 to 10000	0	1200	DINT	1200	s32bit	2
C11.3.47	User #47	-10000 to 10000	0	1202	DINT	1202	s32bit	2
C11.3.48	User #48	-10000 to 10000	0	1204	DINT	1204	s32bit	2
C11.3.49	User #49	-10000 to 10000	0	1206	DINT	1206	s32bit	2
C11.3.50	User #50	-10000 to 10000	0	1208	DINT	1208	s32bit	2
C11.4	SoftPLC Application	0 = User 1 = Timer Control 2 = Pump Cleaning		1104	USINT	1104	enum	1
A1 Assistant\Oriented Start-up								
A1.1	Mode	0 = No 1 = Yes		317	USINT	317	enum	1

## QUICK REFERENCES

**Table 10.3:** Description of the parameter data types

Data Type	Description
enum	Enumerated type (unsigned 8-bit) contains a list of values with function description for each item.
8bit	Unsigned 8-bit integer, ranges from 0 to 255.
16bit	Unsigned 16-bit integer, ranges from 0 to 65,535.
s16bit	Signed 16-bit integer, ranges from -32,768 to 32,767.
32bit	Unsigned 32-bit integer, ranges from 0 to 4,294,967,295.
s32bit	Signed 32-bit integer, ranges from -2,147,483,648 to 2,147,483,647.
date	Displays the date and time value in the format below: second (1 byte) minute (1 byte) hour (1 byte) day (1 byte) month (1 byte) reserved (1 byte) year (2 bytes)
TIME	Displays the time in the format hh:mm:ss. For network protocols, this data type is transferred as an unsigned 32-bit integer value representing the number of seconds.
ip_address	Unsigned 32-bit integer representing the octets of the IP address.
MAC_ADDRESS	48-bit identifier displayed in XX:XX:XX:XX:XX:XX format.
STRING_ASCII	Text string. For network protocols, this data type is transferred as a string filled with zeros (0) to the end (maximum parameter size plus one).





**BRAZIL**

**WEG DRIVES & CONTROLS - AUTOMAÇÃO LTDA.**

Av. Prefeito Waldemar Grubba, 3000

89256-900 - Jaraguá do Sul - SC

Phone: 55 (47) 3276-4000

Fax: 55 (47) 3276-4060

**[www.weg.net/br](http://www.weg.net/br)**