



MMW03

Multimeter



MMW03 - multimeter

Designed to measure:

- Phase - neutral voltages;
- Phase - phase voltages;
- Phase current;
- Frequency




MMW03 - multimeter

Other Functions:

- Indication of phase loss and phase sequence error;
- 4-digit password.

Front panel

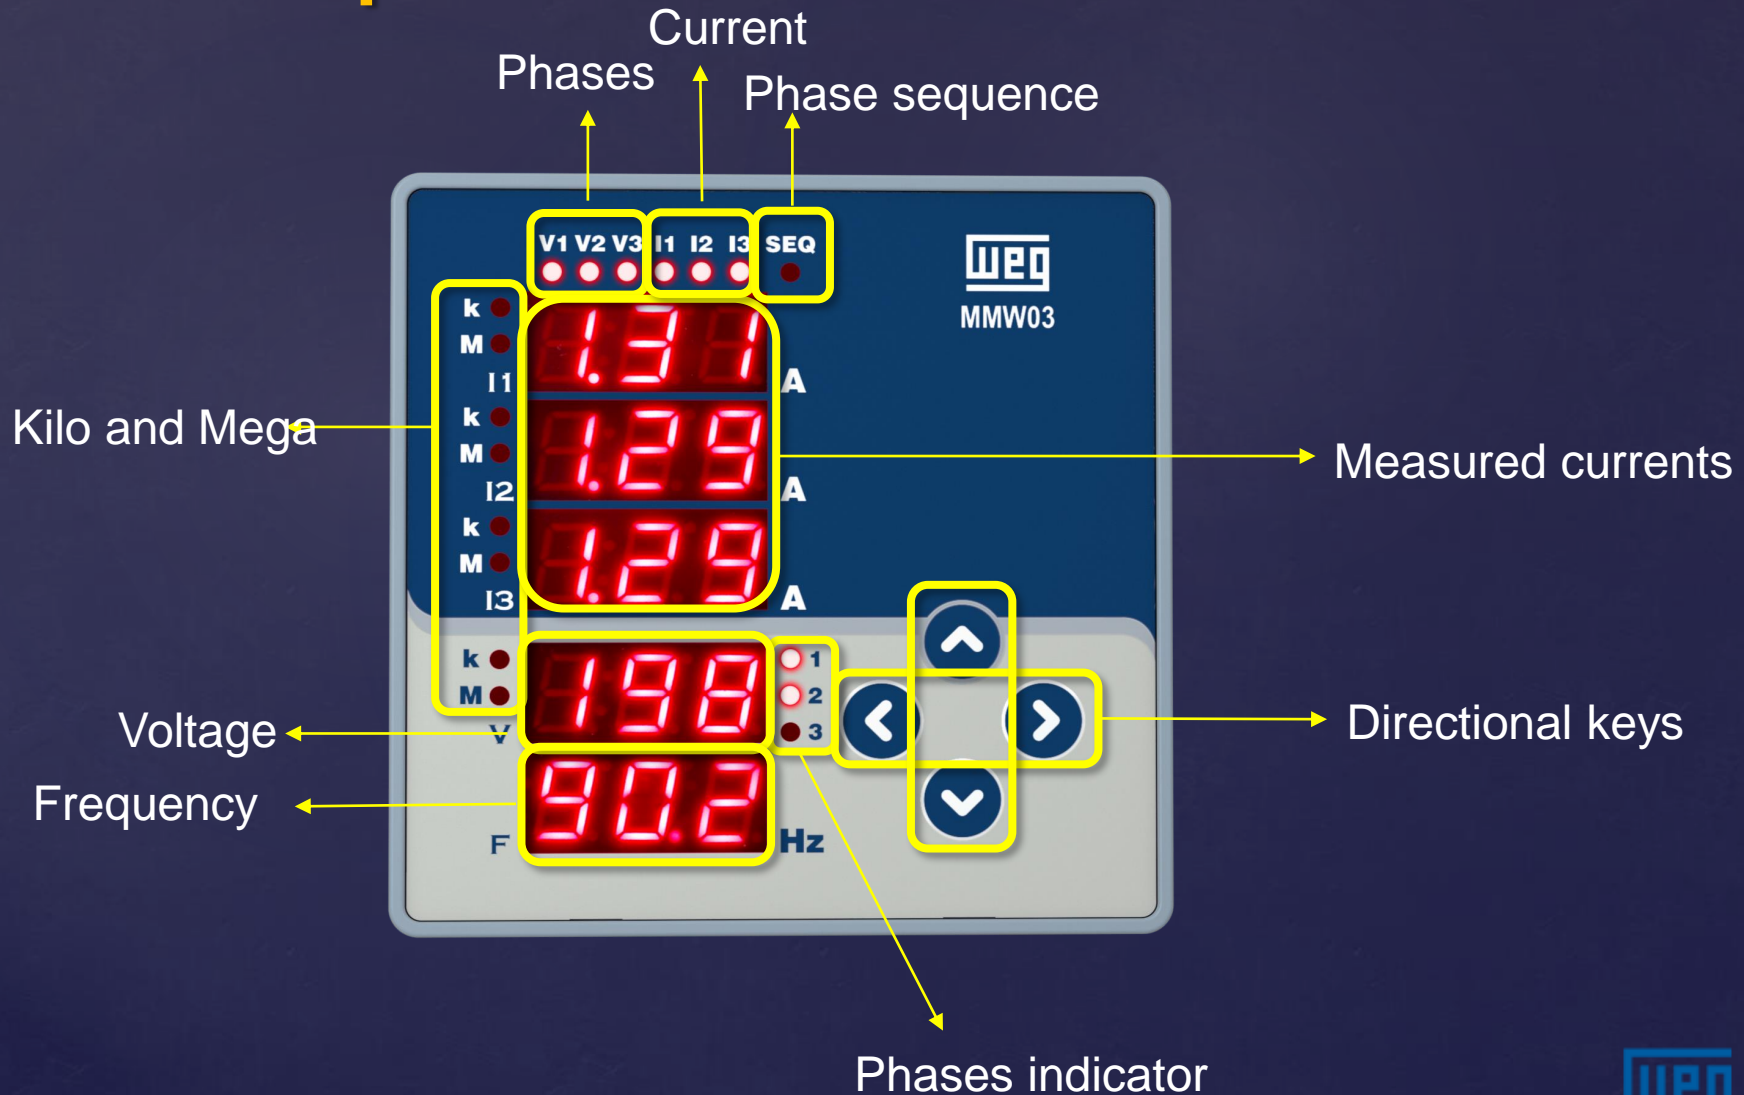


Measurement menus

Voltage V1




Measurement menus

Voltage V2

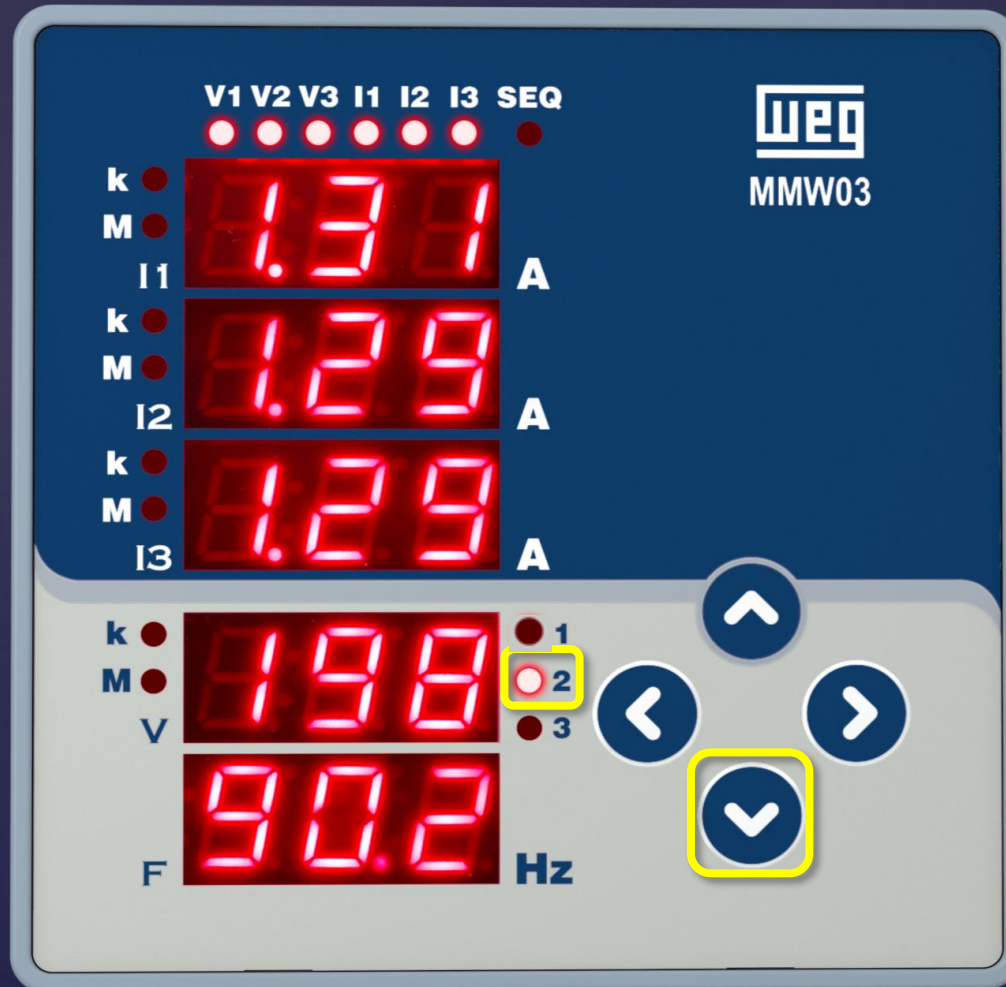


Measurement menus

Voltage V3

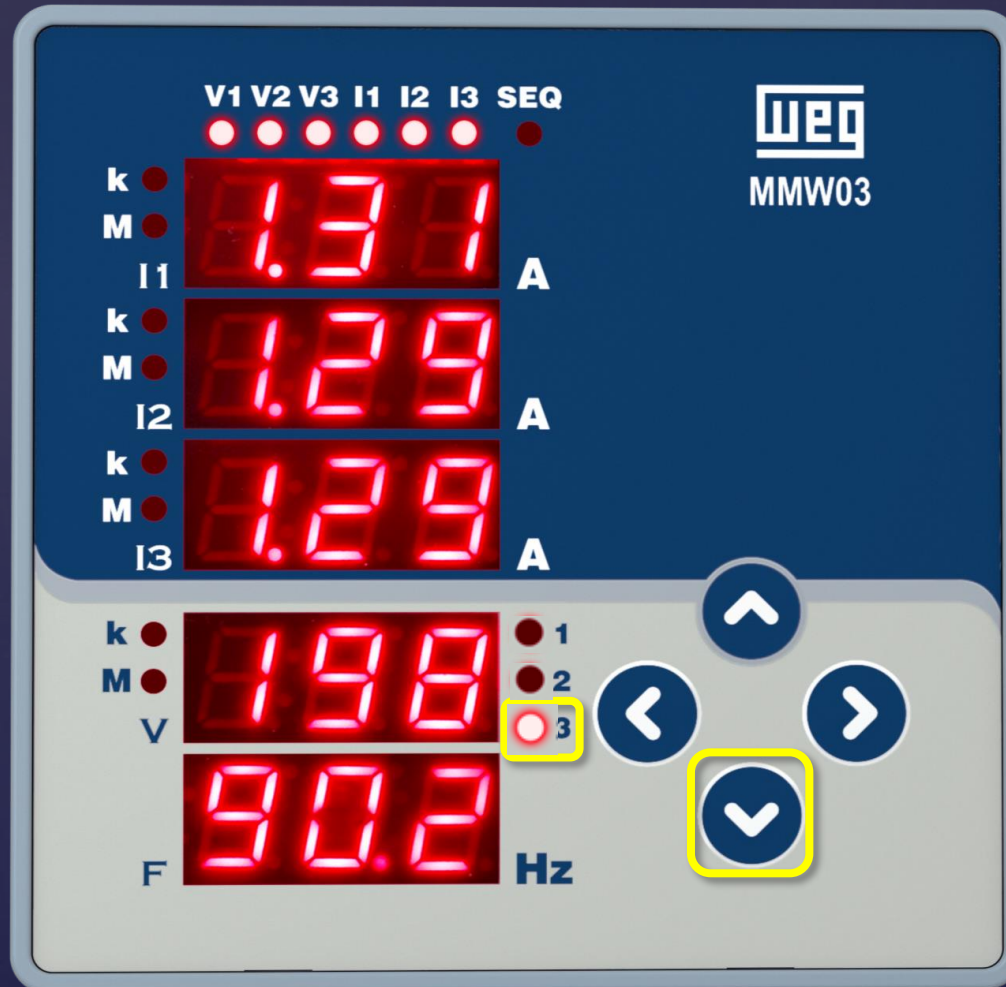


Measurement menus

Voltage V1-2

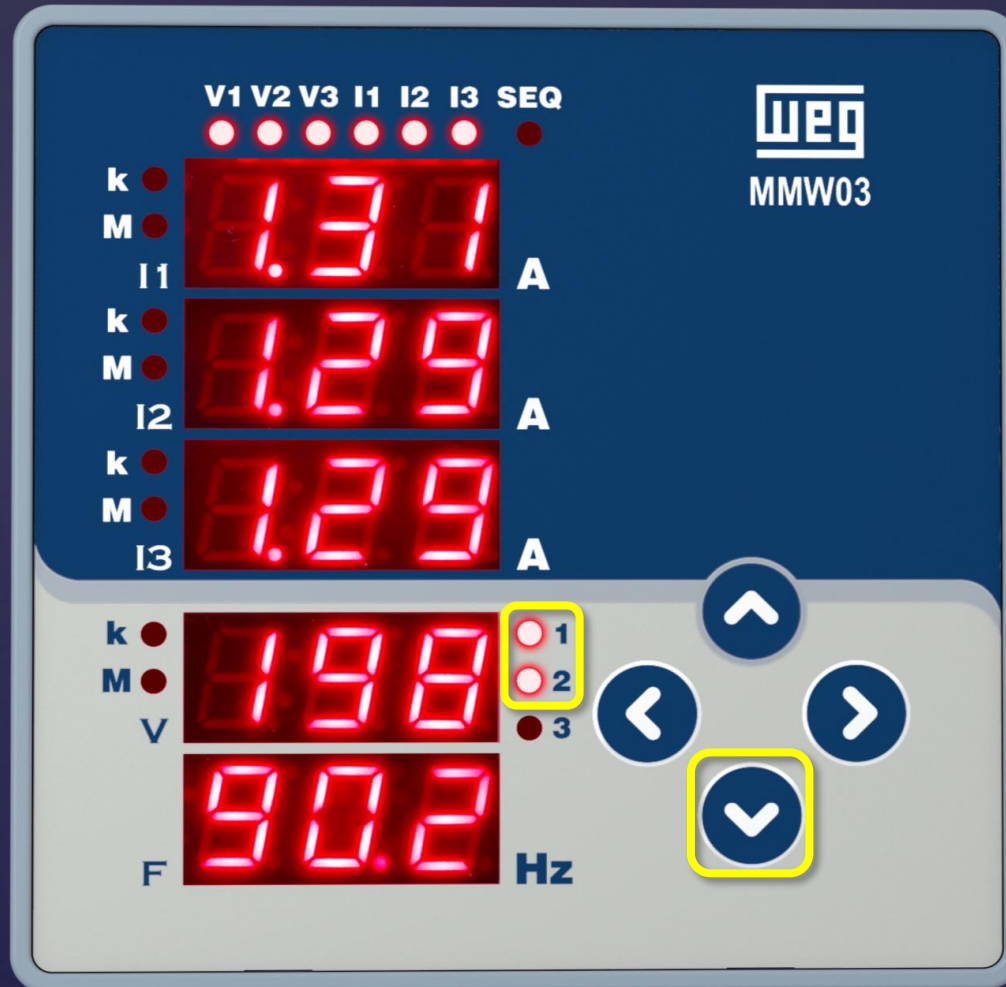


Measurement menus

Voltage V2-3

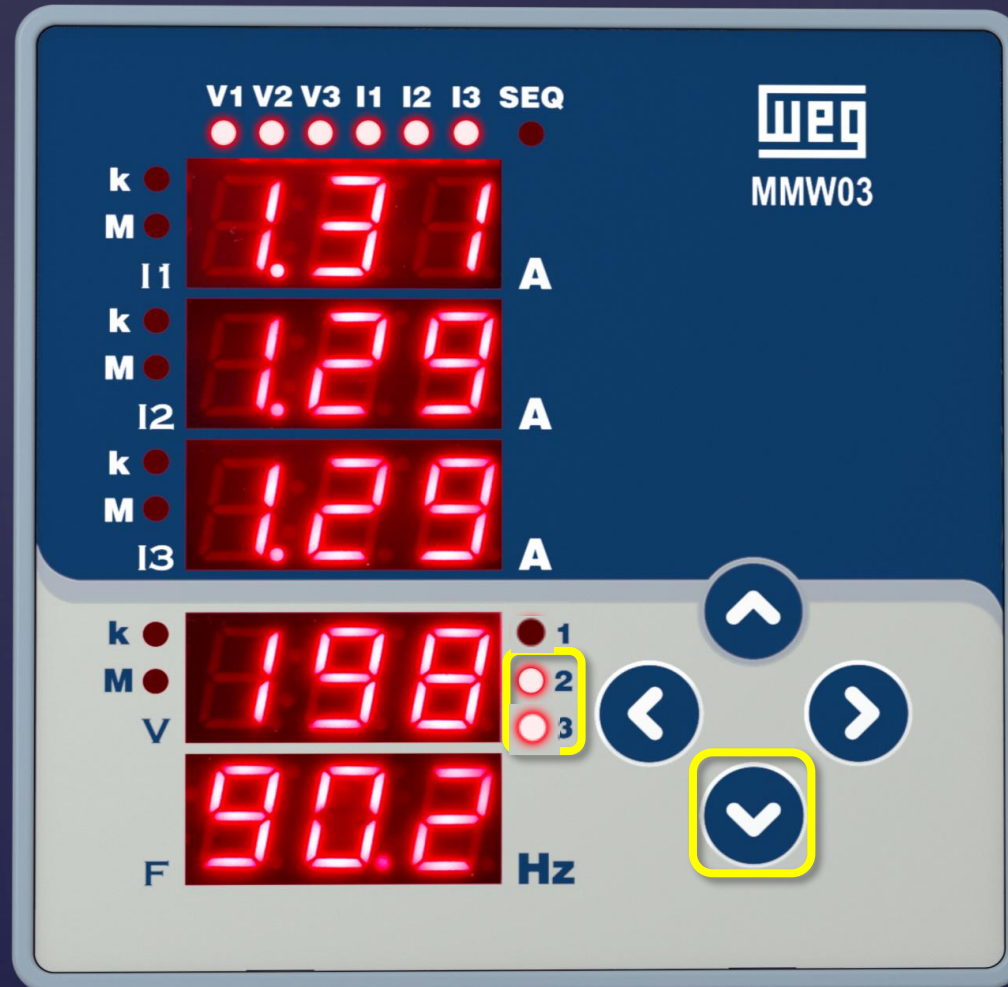

Measurement menus

Voltage V1-3

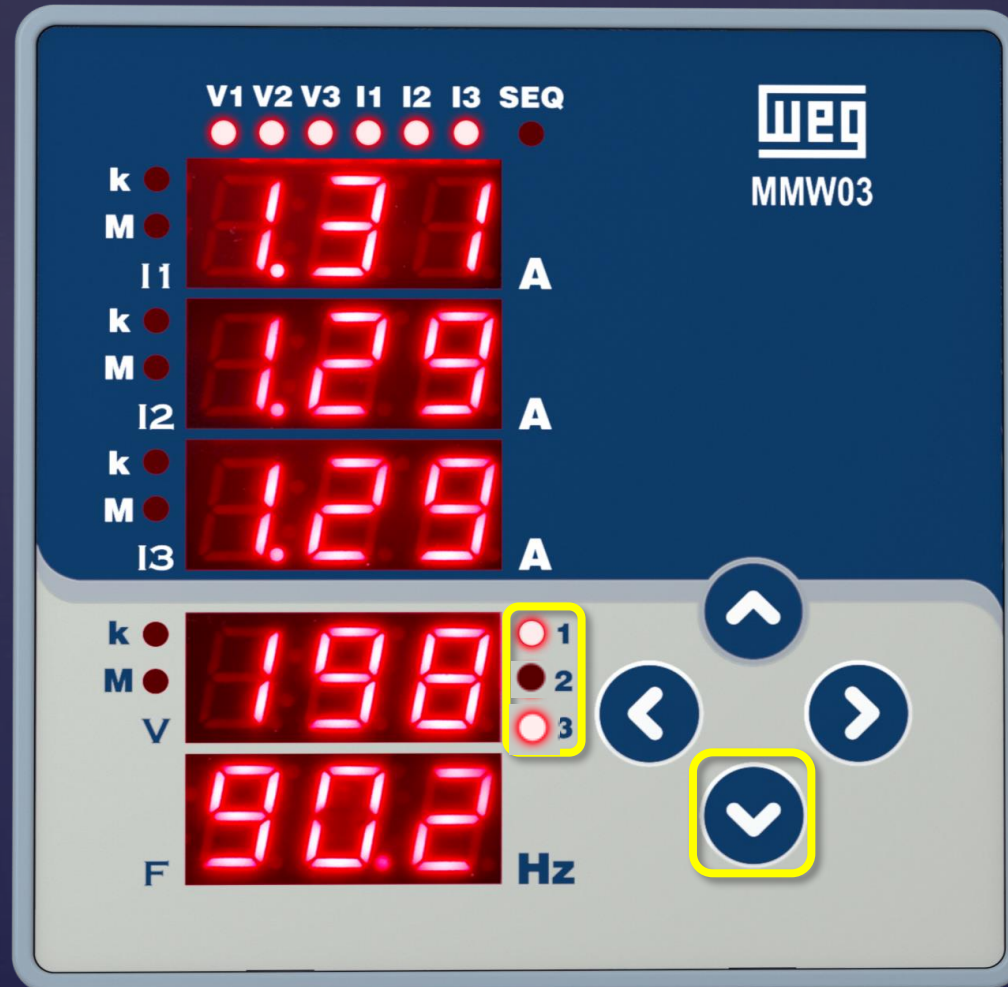



Settings menu

The parameters of the MMW03 are set in the "SEt Menu".

To access this menu, press the right key for more than 1 second.

The SEt menu will be available.



3 submenus are available:

1. Bsc = Basic settings;
2. Sec = Security. Password setting;
3. Scr = Screen scrolling menu;

Settings menu - BASIC (bSc)

In this menu you set:


- Current transformer ratio;
- Voltage transformer ratio;
- Definition of the electrical system connection type

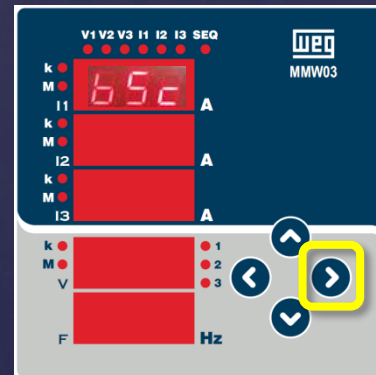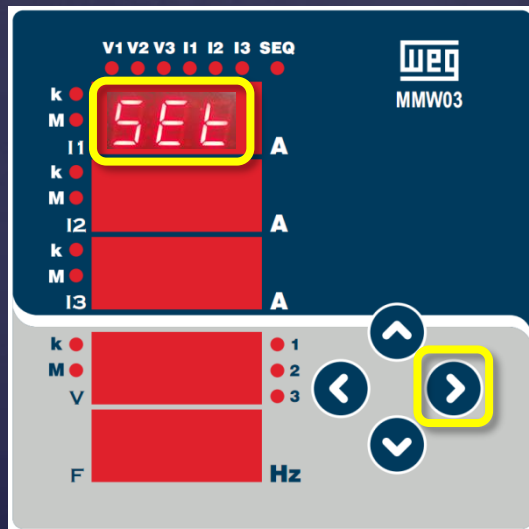


BASIC



CTR

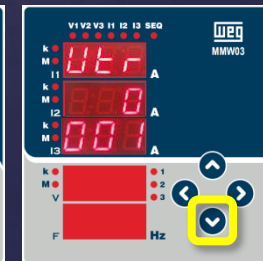

VTR

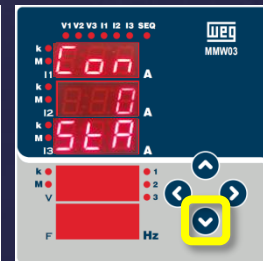

CONNECTION



CTR: 1-5000

VTR: 1.0-5000.0


Connection: STAR (3P4W), DELTA (3P3W)

Settings menu - security


Submenu to activate the password, set the password activation time and define the password

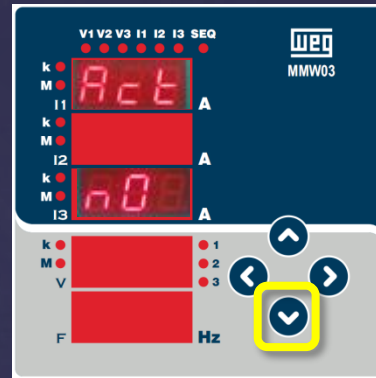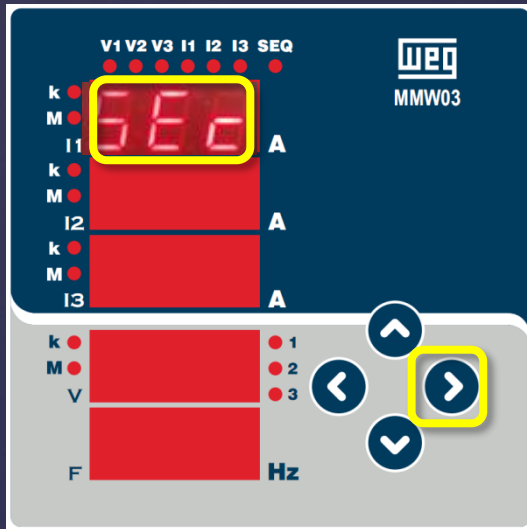

Activation

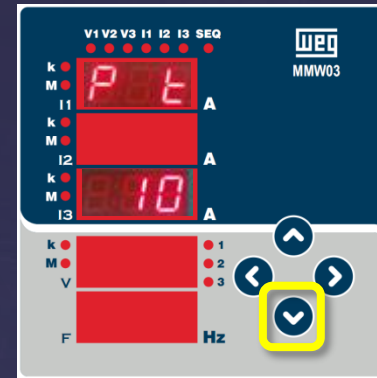

Pin Time


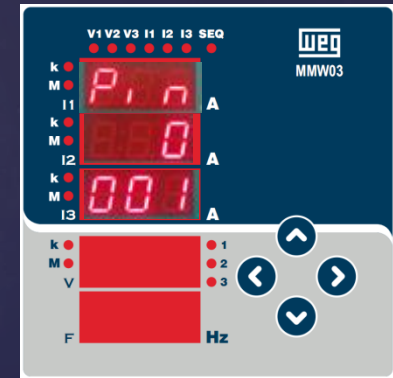


Password


- **Act = Activation** – Enable/disable password protection (NO/YES)
- **P t = Pin Time**: Password protection duration time. If no keys are pressed or no functions are executed, the password protection is reactivated after the time set (1-60 min)
- **Pin = Password**: Change the password (1 - 9999)

Settings menu - Scrolling

In the scroll menu, you can activate a function to alternate the screens after a time set.

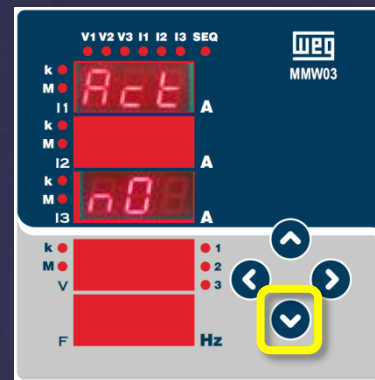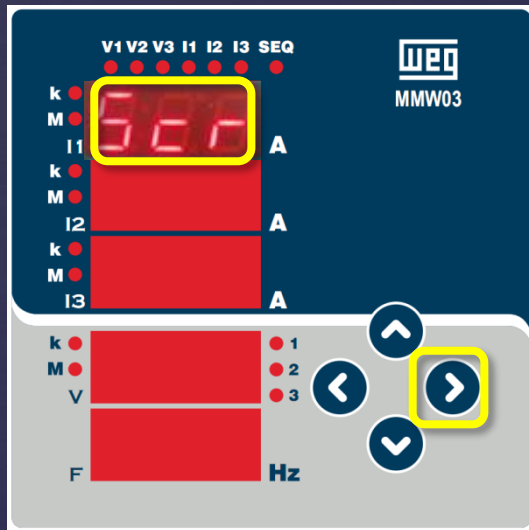

Activation

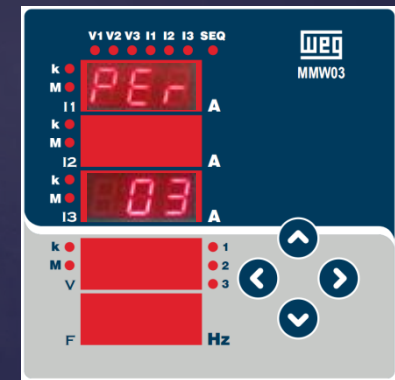


Period

Act = Activation - If "YES" is selected, the scroll menu is activated after the device has been inactive for 15 seconds. The next screen is displayed, and again after 15 s a new screen is displayed.

PER = Period: Each menu is displayed for the period set in the PER menu.

Settings menu - Clear


This menu restores the factory settings.

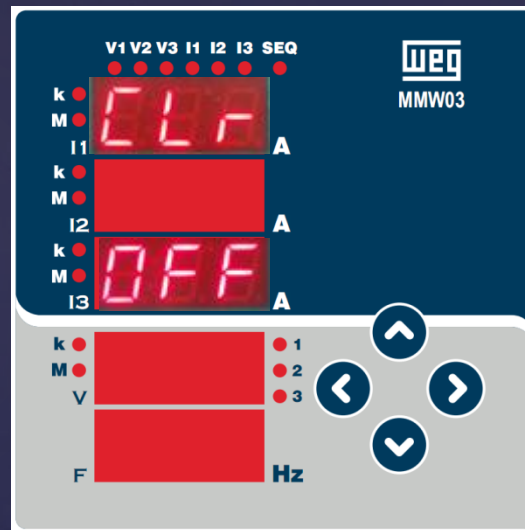

- **OFF** : Disables the clear function.
- **Set** : Restores the factory settings.

SETTINGS MENU - VER

This menu shows the device firmware version

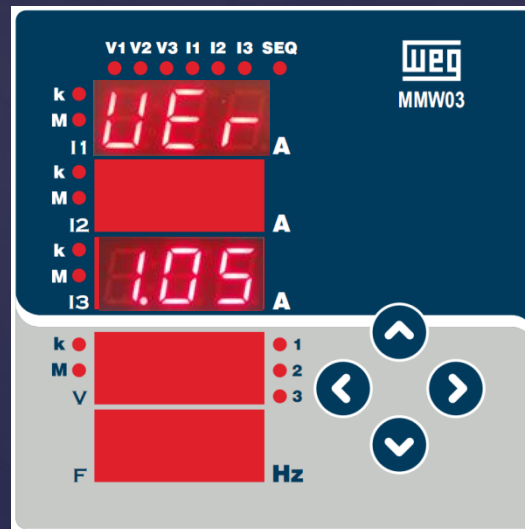

SAVE procedure

Press the left soft key to the "SAU" screen.

Press the key until "YES" or "NO" is displayed to confirm the changes in the settings.

To confirm the changes:



Press the right button until "YES" flashes. Then press the left key to save the changes.

To discard the changes:



Press the right button until "nO" flashes. Then exit the settings menu.

Technical specifications

Power supply

Voltage85..300V AC/DC
Frequency45..65 Hz
Consumption<6VA

Measurement inputs

Voltage5..300V AC (L - N)10..500V AC (L - L)
Current10mA..6A AC
Frequency45..65Hz
Connection type3 phase 4 wire, 3 phase 3 wire

Operating temperature / storage / air relative humidity

-20°C..+60°C / -30°C..+80°C / maximum 95% non-condensing

Protection rating

Front = IP40; Rear = IP20



WEG Drives & Controls

Thank you!