



Manopla Rotativa para Montagem em Painel MPW65 ( RMMP65 / RMMP65-E)  
Door Coupling Handle MPW65 ( RMMP65 / RMMP65-E)  
Manja Rotativa para Puerta de Tableros MPW65 ( RMMP65 / RMMP65-E)  
Türkupplungsgriff MPW65 ( RMMP65 / RMMP65-E)

Compatível com disjuntor MPW65 a partir da versão V3A.  
Compatible with motor protective circuit breaker MPW65 after version V3A.  
Compatible con interruptor MPW65 después de la versión V3A.  
Kompatibel mit Leistungsschalter MPW65 ab Version V3A.

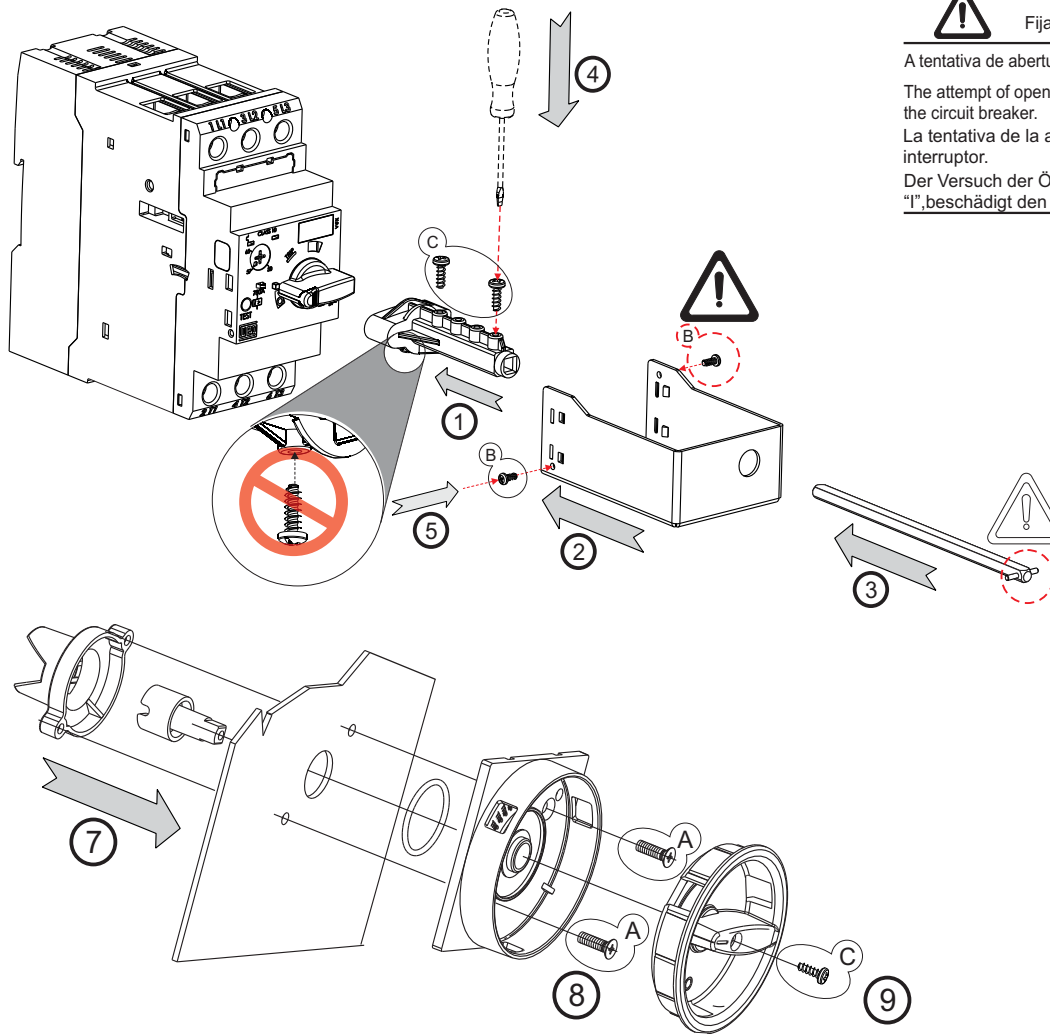


Montagem MPW65 / MPW65 Assembly  
Montaje MPW65 / Einbaulage MPW65

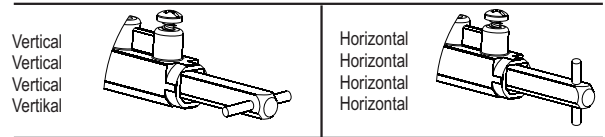

Fixação do Suporte / Fastening of the Support  
Fijación del Soporte / Befestigungsvorrichtung aufkleben

A tentativa de abertura do painel com MPW65 na posição "I", danificará o disjuntor.  
The attempt of opening of the panel with the MPW65 in the "I" position, will damage the circuit breaker.  
La tentativa de la abertura del panel con MPW65 en la posición "I", dañará el interruptor.  
Der Versuch der Öffnung der Schaltschranke mit dem MPW65 in der Pos. "I", beschädigt den Leistungsschalter.

Furação da porta do painel  
Drilling the panel door  
Agujero en la puerta de tableros  
Bohren der Schaltschranktür

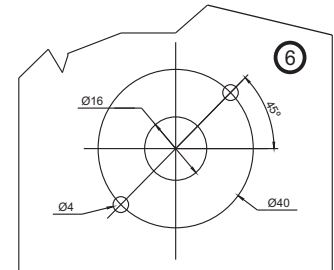


2	A	PHILLIPS #2 Ø3.5 X 10
	B	PHILLIPS #1 Ø2.2 X 6
3	C	PHILLIPS #2 Ø3 X 10

**- Atensão / Warning / Atención / Warnung**

A porta do painel só poderá ser aberta com o MPW na posição "O"  
The panel door can be opened only with the MPW in the "O" position  
Apertura de la puerta del tablero solamente con MPW en la posición desconectado  
Die Schaltschranktür kann nur bei Pos. "O" MPW geöffnet werden

Dimensão mínima para corte do eixo (mm)  
Minimum dimension for cut the shaft (mm)  
Dimensiones mínimas para corte del eje (mm)  
Mindestmaß für das Kürzen der Achse (mm)

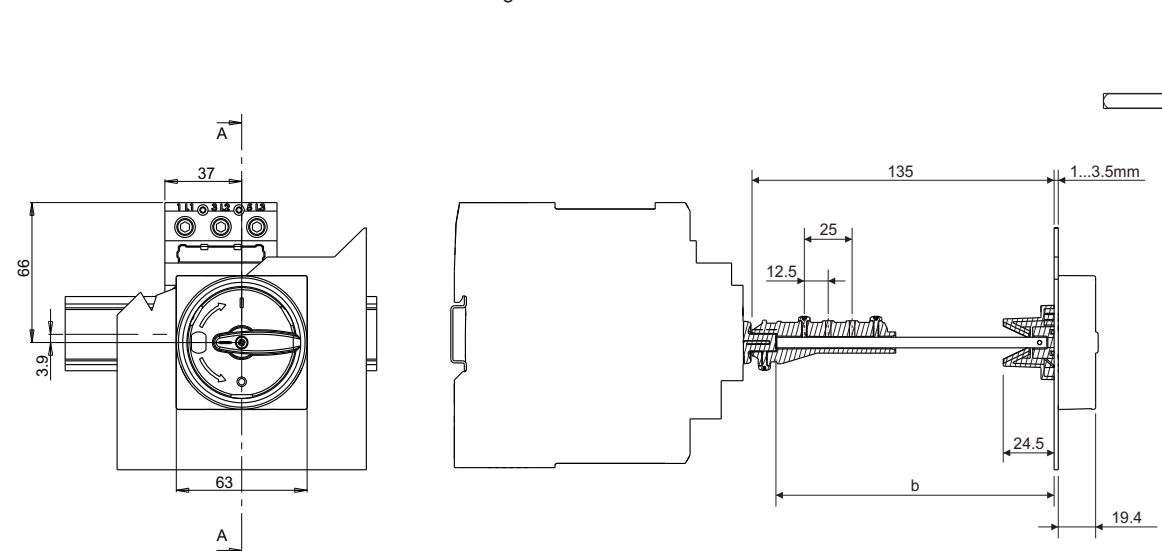

b (mm)	Possibilidade de ajuste Possible adjustment Posibilidad del ajuste Mögliche Einstellung
130	130 ... 155
330	330 ... 355