


Profibus DP

MW500

User's Manual

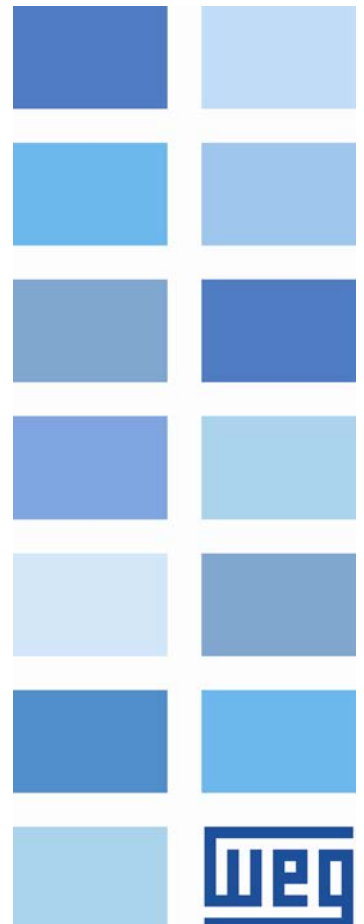



Profibus DP User's Manual

Series: MW500

Language: English

Document Number: 10002253059 / 00

Publication Date: 03/2020

CONTENTS

CONTENTS	3
ABOUT THIS MANUAL.....	5
ABBREVIATIONS AND DEFINITIONS	5
NUMERICAL REPRESENTATION	5
1 INTRODUCTION TO THE PROFIBUS DP PROTOCOL	6
1.1 PROFIBUS DP NETWORK	6
1.2 PROFIBUS DP PROTOCOL VERSIONS	6
1.3 DEVICE TYPES IN A PROFIBUS DP NETWORK	6
1.4 PHYSICAL LAYER.....	6
1.5 APPLICATION PROFILE - PROFIDRIVE	7
2 PROFIBUS DP COMMUNICATION ACCESSORY	8
2.1 PLUG-IN MODULE CFW500-CPDP2.....	8
2.2 CONNECTOR PINOUT.....	8
2.3 INDICATIONS.....	8
2.4 DIP SWITCHES	8
3 INSTALLATION IN THE PROFIBUS DP NETWORK	9
3.1 BAUD RATES	9
3.2 ADDRESSING.....	9
3.3 CABLE	9
3.4 CONNECTORS.....	9
3.5 CONNECTION TO THE NETWORK	9
3.6 TERMINATING RESISTOR.....	10
3.7 GSD FILE	10
4 PROGRAMMING	11
4.1 SYMBOLS FOR THE PROPERTIES DESCRIPTION	11
P0105 – 1 ST /2 ND RAMP SELECTION.....	11
P0220 – LOCAL/REMOTE SELECTION SOURCE	11
P0221 – SPEED REFERENCE SELECTION – LOCAL SITUATION	11
P0222 – SPEED REFERENCE SELECTION – REMOTE SITUATION	11
P0223 – FORWARD/REVERSE SELECTION – LOCAL SITUATION.....	11
P0224 – RUN/STOP SELECTION – LOCAL SITUATION	11
P0225 – JOG SELECTION – LOCAL SITUATION	11
P0226 – FORWARD/REVERSE SELECTION – REMOTE SITUATION	11
P0227 – RUN/STOP SELECTION – REMOTE SITUATION	11
P0228 – JOG SELECTION – REMOTE SITUATION	11
P0313 – COMMUNICATION ERROR ACTION	11
P0680 – STATUS WORD	12
P0681 – MOTOR SPEED IN 13 BITS	13
P0684 – PROFIBUS DP CONTROL WORD.....	14
P0685 – PROFIBUS DP SPEED REFERENCE.....	14
P0695 – DIGITAL OUTPUT SETTING	15
P0696 – VALUE 1 FOR ANALOG OUTPUTS	16
P0697 – VALUE 2 FOR ANALOG OUTPUTS	16
P0698 – VALUE 3 FOR ANALOG OUTPUTS	16
P0740 – PROFIBUS DP COMMUNICATION STATUS.....	17
P0741 – PROFIBUS/PROFINET DATA PROFILE.....	17
P0742 – PROFIBUS READING #3	19

P0743 – PROFIBUS READING #4	19
P0744 – PROFIBUS READING #5	19
P0745 – PROFIBUS READING #6	19
P0746 – PROFIBUS READING #7	19
P0747 – PROFIBUS READING #8	19
P0750 – PROFIBUS WRITING #3	19
P0751 – PROFIBUS WRITING #4	19
P0752 – PROFIBUS WRITING #5	19
P0753 – PROFIBUS WRITING #6	19
P0754 – PROFIBUS WRITING #7	19
P0755 – PROFIBUS WRITING #8	19
P0918 – PROFIBUS ADDRESS	20
P0922 – SELECTION OF THE CONFIGURATION TELEGRAM	20
P0963 – PROFIBUS BAUD RATE DETECTION	21
P0967 – PROFIDRIVE CONTROL WORD	21
P0968 – PROFIDRIVE STATUS WORD	22
5 PROFIBUS DP NETWORK OPERATION	24
5.1 PROFIBUS DP-V0	24
5.1.1 Cyclic Data	24
5.1.2 SYNC/FREEZE	24
5.2 PROFIBUS DP-V1	24
5.2.1 Available Services for Acyclic Communication	24
5.2.2 Data Addressing	25
5.2.3 Reading/Writing DP-V1 Telegrams	25
5.2.4 Data Structure for Parameter Access – PROFIdrive	26
5.2.5 Data Structure for Parameter Access – WEG	28
6 FAULTS AND ALARMS RELATED TO THE PROFIBUS DP COMMUNICATION	29
A138/F238 – PROFIBUS DP INTERFACE IN CLEAR MODE	29
A139/F239 – PROFIBUS DP INTERFACE OFFLINE	29
A140/F240 – PROFIBUS DP MODULE ACCESS ERROR	29

ABOUT THIS MANUAL

This manual provides the necessary information for the operation of the MW500 frequency inverted using the Profibus DP Interface. This manual must be used together with the MW500 User's Guide.

ABBREVIATIONS AND DEFINITIONS

DP	Decentralized Periphery
EIA	Electronic Industries Alliance
I/O	Input/Output
SAP	Service Access Point

NUMERICAL REPRESENTATION

Decimal numbers are represented by means of digits without suffix. Hexadecimal numbers are represented with the letter 'h' after the number.

1 INTRODUCTION TO THE PROFIBUS DP PROTOCOL

A general overview of Profibus DP protocol, describing the main characteristics and functions, are presented next.

1.1 PROFIBUS DP NETWORK

The term Profibus is used to describe a digital communication system that can be used in several application areas. It is an open and standardized system, defined by the IEC 61158 and IEC 61784 standards, which comprises from the used physical medium to data profiles for certain sets of equipments. In this system, the DP communication protocol was developed with the purpose of allowing a fast, cyclic and deterministic communication between masters and slaves.

Among the several communication technologies that can be used in this system, the Profibus DP technology describes a solution that, typically, is composed by the DP protocol, RS485 transmission medium and application profiles, used mainly in applications and equipments with emphasis in manufacturing automation.

Nowadays, there is an organization named Profibus International, responsible for keeping, updating and publishing the Profibus technology among users and members. More information regarding the technology, as well as the complete protocol specification can be obtained with this organization or with one of the regional associations or competence centers associated to the Profibus International (<http://www.profibus.com>).

1.2 PROFIBUS DP PROTOCOL VERSIONS

The Profibus DP protocol defines a series of functions for exchanging data between master and slave. The set of functions can be divided in different functional levels, in the following versions:

- **DP-V0:** It is the first version of the protocol, which mainly defines functions to perform cyclic data exchange between master and slave.
- **DP-V1:** It is an extension of the functions defined in the first version; it defines particularly how to perform the exchange of acyclic data between master and slave, besides the cyclic data.
- **DP-V2:** It defines a set of advanced functions such as communication between slaves and isochronous communication mode.

The MW500 frequency inverted supports the services of the DP-V0 and DP-V1 versions.

1.3 DEVICE TYPES IN A PROFIBUS DP NETWORK

Three different types of equipment are specified in a Profibus network:

- **Slaves:** They are passive stations in the network, which only answer to the requests made by the master.
- **Class 1 Master:** It is responsible for the cyclic data exchange. Typically represented by the PLC, or process or plant control software.
- **Class 2 Master:** It allows the communication in the Profibus DP network through acyclic messages. Typically represented by an engineering or configuration tool used for network commissioning or maintenance.

The MW500 frequency inverted operates as a slave in the Profibus DP network.

1.4 PHYSICAL LAYER

There are different network transmission types to allow communication in a Profibus network, each one with suitable features according to the demands of different application types. The main transmission modes are:

- **RS485:** this is the most used **transmission type** for Profibus network. It provides high transmission rates, simple installation and low cost.
- **MBP:** this is specified mainly for applications in chemical and petrochemical industries, for communication in safety areas. The transmission rate is defined at 31.25 kbit/s with the possibility of feeding the devices from the communication bus.
- **Optical Fiber:** this is used mainly in applications where high electromagnetic interference immunity and/or great distances connections are required.

The Profibus DP accessory of the MW500 frequency inverted provides an RS485 interface for network connection.

1.5 APPLICATION PROFILE – PROFIDRIVE


Complementary to the Profibus protocol specification, the PROFdrive specification, elaborated and kept by the *Profibus International*, basically describes a set of parameters and services common for the “drive” type equipments in a Profibus network. The purpose of this specification is to facilitate the integration of drives in a Profibus network.

The Profibus DP interface for MW500 frequency inverted was developed in accordance with the PROFdrive specification. Thus, several of the parameters, communication words and data access services of the drive are described in accordance with this specification.

2 PROFIBUS DP COMMUNICATION ACCESSORY

The following Profibus DP accessory is needed in order to enable the device communication in a Profibus DP network. Information about the installation of this module can be found in the guide that came with the accessory.

2.1 PLUG-IN MODULE CFW500-CPDP2

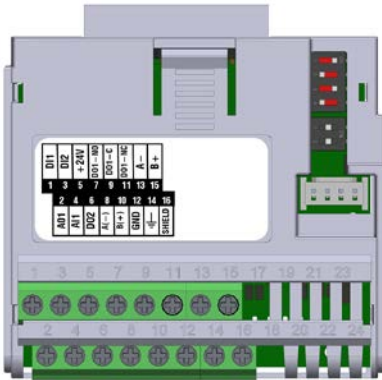

- WEG part number: 12443605.
- Composed by the Profibus DP-V1 communication module and an installation guide.
- It supports DP-V1 (acyclic messages).

2.2 CONNECTOR PINOUT

The Profibus DP-V1 communication module has two connectors to the Profibus network, each one with the following pinout:

 



Table 2.1: Profibus connector pinout

Pin	Name	Function
13	A-Line (-)	RxD/TxD negative (green)
14	Ground	Input for protective ground
15	B-Line (+)	RxD/TxD positive (red)
16	Shield	Input for PROFIBUS cable shield

2.3 INDICATIONS

The alarms, faults and status indications are done through the device HMI and parameters.

2.4 DIP SWITCHES

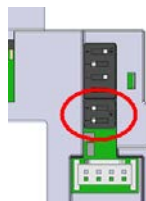

At each segment of the Profibus DP network, it is necessary to enable terminating resistors at both end points of the main bus. For this purpose, the Profibus DP communication module has two DIP switches that can be activated (both switches to the ON position) to enable the resistor. The DIP switches should not be activated if the network connector already has the terminating resistors.

3 INSTALLATION IN THE PROFIBUS DP NETWORK

The Profibus DP network, such as several industrial communication networks, for being many times applied in aggressive environments with high exposure to electromagnetic interference, requires that certain precautions be taken in order to guarantee a low communication error rate during its operation. Recommendations to perform the product connection in this network are presented next.

3.1 BAUD RATES

The Profibus DP protocol defines several baud rates that can be used, from 9.6 kbit/s up to 12 Mbit/s. The maximum allowed transmission line length depends on the used baud rate, and this correlation is showed on the table 3.1.

Table 3.1: Baud rate x segment length

Baud Rate (kbit/s)	Segment Length (m)
9,6; 19,2; 45,45; 93,75	1200
187,5	1000
500	400
1500	200
3000, 6000, 12000	100

All equipments in the network must use the same baud rate. The MW500 Profibus DP interface has automatic baud rate detection, according to what has been configured for the network master, and therefore it is not necessary to configure this option.

It is possible to observe the baud rate detected by the board at the parameter P0963.

3.2 ADDRESSING

Every device in a Profibus DP network, master or slave, is identified through a network address. This address must be different for each device.

The MW500 Profibus DP address is configured through the parameter P0918.

3.3 CABLE

It is recommended that the installation be carried out with a type A cable, whose characteristics are described in the table 3.2. The cable has a pair of wires that must be shielded and twisted, in order to guarantee higher immunity against electromagnetic interference.

Table 3.2: Type A cable properties

Impedance	135 a 165 Ω
Capacitance	30 pf/m
Loop resistance	110 Ω /km
Cable diameter	> 0.64 mm
Wire cross section	> 0.34 mm

3.4 CONNECTORS

Several connector types can be used for the network connection of the equipment, from simple screw connectors up to very specific connector types for the Profibus network.

The connector used in the MW500 Profibus DP accessory is presented at item 3.4.

3.5 CONNECTION TO THE NETWORK

The Profibus DP protocol, by using the RS-485 physical medium, allows the connection of up to 32 devices per segment without the use of repeaters. By using repeaters, up to 126 addressable equipments can be connected to the network. Each repeater must also be included as a device connected to the segment, even not occupying a network address.

It is recommended that the connection of all the devices present in the Profibus DP network be made coming from the main bus. Generally, the Profibus network connector itself has an input and an output for the cable, allowing the connection to be taken to the other network points. Derivations from the main bus are not recommended, especially for baud rates higher or equal to 1.5Mbits/s.

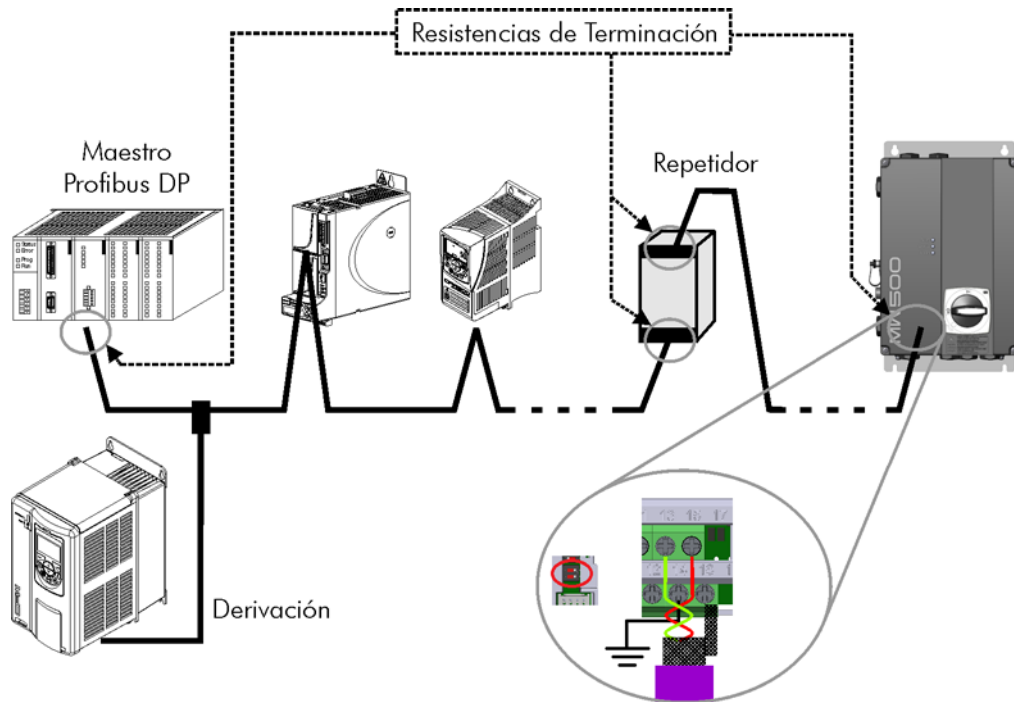


Figure 3.1: Connection example in a Profibus DP network

The Profibus DP network cables must be laid separately (and far away if possible) from the power cables. All the drives must be properly grounded, preferably at the same ground point. The Profibus cable shield must also be grounded. The MW500 Profibus board connector itself already has a connection with the protective ground¹ and, therefore, makes the connection of the shield to the ground when the Profibus cable is connected to the drive. However a better connection, implemented by clamps that connect the shield to a ground point, is also recommended.

3.6 TERMINATING RESISTOR

At each segment of the Profibus DP network, it is necessary to enable a terminating resistor at the end points of the main bus. The use of specific Profibus network connectors with a switch to enable the resistor is recommended, which must only be enabled (ON position) if the equipment is the first or the last element of the segment. The DIP switches present in the communication module also can be used to enable the termination resistors.

It is important to emphasize that in order to be possible to disconnect the element from the network without impairing the bus, it becomes interesting the use of active terminations, which are elements that have only the termination function. Therefore, any drive of the network can be disconnected from the bus without impairing the termination.

3.7 GSD FILE

Each element of the Profibus DP network has an associated configuration file with the GSD extension. This file describes the characteristics of each equipment and it is used by the Profibus DP network master configuration tool. During the master configuration the GSD configuration file supplied with the equipment must be used.

¹ It is necessary to connect the protective earth to the GND signal in the plug-module.

4 PROGRAMMING

Next, the MW500 frequency inverted parameters related to the Profibus DP communication will be presented.

4.1 SYMBOLS FOR THE PROPERTIES DESCRIPTION

RO	Read-only parameter
CFG	Parameter that can be changed only with a stopped motor
DP	Parameter visible on the HMI if the product has the Profibus interface installed

P0105 – 1ST/2ND RAMP SELECTION

P0220 – LOCAL/REMOTE SELECTION SOURCE

P0221 – SPEED REFERENCE SELECTION – LOCAL SITUATION

P0222 – SPEED REFERENCE SELECTION – REMOTE SITUATION

P0223 – FORWARD/REVERSE SELECTION – LOCAL SITUATION

P0224 – RUN/STOP SELECTION – LOCAL SITUATION

P0225 – JOG SELECTION – LOCAL SITUATION

P0226 – FORWARD/REVERSE SELECTION – REMOTE SITUATION

P0227 – RUN/STOP SELECTION – REMOTE SITUATION

P0228 – JOG SELECTION – REMOTE SITUATION

These parameters are used in the configuration of the command source for the MW500 frequency inverted local and remote situations. In order that the device be controlled through the Profibus DP interface, the options 'CANopen/DeviceNet/Profibus DP' available in these parameters, must be selected.

The detailed description of these parameters is found in the MW500 programming manual.

P0313 – COMMUNICATION ERROR ACTION

Range:	0 = Inactive 1 = Disable via Run/Stop 2 = Disable via General Enable 3 = Change to Local 4 = Change to Local keeping commands and reference 5 = Causes a Fault	Default: 1
Properties:	CFG	
Access groups via HMI:	NET	

Description:

It allows the selection of the action to be executed by the device, if it is controlled via network and a communication error is detected.

Table 4.1: P0313 options

Options	Description
0 = Inactive	No action is taken and the drive remains in the existing status.
1 = Disable via Run/Stop	A stop command with deceleration ramp is executed and the motor stops according to the programmed deceleration ramp.
2 = Disable via General Enable	The drive is disabled by removing the General Enabling and the motor coasts to stop.
3 = Change to Local	The drive commands change to Local.
4 = Change to Local keeping commands and reference	The drive commands change to Local, but the status of the enabling and speed reference commands received via network are kept, providing that the drive has been programmed to use in Local mode the commands via HMI, or 3-wire start/stop and speed reference via either HMI or electronic potentiometer.
5 = Causes a Fault	Instead of an alarm, the communication error causes a drive fault, so that a drive fault reset becomes necessary in order to restore normal operation.

The following events are considered communication errors:

Profibus DP communication:

- A138 alarm/F238 fault: command received to enter clear mode.
- A139 alarm/F239 fault: device goes to *offline*.
- A140 alarm/F240 fault: Profibus DP interface access error.

The actions described in this parameter are executed by means of the automatic writing of the selected actions in the respective bits of the interface control words. Therefore, in order that the commands written in this parameter be effective, it is necessary that the device be programmed to be controlled via the used network interface (with exception of option "Causes a Fault", which blocks the equipment even if it is not controlled by network). This programming is achieved by means of parameters P0220 to P0228.

P0680 – STATUS WORD

Range: 0000h to FFFFh	Default: -
Properties: RO	
Access groups via HMI: NET	

Description:

It allows the device status monitoring. Each bit represents a specific status:

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3 to 0
Function	Fault condition	(PID) Automatic	Undervoltage	LOC/REM	JOG	Speed direction	Active General Enable	Motor Running	Alarm condition	In configuration mode	Second ramp	Active quick stop	Reserved

Table 4.2: P0680 parameter bit functions

Bits	Values
Bits 0 to 3	Reserved.
Bit 4 Active quick stop	0: The fast stop command is not active. 1: The drive is executing the fast stop command.
Bit 5 Second ramp	0: The drive is configured to use the first ramp values, programmed in P0100 and P0101, as the motor acceleration and deceleration ramp times. 1: The drive is configured to use the second ramp values, programmed in P0102 and P0103, as the motor acceleration and deceleration ramp times.
Bit 6 In configuration mode	0: The drive is operating normally. 1: The drive is in the configuration mode. It indicates a special condition during which the drive cannot be enabled: Executing the self-tuning routine Executing the oriented start-up routine Executing the HMI copy function Executing the flash memory card self-guided routine There is a parameter setting incompatibility There is no power at the drive power section
Bit 7 Alarm condition	0: The drive is not in alarm condition. 1: The drive is in alarm condition. Note: The alarm number can be read by means of the parameter P0048 – Present Alarm.
Bit 8 Motor Running	0: The motor is stopped. 1: The drive is running the motor at the set point speed, or executing either the acceleration or the deceleration ramp.
Bit 9 Active General Enable	0: General Enable is not active. 1: General Enable is active and the drive is ready to run the motor.
Bit 10 Speed direction	0: The motor is running in the reverse direction. 1: The motor is running in the forward direction.
Bit 11 JOG	0: Inactive JOG function. 1: Active JOG function.
Bit 12 LOC/REM	0: Drive in Local mode. 1: Drive in Remote mode.
Bit 13 Undervoltage	0: No Undervoltage. 1: With Undervoltage.
Bit 14 Manual/ Automatic	0: PID in manual mode. 1: PID in Automatic mode.
Bit 15 Fault condition	0: The drive is not in a fault condition. 1: The drive has detected a fault. Note: The fault number can be read by means of the parameter P0049 – Present Fault.

P0681 – MOTOR SPEED IN 13 BITS
Range: - 32768 to 32767

Default: -

Properties: RO

Access groups via HMI: NET

Description:

It allows monitoring the motor speed. This word uses 13-bit resolution with signal to represent the motor rated frequency (P0403):

- P0681 = 0000h (0 decimal) → motor speed = 0
- P0681 = 2000h (8192 decimal) → motor speed = rated frequency

Intermediate or higher speed values in rpm can be obtained by using this scale. E.g. 60 Hz rated frequency if the value read is 2048 (0800h), then, to obtain the speed in Hz one must calculate:

8192 => 60 Hz
2048 => Frequency in Hz

$$\text{Frequency in Hz} = \frac{60 \times 2048}{8192}$$

Frequency in Hz = 15 Hz

Negative values in this parameter indicate that the motor is running in the reverse direction.


NOTE!

The values transmitted over the network have a scale limitation, allowing a maximum of 4 times the synchronous speed of the motor, with saturation in 32767 (or -32768).

P0684 – PROFIBUS DP CONTROL WORD

Range: 0000h to FFFFh **Default:** 0000h
Properties: -
Access groups via HMI: NET

Description:

It is the device Profibus DP interface control word. This parameter can only be changed via CANopen/DeviceNet/Profibus DP interface. For the other sources (HMI, etc.) it behaves like a read-only parameter.

In order to have those commands executed, it is necessary to program the equipment to be controlled via CANopen/DeviceNet/Profibus DP. This programming is achieved by means of parameters P0105 and P0220 to P0228.

Each bit of this word represents a command that can be executed.

Bits	15 to 8	7	6	5	4	3	2	1	0
Function	Reserved	Fault reset	Quick stop	Second ramp	LOC/REM	JOG	Speed direction	General enable	Run/Stop

Table 4.3: P0684 parameter bit functions

Bits	Values
Bit 0 Run/Stop	0: It stops the motor with deceleration ramp. 1: The motor runs according to the acceleration ramp until reaching the speed reference value.
Bit 1 General enable	0: It disables the drive, interrupting the supply for the motor. 1: It enables the drive allowing the motor operation.
Bit 2 Speed direction	0: To run the motor in a direction opposed to the speed reference. 1: To run the motor in the direction indicated by the speed reference.
Bit 3 JOG	0: It disables the JOG function. 1: It enables the JOG function.
Bit 4 LOC/REM	0: The drive goes to the Local mode. 1: The drive goes to the Remote mode.
Bit 5 Second ramp	0: The drive uses the first ramp values, programmed in P0100 and P0101, as the motor acceleration and deceleration ramp times. 1: The drive is configured to use the second ramp values, programmed in P0102 and P0103, as the motor acceleration and deceleration ramp times.
Bit 6 Quick stop	0: It does not execute the quick stop command. 1: It executes the quick stop command. Note: This function is not allowed with control types (P0202) V/f or VVW.
Bit 7 Fault reset	0: No function. 1: If in a fault condition, then it executes the reset.
Bits 8 to 15	Reserved.

P0685 – PROFIBUS DP SPEED REFERENCE

Range: -32768 to 32767 **Default:** 0
Properties: -
Access groups via HMI: NET

Description:

It allows programming the motor speed reference via the Profibus DP interface. This parameter can only be changed via CANopen/DeviceNet/Profibus DP interface. For the other sources (HMI, etc.) it behaves like a read-only parameter.

In order that the reference written in this parameter be used, it is necessary that the drive be programmed to use the speed reference via CANopen/DeviceNet/Profibus DP. This programming is achieved by means of parameters P0221 and P0222.

This word uses a 13-bit resolution with signal to represent the motor rated frequency (P0403).

- P0685 = 0000h (0 decimal) → speed reference = 0
- P0685 = 2000h (8192 decimal) → speed reference = rated frequency (P0403)

Intermediate or higher reference values can be programmed by using this scale. E.g.60Hz rated frequency, to obtain a speed reference of 30 Hz one must calculate:

60 Hz => 8192 30 Hz => 13 bit reference
$13 \text{ bit reference} = \frac{30 \times 8192}{60}$
13 bit reference = 4096 => Value corresponding to 30 Hz in a 13 bit scale

This parameter also accepts negative values to revert the motor speed direction. The reference speed direction, however, depends also on the control word - P0684 - bit 2 setting:

- Bit 2 = 1 and P0685 > 0: reference for forward direction
- Bit 2 = 1 and P0685 < 0: reference for reverse direction
- Bit 2 = 0 and P0685 > 0: reference for reverse direction
- Bit 2 = 0 and P0685 < 0: reference for forward direction


NOTE!

The values transmitted over the network have a scale limitation, allowing to program a speed reference of 4 times the synchronous speed of the motor at most.

P0695 – DIGITAL OUTPUT SETTING

Range	0000h to 001Fh	Default: 0000h
Properties:	-	
Access groups via HMI:	NET	

Description:

It allows the control of the digital outputs by means of the network interfaces (Serial, CAN, etc.). This parameter cannot be changed via HMI.

Each bit of this parameter corresponds to the desired value for one digital output. In order to have the correspondent digital output controlled according to this content, it is necessary that its function be programmed for “P0695 Content” at parameters P0275 to P0279.

Bits	15 to 5	4	3	2	1	0
Function	Reserved	DO5 setting	DO4 setting	DO3 setting	DO2 setting	DO1 setting

Table 4.4: P0695 parameter bit functions

Bits	Values
Bit 0 DO1 setting	0: DO1 output open. 1: DO1 output closed.
Bit 1 DO2 setting	0: DO2 output open. 1: DO2 output closed.
Bit 2 DO3 setting	0: DO3 output open. 1: DO3 output closed.
Bit 3 DO4 setting	0: DO4 output open. 1: DO4 output closed.
Bit 4 DO5 setting	0: DO5 output open. 1: DO5 output closed.
Bits 5 to 15	Reserved


NOTE!

Some of the digital outputs may not be available depending on the plug-in module.

P0696 – VALUE 1 FOR ANALOG OUTPUTS
P0697 – VALUE 2 FOR ANALOG OUTPUTS
P0698 – VALUE 3 FOR ANALOG OUTPUTS

Range:	-32768 to 32767	Default: 0
Properties:	-	
Access groups via HMI:	NET	

Description:

They allow the control of the analog outputs by means of network interfaces (Serial, CAN, etc.). These parameters cannot be changed via HMI.

The value written in these parameters is used as the analog output value, providing that the function for the desired analog output be programmed for “P0696 / P0697 / P0698 value”, at the parameters P0251, P0254, P0257.

The value must be written in a 15-bit scale ($7FFFh = 32767$)² to represent 100 % of the output desired value, i.e.:

- P0696 = 0000h (0 decimal) → analog output value = 0 %
- P0696 = 7FFFh (32767 decimal) → analog output value = 100 %

The showed example was for P0696, but the same scale is also used for the parameters P0697 / P0698. For instance, to control the analog output 1 via serial, the following programming must be done:

- Choose a parameter from P0696, P0697, P0698 to be the value used by the analog output 1. For this example, we are going to select P0696.
- Program the option “P0696 value” as the function for the analog output 1 in P0254.
- Using the network interface, write in P0696 the desired value for the analog output 1, between 0 and 100 %, according to the parameter scale.


NOTE!

For MW500 frequency inverted, the analog output 3 represents the frequency output (FO).

² For the actual output resolution, refer to the product manual.

P0740 – PROFIBUS DP COMMUNICATION STATUS

Range:	0 = Inactive 1 = Profibus interface initialization error 2 = Offline 3 = Configuration data error 4 = Parameterization data error 5 = Clear mode 6 = Online	Default: -
Properties:	RO	
Access groups via HMI:	NET	

Description:

It allows identifying if the Profibus DP interface board is properly installed, besides indicating the status of the communication with the network master.

Table 4.5: Parameter P0740 values

Value	Description
0 = Inactive	The Profibus interface is not installed in MW500.
1 = Profibus interface initialization error	A problem was identified during the Profibus interface initialization.
2 = Offline	The Profibus interface is installed and properly configured, but no cyclic communication is established.
3 = Configuration data error	Data received in the I/O configuration telegram are not in accordance with the configurations done through the parameter P0922.
4 = Parameterization data error	Data received in the parameterization telegram does not have valid format/values.
5 = Clear mode	During data exchange with the master, the slave received a command to enter the clear mode.
6 = Online	I/O data exchange between the slave and Profibus network master is successfully running.

P0741 – PROFIBUS/PROFINET DATA PROFILE

Range:	0 = PROFIdrive 1 = Manufacturer	Default: 1
Properties:	DP	
Access groups via HMI:	NET	

Description:

It allows selecting the data profile for the control, speed reference, status and motor speed words during the I/O data exchange with the network master.

The MW500 frequency inverted with Profibus DP and PROFINET IO communication operates as a network slave and supports services of the PROFIdrive specification. The following is information about the drive operation using this profile specified services.

Complementing the Profibus and PROFINET protocol specification, the PROFIdrive specification basically describes a set of common parameters and services for drive-type devices on a Profibus or PROFINET network. The purpose of this specification is to facilitate the drive integration into a Profibus and PROFINET network.

Table 4.6: Parameter P0741 options

Option	Description
0 = PROFdrive	Features two types of mapping: Type 1 Frame: Control words, state, reference, and speed have values and functions as described by the PROFdrive specification. Each word is described in the following parameters: <ul style="list-style-type: none"> ▪ P0967: PROFdrive control word. ▪ P0968: PROFdrive status word. The speed and engine speed reference words for this profile are described below. Frame type 20: In addition to the control words, state, reference and speed, parameters P0760, P0761, P0762 and P0763 must be mapped to the Anybus read parameters.
1 = Manufacturer	The control, status, speed reference and motor speed words have values and functions specific for MW500 frequency inverted. The description of each word is done in the following parameters: <ul style="list-style-type: none"> ▪ P0680: Status word ▪ P0681: Motor Speed in 13 Bits ▪ P0684: Control word ▪ P0685: Speed reference

Speed for PROFdrive profile:

If the used profile is the PROFdrive, both the speed reference and the motor speed must be indicated as a value proportional to the drive maximum speed, programmed through P0134:

- Value via Profibus = 0000h (0 decimal) → Speed = 0 Hz
- Value via Profibus = 4000h (16384 decimal) → Speed = maximum speed (P0134)

Intermediary speed values in rpm can be obtained using this scale. For instance, if P0134 is programmed for 30 Hz and the motor speed value read via Profibus is 2048 (0800h), in order to obtain the value in Hz the following calculation must be done:

$\begin{array}{l} 16384 \Rightarrow 30 \text{ Hz} \\ 2048 \Rightarrow \text{speed in Hz} \end{array}$
$\text{Speed in Hz} = \frac{30 \times 2048}{16384}$
$\text{Speed in Hz} = 3.75 \text{ Hz}$

The same calculation applies for the transmission of speed reference values. Negative speed values indicate reverse speed direction.


NOTE!

- For the reference writing in the drive, the values are converted and written in the parameter .
- The reference writing does also depend on the bit 6 of the PROFdrive control word (P0967).
- If this parameter is changed, the slave will assume the new configuration only when there is no cyclic communication with the master.

P0742 – PROFIBUS READING #3
P0743 – PROFIBUS READING #4
P0744 – PROFIBUS READING #5
P0745 – PROFIBUS READING #6
P0746 – PROFIBUS READING #7
P0747 – PROFIBUS READING #8

Range:	0 to 1199	Default: 0 (disabled)
Properties:	DP	
Access groups via HMI:	NET	

Description:

These parameters allow programming the content of the input words 3 to 8 (input: drive sends to the master). By using these parameters it is possible to program the number of another parameter whose content must be made available at the network master input area.

If, for instance, one wants to read from the MW500 frequency inverted the motor current in Amps, one must program the value 3 in one of these parameters, because the parameter P0003 is the one that contains this information. It is worthwhile to remind that the value read from any parameter is represented with a 16 bit word. Even if the parameter has decimal resolution, the value is transmitted without the indication of the decimal places. E.g., if the parameter P0003 has the value 4.7 A, the value supplied via the network will be 47.

These parameters are used only if the equipment is programmed at the parameter P0922 to use the options 3 to 8 (configuration telegrams 103 to 108). Up to 8 words to be read by the network master can be made available, according to the selected option.

The first two input words are fixed and represent the status and the motor speed.


NOTE!

The value 0 (zero) disables the reading in the word. The number of input words, however, keeps the same as programmed at P0922.

P0750 – PROFIBUS WRITING #3
P0751 – PROFIBUS WRITING #4
P0752 – PROFIBUS WRITING #5
P0753 – PROFIBUS WRITING #6
P0754 – PROFIBUS WRITING #7
P0755 – PROFIBUS WRITING #8

Range:	0 to 1199	Padrão Default: 0 (disabled)
Properties:	DP	
Access groups via HMI:	NET	

Description:

These parameters allow programming the content of the output words 3 to 8 (output: master sends to the drive). Using these parameters, it is possible to program the number of another parameter whose content must be made available at the network master output area.

If, for instance, one wants to write the acceleration ramp value in the MW500 frequency inverted, one must program the value 100 in one of these parameters, because the parameter P0100 is the one where this

information is programmed. It is worthwhile to remind that the value written in any parameter is represented with a 16 bit word. Even if the parameter has decimal resolution, the value is transmitted without the indication of the decimal places. E.g., if one wishes to program the parameter P0100 with the value 5.0 s, the value programmed via the network must be 50.

These parameters are used only if the equipment is programmed at the parameter P0922 to use the options 3 to 8 (configuration telegrams 103 to 108). Up to 8 words to be written by the network master can be made available, according to the selected option.

The first two output words are fixed and represent the control and the speed reference.


NOTE!

- The value 0 (zero) disables the writing in the word. The number of input words, however, keeps the same as programmed at P0922.
- The written parameters using these words are not saved in non-volatile memory. Thus, if the equipment is turned off and on again, these parameters will return to their original value.

P0918 – PROFIBUS ADDRESS

Range:	1 to 126	Default: 1
Properties:	DP	
Access groups via HMI:	NET	

Description:

It allows programming the slave address in the Profibus DP network. It is necessary that each of the equipments in the network has an address different from the others.


NOTE!

If this parameter is changed, the slave will assume the new configuration only when there is no cyclic communication with the master.

P0922 – SELECTION OF THE CONFIGURATION TELEGRAM


Range:	2 = Standard Telegram 1 (2 I/O words)	Default: 2
Valores:	3 = Telegram 103 (3 I/O words)	
	4 = Telegram 104 (4 I/O words)	
	5 = Telegram 105 (5 I/O words)	
	6 = Telegram 106 (6 I/O words)	
	7 = Telegram 107 (7 I/O words)	
	8 = Telegram 108 (8 I/O words)	
Properties:	DP	
Access groups via HMI:	NET	

Description:

It allows selecting which configuration telegram is used by the drive during the Profibus DP network initialization. This telegram defines the format and quantity of input/output data exchanged with the network master.

During the network master configuration, by using the GSD file, it is possible to select the desired data module for the exchange of cyclic data between the master and the slave. It is possible to exchange from 2 to 8 input/output (I/O) words (16 bits each), depending on the selected option. The value programmed in this parameter must coincide with the module selected by the network master configuration tool.

The content of the first two input/output words is pre-defined. The other words are programmable through the parameters P0742 up to P0755:

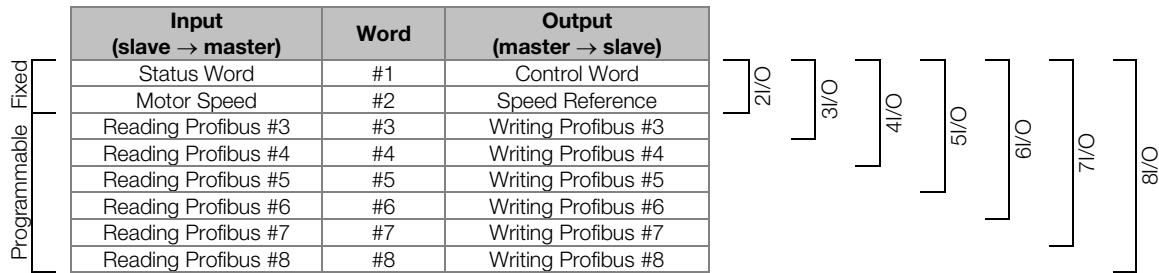
NOTE!

- The format of the control, status, speed reference and motor speed words depends on the parameter P0741 programming.
- If this parameter is changed, the slave will assume the new configuration only when there is no cyclic communication with the master.

P0963 – PROFIBUS BAUD RATE DETECTION

Range:	0 = 9.6 kbit/s 1 = 19.2 kbit/s 2 = 93.75kbit/s 3 =187.5 kbit/s 4 = 500 kbit/s 5 = Not detected 6 = 1500 kbit/s 7 = 3000 kbit/s 8 = 6000 kbit/s 9 = 12000 kbit/s 10 = Reserved 11 = 45.45 kbit/s	Default: -
Properties:	RO,DP	
Access groups via HMI:	NET	

Description:

It is a Profibus DP communication specific parameter, defined by the PROFIdrive standard, to indicate the baud rate detected by the Profibus DP interface.

P0967 – PROFIDRIVE CONTROL WORD

Range:	0000h to FFFFh	Default: 0000h
Properties:	NET	
Access groups via HMI:	NET	

Description:

It is a Profibus DP and PROFINET communication specific parameter, defined by the PROFIdrive standard, with the inverter control word via the Profibus DP or PROFINET interface when the PROFIdrive data profile is selected at P0741. This parameter can only be changed via Profibus DP or PROFINET interface. For the other sources (HMI, CAN, etc.) it behaves like a read-only parameter.

In order that the commands written in this parameter be executed, it is necessary to program the drive to be commanded via . This programming is done by means of parameters P0105 and P0220 to P0228.

The specific functions in this word follow the defined by the PROFIdrive specification. Each bit of this word corresponds to a command that can be executed by the drive:

Bits	15 – 11	10	9	8	7	6	5	4	3	2	1	0
Function	Reserved	Control By PLC	Reserved	JOG 1 ON	Fault Acknowledge	Enable Setpoint	Reserved	Enable Ramp Generator	Enable Operation	No Quick Stop	No Coast Stop	ON

Table 4.7: Parameter P0967 bit functions

Bits	Values
Bit 0 ON / OFF	0: OFF -> If enabled, it stops and disables the drive. 1: ON -> It allows the inverter enabling.
Bit 1 No Coast Stop / Coast Stop	0: Coast Stop -> It disables the drive. 1: No coast Stop -> It allows the drive enabling.
Bit 2 No Quick Stop / Quick Stop	0: If enabled, it executes the Fast Stop command and disables the drive. 1: It allows the inverter drive. Note: When the control type (P0202) is V/f or VVW, the use of this function is not recommended.
Bit 3 Enable Operation	0: It disables the drive. 1: It enables the drive.
Bit 4 Enable Ramp Generator	0: It disables the drive via deceleration ramp. 1: It enables the speed ramp for the drive.
Bit 5	Reserved
Bit 6 Enable Setpoint	0: It resets the speed reference. 1: It uses the speed reference received via the network.
Bit 7 Fault Acknowledge	0: No function. 1: If in a fault condition, it executes the fault reset.
Bit 8 JOG 1 ON	0: It disables the JOG function. 1: It enables the JOG function.
Bit 9	Reserved
Bit 10 Control By PLC	0: The drive goes to the LOCAL situation. 1: The inverter goes to the REMOTE situation. Note: The local and remote command sources depend on the options programmed at the parameters P0220 to P0228.
Bits 11 to 15	Reserved.



NOTE!

The speed direction reversion can be done by sending a negative value to the speed reference.

P0968 – PROFIDRIVE STATUS WORD

Range: 0000h to FFFFh

Default: -

Properties: RO, NET

Access groups via HMI: NET

Description:

It is a Profibus DP and PROFINET communication specific parameter, defined by the PROFIdrive standard, with the drive status word via the Profibus DP or PROFINET interface when the PROFIdrive data profile is selected at P0741.

The specific functions in this word follow the defined by the PROFIdrive specification. Each bit of this word corresponds to one state:

Bits	15 – 11	10	9	8	7	6	5	4	3	2	1	0
Function	Reserved	Frequency Reached	Control Requested	Reserved	Warning Present	Switching On Inhibited	Quick Stop Not Active	Coast Stop Not Active	Fault Present	Operation Enabled	Ready To Operate	Ready To Switch On

Table 4.8: Parameter P0968 bit functions

Bits	Values
Bit 0 Ready To Switch On	0: The drive cannot be enabled. 1: Commands received from the master allow enabling the drive.
Bit 1 Ready To Operate	0: No commands received from the master to operate the equipment. 1: Commands received from the master allow enabling the drive.
Bit 2 Operation Enabled	0: The drive is disabled. 1: Drive enabled, and able to receive the command to release the ramp.
Bit 3 Fault Present	0: The drive is not in a fault condition. 1: The drive is in a fault condition.
Bit 4 Coast Stop Not Active	0: The drive is disabled. 1: The drive is enabled.
Bit 5 Quick Stop Not Active	0: The drive is with a Fast Stop command active. 1: Fast Stop command is not active at the drive.
Bit 6 Switching On Inhibited	0: The drive enabling is allowed. 1: The drive operation is blocked, indicating a special condition that prevents the equipment operation.
Bit 7 Warning Present	0: No alarm. 1: The drive has an active alarm.
Bit 8	Reserved.
Bit 9 Control Requested	0: The drive is operating in local mode. 1: The drive is operating in remote mode.
Bit 10 Frequency Reached	0: frequency not reached 1: frequency reached
Bits 11 to 15	Reserved.

5 PROFIBUS DP NETWORK OPERATION

The MW500 frequency inverted with Profibus DP communication accessory operates as a slave in the network and supports the network services of DP-V0 and DP-V1 communication protocols. Information about the inverter operation using the services specified on these versions is presented below.

5.1 PROFIBUS DP-V0

5.1.1 Cyclic Data

The communication via cyclic data allows the data transfer in two directions:

- Input data: Data transmitted from the slave to the master, for monitoring the status and the variables of each slave.
- Output data: Data transmitted from the master to the slave, for control and transmission of operation data to the equipment.

These data are transmitted in regular time periods, defined by the baud rate, number of slaves in the network and the amount of data exchanged with each slave.

The number of input/output (I/O) words available for the MW500 depends on the format of the configuration telegram, programmed through the parameter P0922. It is possible to communicate from 2 to 10 input words and the same number of output words. The contents of these words depend on the setting of the parameters P0741 to P0757.

The same programming done at the parameter P0922 must also be configured at the network master, using a master configuration tool and the MW500 GSD file, selecting one of the available modules described in the GSD file.

5.1.2 SYNC/FREEZE

The MW500 frequency inverted supports the SYNC/UNSYNC and FREEZE/UNFREEZE commands. These are global commands that the master can send to all the network slaves, allowing simultaneous update of I/O data in the network equipments.

The SYNC/UNSYNC commands act on the master output data. When receiving a SYNC command, the command and speed reference values received by each slave are frozen. Values received later by the slave are stored, but will only be updated after the reception of a new SYNC command, or after the UNSYNC command, which cancels this function.

The FREEZE/UNFREEZE commands act in a similar form as the SYNC, but their action is associated to the master input data. When receiving a FREEZE command, variable and status values of each slave are frozen. These values remain fixed until a new FREEZE command be received, or after the UNFREEZE command, which cancels this function.

5.2 PROFIBUS DP-V1

In addition to the services defined by the first version of the Profibus DP specification (DP-V0), where it is mainly defined how to perform the exchange of cyclic data for equipment control and monitoring, the MW500 frequency inverted with the Profibus DP communication accessory also supports the DP-V1 additional services for acyclic communication. Using these services, it is possible to read/write drive parameters using DP-V1 acyclic function, both by the network master (class 1 master) and by a commissioning tool (class 2 master).

5.2.1 Available Services for Acyclic Communication

The device supports the following services for acyclic communication in the Profibus DP network:

- Communication between class 1 master and slave (MS1):
 - Data acyclic reading (DS_Read)
 - Data acyclic writing (DS_Write)

- Communication between class 2 master and slave (MS2):
 - Initiates the connection (Initiate)
 - Data acyclic reading (DS_Read)
 - Data acyclic writing (DS_Write)
 - Aborts the connection (Abort)

DP-V1 requests use an SD2 type Profibus DP telegram – with variable data length. This type of telegram has the following fields:

Telegram Header										Data Unit	Telegram End	
SD	LE	LEr	SD	DA	SA	FC	DSAP	SSAP		DU	FCS	ED
68h	xx	Xx	68h	xx	xx	xx	xx	xx		xx ...	xx	16h

- SD Telegram start delimiter (Start Delimiter)
- LE Telegram length, from the DA field to the DU (Length)
- LEr Telegram length repetition (Length repeat)
- DA Destination Address
- SA Source Address
- FC Function Code
- DSAP Destination Service Access Point
- SSAP Source Service Access Point
- DU Data unit, size 1 to 244 (Data Unit for DP services)
- FCS Telegram checking byte (Frame Checking Sequence)
- ED Telegram end delimiter (End Delimiter)

In this telegram it matters to describe the data structure in the DU field, where the form to access the drive parameters is defined. The other fields follow the defined by the Profibus specification and, normally, are controlled by the network master.

5.2.2 Data Addressing

In the functions for reading and writing via acyclic data, these data are addressed with a numbering indicating which slot and index are being accessed. The slots can be used to address different physical segments of an equipment (a modular equipment for instance) or even logical segments inside a single equipment. The index indicates which data inside the segment is being accessed.

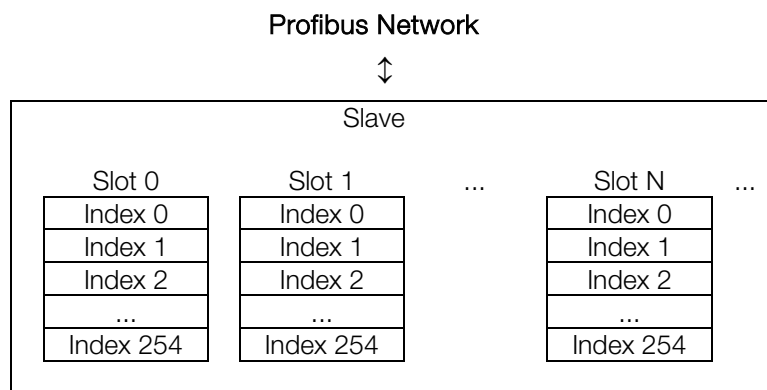


Figure 5.1: Acyclic Data Addressing

5.2.3 Reading/Writing DP-V1 Telegrams

In the Profibus DP protocol, the writing (DS_Write) and reading (DS_Read) DP-V1 telegrams used to access the parameters have the following structure:

Writing Telegram (DS_Write):

Request (master -> slave)	<i>Header</i>	<i>Data Unit (DU)</i>					<i>End</i>
		Function 5Fh	Slot 0	Index 47	Size n	Request Data (n bytes)	

Positive Response (slave -> master)	<i>Header</i>	<i>Data Unit (DU)</i>				<i>End</i>
		Function 5Fh	Slot 0	Index 47	Size 0	
Negative Response (slave -> master)	<i>Header</i>	<i>Data Unit (DU)</i>				<i>End</i>
		Function DFh	Error Decode 128	Error Code 1 xx	Error Code 2 xx	

Reading Telegram (DS_Read):

Request (master -> slave)	<i>Header</i>	<i>Data Unit (DU)</i>				<i>End</i>
		Function 5Eh	Slot 0	Index 47	Size 240	
Positive Response (slave -> master)	<i>Header</i>	<i>Data Unit (DU)</i>				<i>End</i>
		Function 5Eh	Slot 0	Index 47	Size n	
Negative Response (slave -> master)	<i>Header</i>	<i>Data Unit (DU)</i>				<i>End</i>
		Function DEh	Error Decode 128	Error Code 1 xx	Error Code 2 xx	

Each telegram field can assume the following values:

Function	5Fh – Writing request, positive response for writing 5Eh – Reading request, positive response for reading DFh – Negative response for writing DEh – Negative response for reading
Slot	0 (It is the standard slot for accessing the drive parameters, according to PROFIdrive)
Index	47 (It is the standard index for accessing the drive parameters, according to PROFIdrive)
Size	Number of bytes for reading and writing. Writing request: 'n' bytes, according to the number of bytes in the request telegram. Positive response for writing: 0 bytes Reading request: 240 bytes (It requests the maximum number of reading bytes, because the size of the slave response is variable). Positive response for reading: 'n' bytes, according to the number of bytes in the response telegram.
Error Decode	128
Error Code 1	Error code, according to the problem found in the request: B0h: access error – invalid slot B2h: access error – invalid index B5h: access error – modification not allowed for the parameter B6h: access error – modification in read-only parameter B7h: access error – incorrect values for parameter access B8h: access error – invalid parameter number C3h: Resource error – Response not available for the reading request
Error Code 2	0
Request Data	Variable size field of the writing request (DS_Write), which contains the data for accessing the drive parameters.
Response Data	Variable size field of the reading response (DS_Read), which contains the result of the access to the drive parameters.

5.2.4 Data Structure for Parameter Access – PROFIdrive

The MW500 frequency inverted makes available the access to the inverter entire parameter list through the acyclic data, according to the PROFIdrive specification. According to the specification, the access to the global parameters is achieved through the following addressing:

- Slot 0
- Index 47

Through this slot and index, one must use the structure to access the parameters defined in the PROFIdrive specification, in order to perform readings and modifications of the MW500 frequency inverted parameters. This access uses the following mechanism:

1. Either the reading or the modification of parameters must begin with a writing DP-V1 telegram (DS_Write) at the slot 0 index 47, with the request of the parameter to the drive.

2. When receiving the telegram, the MW500 will test the data consistency in order to know if the request is valid. If errors in the request format are not found, it will respond positively to the request telegram and initiate the data treatment.
3. After receiving writing telegram positive response, reading DP-V1 telegrams (DS_Read) must be sent in order to obtain the response to the request performed previously. If the request has not been processed yet, the drive will respond a reading error. This reading must be repeated until the drive responds with valid data.

The fields with the request and response data contain the structure where the parameters accessed at the drive are defined. In this access, as defined by the PROFIdrive, the request and response data have the following structure:

Table 5.1: Request data structure

Request data header	Request Reference	Request ID
		DO-ID
Parameter address	Attribute	Nr. of Elements
	Parameter Number	
	Sub-index	
	:	
Parameter value (only for parameter modification requests)	Format	Number of Values
	Value 1	
	Value 2...	
	:	

Repeated 'n' times, according to the number of accessed parameters

Repeated 'n' times, according to the number of parameters in the header

Request Reference	A number between 1 and 255 that will be retransmitted in the response telegram.
Request ID	It represents the type of request made to the slave: 1 = Parameter reading 2 = Parameter modification
DO-ID	0
Nr. of Parameters	The number of parameters accessed in the request.
Attribute	10h (request of the parameter value)
Nr. of Elements	For parameters of the array type, it represents the number of elements accessed in the parameter. For the MW500 only a few parameters specified by the PROFIdrive specification have this format, the other parameters are always formed by a single value, and therefore this field must be set in 0 or 1.
Parameter Number	The number of a drive valid parameter (the most significant byte is transmitted first).
Sub-index	For parameters of the array type, it represents the array element starting from which the access will be made (the most significant byte is transmitted first). For parameters formed by a single item, this field must be set in 0.
Format	It defines the format for the writing parameter. For the MW500 parameters the value 42h (16 bit word) must be used.
Number of Values	The number of values to be written (defined in the number of elements).
Value	Value to write in the parameter (the most significant byte is transmitted first).

Table 5.2: Response data structure

Response data header	Request Reference mirror	Response ID
		DO-ID mirror
Parameter value (only for parameter reading responses, or in case of error)	Format	Number of Values
	Value 1 or error code	
	Value 2 or error code...	
	:	

Repeated 'n' times, according to the number of accessed parameters

Request Reference mirror	A mirror of the value received in the request telegram.
Response ID	It represents the type of response sent by the slave: 1 = Successful parameter reading 2 = Successful parameter modification 129 = Parameter reading with error 130 = Parameter modification with error
DO-Id Mirror	Mirror of the value received in the request telegram.
Nr. of Parameters (n)	The number of parameters accessed in the request.
Format	It defines the format of the accessed parameter: 42h = 16 bit word 44h = Parameter access error
Number of values	The number of values read from the parameter, or the number of error codes from the parameter access.
Value	Value read from the parameter (the most significant byte is transmitted first).
Error code	In case of parameter illegal access (error in reading or writing of any of the parameters), the code of the type of found error will be indicated: 0000h = parameter does not exist 0001h = modification of read-only parameter 0002h = parameter value out of the limits 0003h = indicated sub-index does not exist 0004h = parameter not of the array type 0005h = incorrect format for the parameter 0009h = description not available (only value) 000Fh = text not available (only value) 0016h = incorrect access to the parameter 0017h = unknown format 0018h = incorrect number of values

5.2.5 Data Structure for Parameter Access – WEG

Besides the structure for the access to the parameters according to the PROFIdrive specification, it is also possible to use a simplified structure for the access to the parameters through the following addressing:

- Slot 0.
- Index 48.

With the telegrams described in the section 4.2.3, it is possible to get access to the parameters using the following mechanism:

- Parameter modification: the modification of parameters is performed with a writing telegram (DS_Write), with 4 data bytes, where the two first represent the parameter number and the two last represent the parameter content, always with the most significant byte transmitted first. The response to the writing telegram indicates whether or not the modification was successful.
- Parameter reading: for the reading of parameters, first a writing telegram (DS_Write) with 2 data bytes representing the parameter number must be sent. After this telegram has been successfully sent, a reading telegram (DS_Read) must be sent, and the response will have 2 data bytes with the parameter content.

The reading telegrams as well as the writing telegrams are able to report errors in the parameter requests, according to the codes described for the Error Code 1 field.

6 FAULTS AND ALARMS RELATED TO THE PROFIBUS DP COMMUNICATION

A138/F238 – PROFIBUS DP INTERFACE IN CLEAR MODE

Description:

It indicates that the slave has received from the network master the command to enter the Clear mode.

Actuation:

The indication occurs if, during the cyclic communication, the Profibus DP network master sends to the network a global telegram telling the slaves that they must leave the operation mode and enter the Clear mode. The conditions for the transmission of this command depend on the network master, but it normally indicates a special operation condition, such as during the programming of the master.

The message of alarm A138 or fault F238 will in this case be signalized through the HMI, depending on the P0313 programming. In case of alarm, the indication will automatically disappear if a new telegram to leave this mode is received.

Possible Causes/Correction:

- Verify the network master status, making sure it is in execution (RUN) mode.

A139/F239 – PROFIBUS DP INTERFACE OFFLINE

Description:

It indicates an interruption in the communication between the Profibus DP network master and the drive. The Profibus communication interface changed to the offline state.

Actuation:

It acts when for any reason an interruption in the communication between the drive and the Profibus DP network master occurs after the cyclic communication has been initiated. The time programmed for this detection is received through the parameterization telegram sent by the master.

The message of alarm A139 or fault F239 will in this case be signalized through the HMI, depending on the P0313 programming. In case of alarm, the indication will automatically disappear at the moment when the cyclic communication is reestablished.


NOTE!

When energizing the equipment, the Profibus DP interface will be initialized in the offline state. The error indication, however, will be done only if a transition from online to offline occurs.

Possible Causes/Correction:

- Verify whether the network master is configured correctly and operating normally.
- Search for short-circuit or bad contact in the communication cables.
- Make sure the cables are not changed or inverted.
- Verify whether termination resistors with correct values were installed only at the extremes of the main bus.
- Verify the entire network installation – cable passage, grounding.

A140/F240 – PROFIBUS DP MODULE ACCESS ERROR

Description:

It indicates error in the access to the Profibus communication module data.

Actuation:

It acts when the MW500 control board is not able to read information from the Profibus DP communication module.

The message of alarm A140 or fault F240 will in this case be signalized through the HMI, depending on the P0313 programming. It is necessary to cycle the power of the drive so that a new attempt to access the Profibus DP module is done.

Possible Causes/Correction:

- Verify whether the Profibus DP module is fitted properly in the slot 3.
- Hardware errors caused by the improper handling or installation of the accessory can cause this error. If possible, test it by replacing the communication accessory.



WEG Drives & Controls - Automação LTDA.
Jaraguá do Sul – SC – Brazil
Phone 55 (47) 3276-4000 – Fax 55 (47) 3276-4020
São Paulo – SP – Brazil
Phone 55 (11) 5053-2300 – Fax 55 (11) 5052-4212
automacao@weg.net
www.weg.net