



Series/Serie/Série: CFW500

Hardware Version/Versión del Hardware/Versão do Hardware: H11

Language/Idioma: English/Español/Português

CFW500 User Manual Addendum

Anexo al Manual del Usuario CFW500

Adendo ao Manual do Usuário CFW500

**ATTENTION!**

The CFW500F0105T2DB20H11SIG2 inverter requires an external power supply for the fans through the cable with a wire ferrule available close to the product power terminals.

Use a +24Vdc source with a minimum capacity of 2.2A model WEG PSS24-W/2.2 item 13108203.

**¡ATENCIÓN!**

El convertidor CFW500F0105T2DB20H11SIG2 necesita, obligatoriamente, de alimentación externa de los ventiladores, a través del cable con terminal ojal, ubicado próximo a los bornes de potencia del producto.

Utilice una fuente de +24 Vdc con una capacidad mínima de 2,2A modelo WEG PSS24-W / 2,2 artículo 13108203.

**ATENÇÃO!**

O inversor CFW500F0105T2DB20H11SIG2 necessita obrigatoriamente de alimentação externa dos ventiladores, através do cabo com terminalilhós disponibilizado próximo aos bornes de potência do produto.

Utilizar uma fonte de +24Vdc com capacidade mínima de 2,2 A modelo WEG PSS24-W/2,2 item 13108203.



16162968