


# Profibus DP

CFW300

**User's Manual**

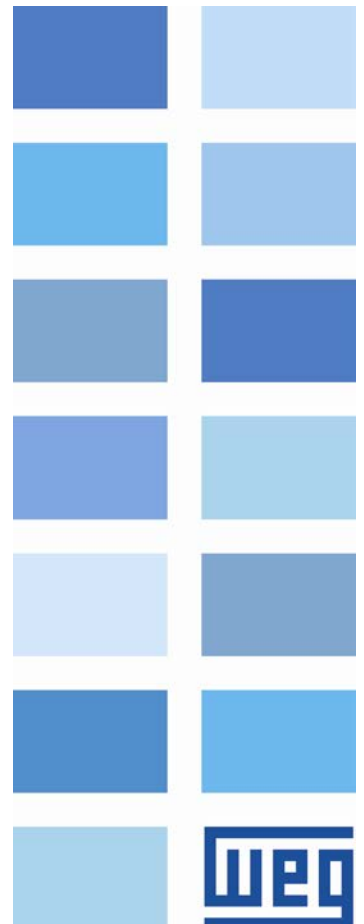



# **Profibus DP User's Manual**

Series: CFW300

Language: English

Document Number: 10003800170 / 00

Publication Date: 03/2016

# CONTENTS

<b>CONTENTS</b> .....	<b>3</b>
<b>ABOUT THIS MANUAL</b> .....	<b>5</b>
<b>ABBREVIATIONS AND DEFINITIONS</b> .....	<b>5</b>
<b>NUMERICAL REPRESENTATION</b> .....	<b>5</b>
<b>1 INTRODUCTION TO THE PROFIBUS DP PROTOCOL</b> .....	<b>6</b>
1.1 PROFIBUS DP NETWORK .....	6
1.2 PROFIBUS DP PROTOCOL VERSIONS .....	6
1.3 DEVICE TYPES IN A PROFIBUS DP NETWORK .....	6
1.4 PHYSICAL LAYER .....	6
<b>2 PROFIBUS DP COMMUNICATION ACCESSORY</b> .....	<b>8</b>
2.1 PLUG-IN MODULE CFW300-CPDP .....	8
2.2 CONNECTOR PINOUT .....	8
2.3 DIP SWITCHES .....	8
2.4 INDICATIONS .....	9
<b>3 INSTALLATION IN THE PROFIBUS DP NETWORK</b> .....	<b>10</b>
3.1 BAUD RATES .....	10
3.2 ADDRESSING .....	10
3.3 CABLE .....	10
3.4 CONNECTORS .....	10
3.5 CONNECTION TO THE NETWORK .....	10
3.6 TERMINATING RESISTOR .....	11
3.7 GSD FILE .....	11
<b>4 PROGRAMMING</b> .....	<b>12</b>
4.1 SYMBOLS FOR THE PROPERTIES DESCRIPTION .....	12
P105 – 1 <sup>ST</sup> /2 <sup>ND</sup> RAMP SELECTION .....	12
P220 – LOCAL/REMOTE SELECTION SOURCE .....	12
P221 – SPEED REFERENCE SELECTION – LOCAL SITUATION .....	12
P222 – SPEED REFERENCE SELECTION – REMOTE SITUATION .....	12
P223 – FORWARD/REVERSE SELECTION – LOCAL SITUATION .....	12
P224 – RUN/STOP SELECTION – LOCAL SITUATION .....	12
P225 – JOG SELECTION – LOCAL SITUATION .....	12
P226 – FORWARD/REVERSE SELECTION – REMOTE SITUATION .....	12
P227 – RUN/STOP SELECTION – REMOTE SITUATION .....	12
P228 – JOG SELECTION – REMOTE SITUATION .....	12
P313 – COMMUNICATION ERROR ACTION .....	12
P680 – STATUS WORD .....	13
P681 – MOTOR SPEED IN 13 BITS .....	14
P684 – PROFIBUS DP CONTROL WORD .....	15
P685 – PROFIBUS DP SPEED REFERENCE .....	15
P695 – DIGITAL OUTPUT SETTING .....	16
P696 – VALUE 1 FOR ANALOG OUTPUTS .....	17
P697 – VALUE 2 FOR ANALOG OUTPUTS .....	17
P742 – PROFIBUS READING #3 .....	17
P743 – PROFIBUS READING #4 .....	17
P744 – PROFIBUS READING #5 .....	17
P745 – PROFIBUS READING #6 .....	17
P746 PROFIBUS WRITING #3 .....	18

P747 – PROFIBUS WRITING #4.....	18
P748 – PROFIBUS WRITING #5.....	18
P749 – PROFIBUS WRITING #6.....	18
P750 – PROFIBUS ADDRESS.....	18
P751 – SELECTION OF THE CONFIGURATION TELEGRAM .....	19
P754 – PROFIBUS BAUD RATE DETECTION .....	19
<b>5 PROFIBUS DP NETWORK OPERATION.....</b>	<b>20</b>
5.1 PROFIBUS DP-V0.....	20
5.1.1 Cyclic Data.....	20
5.1.2 SYNC/FREEZE.....	20
5.2 PROFIBUS DP-V1 .....	20
5.2.1 Available Services for Acyclic Communication .....	20
5.2.2 Data Addressing.....	21
5.2.3 Reading/Writing DP-V1 Telegrams .....	21
5.2.4 Data Structure for Parameter Access – WEG .....	22
5.2.5 Example of Telegrams for Acyclic Access to the Parameters.....	24
<b>6 FAULTS AND ALARMS RELATED TO THE PROFIBUS DP COMMUNICATION ....</b>	<b>27</b>
A138/F238 – PROFIBUS DP INTERFACE IN CLEAR MODE.....	27
A139/F239 –PROFIBUS DP INTERFACE OFFLINE.....	27
F032 – FAULT OF COMMUNICATION WITH THE ACCESSORY .....	27

## **ABOUT THIS MANUAL**

This manual provides the necessary information for the operation of the CFW300 inversor de frequência using the Profibus DP Interface. This manual must be used together with the CFW300 User's Guide.

### **ABBREVIATIONS AND DEFINITIONS**

DP	Decentralized Periphery
EIA	Electronic Industries Alliance
I/O	Input/Output
SAP	Service Access Point

### **NUMERICAL REPRESENTATION**

Decimal numbers are represented by means of digits without suffix. Hexadecimal numbers are represented with the letter 'h' after the number.

# 1 INTRODUCTION TO THE PROFIBUS DP PROTOCOL

A general overview of Profibus DP protocol, describing the main characteristics and functions, are presented next.

## 1.1 PROFIBUS DP NETWORK

The term Profibus is used to describe a digital communication system that can be used in several application areas. It is an open and standardized system, defined by the IEC 61158 and IEC 61784 standards, which comprises from the used physical medium to data profiles for certain sets of equipments. In this system, the DP communication protocol was developed with the purpose of allowing a fast, cyclic and deterministic communication between masters and slaves.

Among the several communication technologies that can be used in this system, the Profibus DP technology describes a solution that, typically, is composed by the DP protocol, RS485 transmission medium and application profiles, used mainly in applications and equipments with emphasis in manufacturing automation.

Nowadays, there is an organization named Profibus International, responsible for keeping, updating and publishing the Profibus technology among users and members. More information regarding the technology, as well as the complete protocol specification can be obtained with this organization or with one of the regional associations or competence centers associated to the Profibus International (<http://www.profibus.com>).

## 1.2 PROFIBUS DP PROTOCOL VERSIONS

The Profibus DP protocol defines a series of functions for exchanging data between master and slave. The set of functions can be divided in different functional levels, in the following versions:

- **DP-V0:** It is the first version of the protocol, which mainly defines functions to perform cyclic data exchange between master and slave.
- **DP-V1:** It is an extension of the functions defined in the first version; it defines particularly how to perform the exchange of acyclic data between master and slave, besides the cyclic data.
- **DP-V2:** It defines a set of advanced functions such as communication between slaves and isochronous communication mode.

○ CFW300 inversor de frequência supports the services of the DP-V0 and DP-V1 versions.

## 1.3 DEVICE TYPES IN A PROFIBUS DP NETWORK

Three different types of equipment are specified in a Profibus network:

- **Slaves:** They are passive stations in the network, which only answer to the requests made by the master.
- **Class 1 Master:** It is responsible for the cyclic data exchange. Typically represented by the PLC, or process or plant control software.
- **Class 2 Master:** It allows the communication in the Profibus DP network through acyclic messages. Typically represented by an engineering or configuration tool used for network commissioning or maintenance.

○ CFW300 inversor de frequência operates as a slave in the Profibus DP network.

## 1.4 PHYSICAL LAYER

There are different network transmission types to allow communication in a Profibus network, each one with suitable features according to the demands of different application types. The main transmission modes are:

- **RS485:** this is the most used **transmission type** for Profibus network. It provides high transmission rates, simple installation and low cost.
- **MBP:** this is specified mainly for applications in chemical and petrochemical industries, for communication in safety areas. The transmission rate is defined at 31.25 kbit/s with the possibility of feeding the devices from the communication bus.
- **Optical Fiber:** this is used mainly in applications where high electromagnetic interference immunity and/or great distances connections are required.




The Profibus DP accessory of the CFW300 inverter de frequência provides an RS485 interface for network connection.

## 2 PROFIBUS DP COMMUNICATION ACCESSORY

The following Profibus DP accessory is needed in order to enable the device communication in a Profibus DP network. Information about the installation of this module can be found in the guide that came with the accessory.

### 2.1 PLUG-IN MODULE CFW300-CPDP

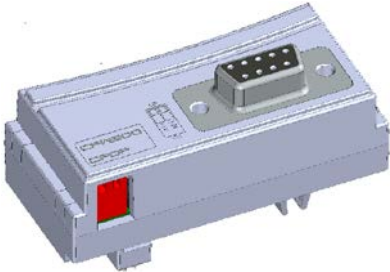

- WEG part number: 13015055.
- Composed by the Profibus DP-V1 communication module and an installation guide.
- It supports DP-V1 (acyclic messages).

### 2.2 CONNECTOR PINOUT


The Profibus DP-V1 communication module has two connectors to the Profibus network, each one with the following pinout:

*Table 2.1: Profibus female DB9 connector pinout (XC6)*

Conector	Pin	Name	Function
	1	-	-
	2	-	-
	3	B-Line (+)	RxD/TxD positive (red)
	4	RTS	Request To Send
	5	GND	0V isolated for the RS485 circuit
	6	+5V	+5V isolated for the RS485 circuit
	7	-	-
	8	A-Line (-)	RxD/TxD negative (green)
	9	-	-

### 2.3 DIP SWITCHES

At each segment of the Profibus DP network, it is necessary to enable terminating resistors at both end points of the main bus. For this purpose, the Profibus DP communication module has two DIP switches that can be activated (both switches to the ON position) to enable the resistor. The DIP switches should not be activated if the network connector already has the terminating resistors.

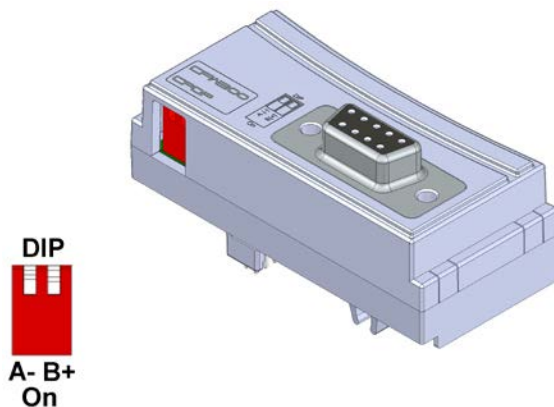

*Figure 2.1: Dip switches position to terminating resistor enable*



*Table 2.2: S1 configuration to Profibus DP network*

Switch Setting	Option
S1.1 = OFF and S1.2 = OFF	Resistive Termination OFF.
S1.1 = ON and S1.2 = ON	Resistive Termination ON.
S1.1 = OFF and S1.2 = ON	Combination not allowed.
S1.1 = ON e S1.2 = OFF	

## 2.4 INDICATIONS

The alarms, faults and status indications are done through the device HMI and parameters.



### ATTENTION!

For the proper operation of the CFW300 inverter with the CFW300-CCAN module, parameters P308, P310, P311 and P312 must be programmed with the factory settings. For further details refer to the programming manual of the CFW300.

### 3 INSTALLATION IN THE PROFIBUS DP NETWORK

The Profibus DP network, such as several industrial communication networks, for being many times applied in aggressive environments with high exposure to electromagnetic interference, requires that certain precautions be taken in order to guarantee a low communication error rate during its operation. Recommendations to perform the product connection in this network are presented next.

#### 3.1 BAUD RATES

The Profibus DP protocol defines several baud rates that can be used, from 9.6 kbit/s up to 12Mbit/s. The maximum allowed transmission line length depends on the used baud rate, and this correlation is showed on the table 3.1.

*Table 3.1: Baud rate x segment length*

Baud Rate (kbit/s)	Segment Length (m)
9,6; 19,2; 45,45; 93,75	1200
187,5	1000
500	400
1500	200
3000, 6000, 12000	100

All equipments in the network must use the same baud rate. The CFW300 Profibus DP interface has automatic baud rate detection, according to what has been configured for the network master, and therefore it is not necessary to configure this option.

It is possible to observe the baud rate detected by the board at the parameter P754.

#### 3.2 ADDRESSING

Every device in a Profibus DP network, master or slave, is identified through a network address. This address must be different for each device.

The CFW300 Profibus DP address is configured through the parameter P750.

#### 3.3 CABLE

It is recommended that the installation be carried out with a type A cable, whose characteristics are described in the table 3.2. The cable has a pair of wires that must be shielded and twisted, in order to guarantee higher immunity against electromagnetic interference.

*Table 3.2: Type A cable properties*

Impedance	135 a 165 $\Omega$
Capacitance	30 pF/m
Loop resistance	110 $\Omega$ /km
Cable diameter	> 0.64 mm
Wire cross section	> 0.34 mm

#### 3.4 CONNECTORS


Several connector types can be used for the network connection of the equipment, from simple screw connectors up to very specific connector types for the Profibus network.

The connector used in the CFW300 Profibus DP accessory is presented at item 3.4.

#### 3.5 CONNECTION TO THE NETWORK

The Profibus DP protocol, by using the RS-485 physical medium, allows the connection of up to 32 devices per segment without the use of repeaters. By using repeaters, up to 126 addressable equipments can be connected to the network. Each repeater must also be included as a device connected to the segment, even not occupying a network address.

It is recommended that the connection of all the devices present in the Profibus DP network be made coming from the main bus. Generally, the Profibus network connector itself has an input and an output for the cable, allowing the connection to be taken to the other network points. Derivations from the main bus are not recommended, especially for baud rates higher or equal to 1.5Mbits/s.

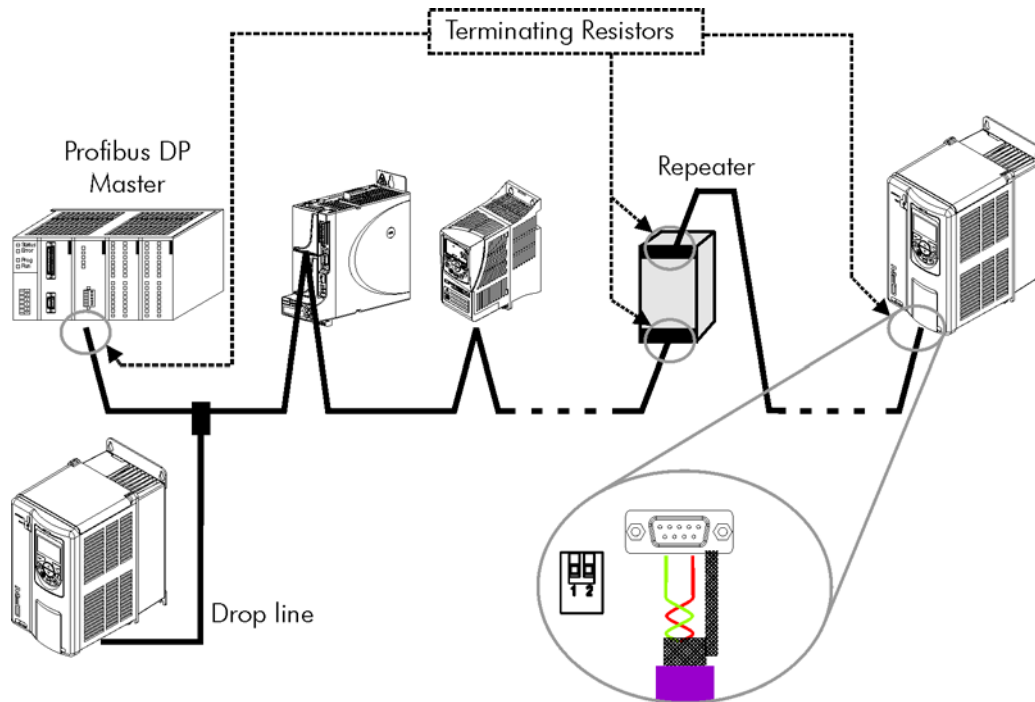

*Figure 3.1: Connection example in a Profibus DP network*

The Profibus DP network cables must be laid separately (and far away if possible) from the power cables. All the drives must be properly grounded, preferably at the same ground point. The Profibus cable shield must also be grounded. The CFW300 Profibus board connector itself already has a connection with the protective ground and, therefore, makes the connection of the shield to the ground when the Profibus cable is connected to the drive. However a better connection, implemented by clamps that connect the shield to a ground point, is also recommended.

### 3.6 TERMINATING RESISTOR

At each segment of the Profibus DP network, it is necessary to enable a terminating resistor at the end points of the main bus. The use of specific Profibus network connectors with a switch to enable the resistor is recommended, which must only be enabled (ON position) if the equipment is the first or the last element of the segment. The DIP switches present in the communication module also can be used to enable the termination resistors.

It is important to emphasize that in order to be possible to disconnect the element from the network without impairing the bus, it becomes interesting the use of active terminations, which are elements that have only the termination function. Therefore, any drive of the network can be disconnected from the bus without impairing the termination.

### 3.7 GSD FILE

Each element of the Profibus DP network has an associated configuration file with the GSD extension. This file describes the characteristics of each equipment and it is used by the Profibus DP network master configuration tool. During the master configuration the GSD configuration file supplied with the equipment must be used.

## 4 PROGRAMMING

Next, the CFW300 inverter de frequência parameters related to the Profibus DP communication will be presented.

### 4.1 SYMBOLS FOR THE PROPERTIES DESCRIPTION

RO	Read-only parameter
CFG	Parameter that can be changed only with a stopped motor

#### P105 – 1<sup>ST</sup>/2<sup>ND</sup> RAMP SELECTION

#### P220 – LOCAL/REMOTE SELECTION SOURCE

#### P221 – SPEED REFERENCE SELECTION – LOCAL SITUATION

#### P222 – SPEED REFERENCE SELECTION – REMOTE SITUATION

#### P223 – FORWARD/REVERSE SELECTION – LOCAL SITUATION

#### P224 – RUN/STOP SELECTION – LOCAL SITUATION

#### P225 – JOG SELECTION – LOCAL SITUATION

#### P226 – FORWARD/REVERSE SELECTION – REMOTE SITUATION

#### P227 – RUN/STOP SELECTION – REMOTE SITUATION

#### P228 – JOG SELECTION – REMOTE SITUATION

These parameters are used in the configuration of the command source for the CFW300 inverter de frequência local and remote situations. In order that the device be controlled through the Profibus DP interface, the options 'CANopen/DeviceNet/Profibus DP' available in these parameters, must be selected.

The detailed description of these parameters is found in the CFW300 programming manual.

#### P313 – COMMUNICATION ERROR ACTION

<b>Range:</b>	0 = Inactive 1 = Disable via Run/Stop 2 = Disable via General Enable 3 = Change to Local 4 = Change to Local keeping commands and reference 5 = Causes a Fault	<b>Default:</b> 1
<b>Properties:</b>	CFG	

#### Description:

It allows the selection of the action to be executed by the device, if it is controlled via network and a communication error is detected.

**Table 4.1: P313 options**

Options	Description
0 = Inactive	No action is taken and the drive remains in the existing status.
1 = Disable via Run/Stop	A stop command with deceleration ramp is executed and the motor stops according to the programmed deceleration ramp.
2 = Disable via General Enable	The drive is disabled by removing the General Enabling and the motor coasts to stop.
3 = Change to Local	The drive commands change to Local.
4 = Change to Local keeping commands and reference	The drive commands change to Local, but the status of the enabling and speed reference commands received via network are kept, providing that the drive has been programmed to use in Local mode the commands via HMI, or 3-wire start/stop and speed reference via either HMI or electronic potentiometer.
5 = Causes a Fault	Instead of an alarm, the communication error causes a drive fault, so that a drive fault reset becomes necessary in order to restore normal operation.

The following events are considered communication errors:

Profibus DP communication:

- A138 alarm/F238 fault: command received to enter clear mode.
- A139 alarm/F239 fault: device goes to *offline*.
- A140 alarm/F240 fault: Profibus DP interface access error.

The actions described in this parameter are executed by means of the automatic writing of the selected actions in the respective bits of the interface control words. Therefore, in order that the commands written in this parameter be effective, it is necessary that the device be programmed to be controlled via the used network interface (with exception of option "Causes a Fault", which blocks the equipment even if it is not controlled by network). This programming is achieved by means of parameters P220 to P228.

### P680 – STATUS WORD

**Range:** 0000h to FFFFh

**Default:** -

**Properties:** RO

**Description:**

It allows the device status monitoring. Each bit represents a specific status:

Bits	15	14	13	12	11	10	9	8	7	6	5	4 to 0
Function	Fault condition	Reserved	Undervoltage	LOC/REM	JOG	Speed direction	Active General Enable	Motor Running	Alarm condition	In configuration mode	Second ramp	Reserved

**Table 4.2: P680 parameter bit functions**

Bits	Values
Bits 0 to 4	Reserved.
Bit 5 Second ramp	0: The drive is configured to use the first ramp values, programmed in P100 and P101, as the motor acceleration and deceleration ramp times. 1: The drive is configured to use the second ramp values, programmed in P102 and P103, as the motor acceleration and deceleration ramp times.
Bit 6 In configuration mode	0: The drive is operating normally. 1: The drive is in the configuration mode. It indicates a special condition during which the drive cannot be enabled: Executing the self-tuning routine Executing the oriented start-up routine Executing the HMI copy function Executing the flash memory card self-guided routine There is a parameter setting incompatibility There is no power at the drive power section
Bit 7 Alarm condition	0: The drive is not in alarm condition. 1: The drive is in alarm condition. Note: The alarm number can be read by means of the parameter P048 – Present Alarm.
Bit 8 Motor Running	0: The motor is stopped. 1: The drive is running the motor at the set point speed, or executing either the acceleration or the deceleration ramp.
Bit 9 Active General Enable	0: General Enable is not active. 1: General Enable is active and the drive is ready to run the motor.
Bit 10 Speed direction	0: The motor is running in the reverse direction. 1: The motor is running in the forward direction.
Bit 11 JOG	0: Inactive JOG function. 1: Active JOG function.
Bit 12 LOC/REM	0: Drive in Local mode. 1: Drive in Remote mode.
Bit 13 Undervoltage	0: No Undervoltage. 1: With Undervoltage.
Bit 14	Reserved.
Bit 15 Fault condition	0: The drive is not in a fault condition. 1: The drive has detected a fault. Note: The fault number can be read by means of the parameter P049 – Present Fault.

**P681 – MOTOR SPEED IN 13 BITS**
**Range:** - 32768 to 32767

**Default:** -

**Properties:** RO

**Description:**

It allows monitoring the motor speed. This word uses 13-bit resolution with signal to represent the motor rated frequency (P403):

- P681 = 0000h (0 decimal) → motor speed = 0
- P681 = 2000h (8192 decimal) → motor speed = rated frequency

Intermediate or higher speed values in rpm can be obtained by using this scale. E.g. 60Hz rated frequency if the value read is 2048 (0800h), then, to obtain the speed in Hz one must calculate:

8192 => 60 Hz  
2048 => Frequency in Hz

Frequency in Hz =  $\frac{60 \times 2048}{8192}$

Frequency in Hz = 15 Hz

Negative values in this parameter indicate that the motor is running in the reverse direction.

**P684 – PROFIBUS DP CONTROL WORD**

**Range:** 0000h to FFFFh **Default:** 0000h  
**Properties:** -

**Description:**

It is the device Profibus DP interface control word. This parameter can only be changed via CANopen/DeviceNet/Profibus DP interface. For the other sources (HMI, etc.) it behaves like a read-only parameter.

In order to have those commands executed, it is necessary to program the equipment to be controlled via CANopen/DeviceNet/Profibus DP. This programming is achieved by means of parameters P105 and P220 to P228.

Each bit of this word represents a command that can be executed.

Bits	15 to 8	7	6	5	4	3	2	1	0
Function	Reserved	Fault reset	Reserved	Second ramp	LOC/REM	JOG	Speed direction	General enable	Run/Stop

*Table 4.3: P684 parameter bit functions*

Bits	Values
Bit 0 Run/Stop	0: It stops the motor with deceleration ramp. 1: The motor runs according to the acceleration ramp until reaching the speed reference value.
Bit 1 General enable	0: It disables the drive, interrupting the supply for the motor. 1: It enables the drive allowing the motor operation.
Bit 2 Speed direction	0: To run the motor in a direction opposed to the speed reference. 1: To run the motor in the direction indicated by the speed reference.
Bit 3 JOG	0: It disables the JOG function. 1: It enables the JOG function.
Bit 4 LOC/REM	0: The drive goes to the Local mode. 1: The drive goes to the Remote mode.
Bit 5 Second ramp	0: The drive uses the first ramp values, programmed in P100 and P101, as the motor acceleration and deceleration ramp times. 1: The drive is configured to use the second ramp values, programmed in P102 and P103, as the motor acceleration and deceleration ramp times.
Bit 6	Reserved.
Bit 7 Fault reset	0: No function. 1: If in a fault condition, then it executes the reset.
Bits 8 to 15	Reserved.

**P685 – PROFIBUS DP SPEED REFERENCE**

**Range:** -32768 to 32767 **Default:** 0  
**Properties:** -

**Description:**

It allows programming the motor speed reference via the Profibus DP interface. This parameter can only be changed via CANopen/DeviceNet/Profibus DP interface. For the other sources (HMI, etc.) it behaves like a read-only parameter.

In order that the reference written in this parameter be used, it is necessary that the drive be programmed to use the speed reference via CANopen/DeviceNet/Profibus DP. This programming is achieved by means of parameters P221 and P222.

This word uses a 13-bit resolution with signal to represent the motor rated frequency (P403).

- P685 = 0000h (0 decimal) → speed reference = 0
- P685 = 2000h (8192 decimal) → speed reference = rated frequency (P403)

Intermediate or higher reference values can be programmed by using this scale. E.g. 60Hz rated frequency, to obtain a speed reference of 30 Hz one must calculate:

60 Hz => 8192
30 Hz => 13 bit reference

13 bit reference = $\frac{30 \times 8192}{60}$
--

13 bit reference = 4096	=> Value corresponding to 30 Hz in a 13 bit scale
-------------------------	---

This parameter also accepts negative values to revert the motor speed direction. The reference speed direction, however, depends also on the control word - P684 - bit 2 setting:

- Bit 2 = 1 and P685 > 0: reference for forward direction
- Bit 2 = 1 and P685 < 0: reference for reverse direction
- Bit 2 = 0 and P685 > 0: reference for reverse direction
- Bit 2 = 0 and P685 < 0: reference for forward direction

### P695 – DIGITAL OUTPUT SETTING

<b>Range</b>	0000h to	<b>Default:</b>
<b>Properties:</b>	-	

**Description:**

It allows the control of the digital outputs by means of the network interfaces (Serial, CAN, etc.). This parameter cannot be changed via HMI.

Each bit of this parameter corresponds to the desired value for one digital output. In order to have the correspondent digital output controlled according to this content, it is necessary that its function be programmed for "P695 Content" at parameters P275 to P278.

Bits	15 to 4	3	2	1	0
Function	Reserved	DO4 setting	DO3 setting	DO2 setting	DO1 setting

*Table 4.4: P695 parameter bit functions*

Bits	Values
Bit 0 DO1 setting	0: DO1 output open. 1: DO1 output closed.
Bit 1 DO2 setting	0: DO2 output open. 1: DO2 output closed.
Bit 2 DO3 setting	0: DO3 output open. 1: DO3 output closed.
Bit 3 DO4 setting	0: DO4 output open. 1: DO4 output closed.
Bits 4 to 15	Reserved



**P696 – VALUE 1 FOR ANALOG OUTPUTS**
**P697 – VALUE 2 FOR ANALOG OUTPUTS**

<b>Range:</b>	-32768 to 32767	<b>Default:</b> 0
<b>Properties:</b>	-	

**Description:**

They allow the control of the analog outputs by means of network interfaces (Serial, CAN, etc.). These parameters cannot be changed via HMI.

The value written in these parameters is used as the analog output value, providing that the function for the desired analog output be programmed for “P696 / P697 value”, at the parameters P251, P254.

The value must be written in a 15-bit scale (7FFFh = 32767)<sup>1</sup> to represent 100 % of the output desired value, i.e.:

- P696 = 0000h (0 decimal) → analog output value = 0 %
- P696 = 7FFFh (32767 decimal) → analog output value = 100 %

The showed example was for P696, but the same scale is also used for the parameters P697. For instance, to control the analog output 1 via serial, the following programming must be done:

- Choose a parameter from P696, P697 to be the value used by the analog output 1. For this example, we are going to select P696.
- Program the option “P696 value” as the function for the analog output 1 in P254.
- Using the network interface, write in P696 the desired value for the analog output 1, between 0 and 100 %, according to the parameter scale.


**NOTE!**

If the analog output is programmed for working from -10 V to 10 V, negative values for this parameter must be used to command the output with negative voltage values, i.e., -32768 to 32767 represent a variation from -10 V to 10 V at the analog output.

**P742 – PROFIBUS READING #3**
**P743 – PROFIBUS READING #4**
**P744 – PROFIBUS READING #5**
**P745 – PROFIBUS READING #6**

<b>Range:</b>	0 to 959	<b>Default:</b> 0 (disabled)
<b>Properties:</b>	DP	

**Description:**

These parameters allow programming the content of the input words 3 a 6 (input: drive sends to the master). By using these parameters it is possible to program the number of another parameter whose content must be made available at the network master input area.

If, for instance, one wants to read from the CFW300 inverter the motor current in Amps, one must program the value 3 in one of these parameters, because the parameter P003 is the one that contains this information. It is worthwhile to remind that the value read from any parameter is represented with a 16 bit word. Even if the parameter has decimal resolution, the value is transmitted without the indication of the decimal places. E.g., if the parameter P003 has the value 4.7A, the value supplied via the network will be 47.

<sup>1</sup> For the actual output resolution, refer to the product manual.

These parameters are used only if the equipment is programmed at the parameter P751 to use the options 2 a 6 (configuration telegrams 100 a 104). Up to 6 words to be read by the network master can be made available, according to the selected option.

The first two input words are fixed and represent the status and the motor speed.


**NOTE!**

The value 0 (zero) disables the reading in the word. The number of input words, however, keeps the same as programmed at P751.

**P746 – PROFIBUS WRITING #3**
**P747 – PROFIBUS WRITING #4**
**P748 – PROFIBUS WRITING #5**
**P749 – PROFIBUS WRITING #6**

**Range:** 0 to 959

**Padrão Default:** 0 (disabled)

**Properties:** -

**Description:**

These parameters allow programming the content of the output words 3 a 6 (output: master sends to the drive). Using these parameters, it is possible to program the number of another parameter whose content must be made available at the network master output area.

If, for instance, one wants to write the acceleration ramp value in the CFW300 inversor de frequência, one must program the value 100 in one of these parameters, because the parameter P100 is the one where this information is programmed. It is worthwhile to remind that the value written in any parameter is represented with a 16 bit word. Even if the parameter has decimal resolution, the value is transmitted without the indication of the decimal places. E.g., if one wishes to program with the value 5.0s, the value programmed via the network must be 50.

These parameters are used only if the equipment is programmed at the parameter P751 to use the options 2 a 6 (configuration telegrams 100 a 104). Up to 6 words to be written by the network master can be made available, according to the selected option.

The first two output words are fixed and represent the control and the speed reference.


**NOTE!**

- The value 0 (zero) disables the writing in the word. The number of input words, however, keeps the same as programmed at P751.
- The written parameters using these words are not saved in non-volatile memory. Thus, if the equipment is turned off and on again, these parameters will return to their original value.

**P750 – PROFIBUS ADDRESS**

**Range:** 1 to 126

**Default:** 1

**Properties:** -

**Description:**

It allows programming the slave address in the Profibus DP network. It is necessary that each of the equipments in the network has an address different from the others.


**NOTE!**

If this parameter is changed, the slave will assume the new configuration only when there is no cyclic communication with the master.

**P751 – SELECTION OF THE CONFIGURATION TELEGRAM**


<b>Range:</b>	1 = Standard Telegram 1 (2 I/O words) 2 = Telegram 100 (3 I/O words) 3 = Telegram 101 (4 I/O words) 4 = Telegram 102 (5 I/O words) 5 = Telegram 103 (6 I/O words) 6 = Telegram 104 (7 I/O words)	<b>Default:</b> 1
<b>Properties:</b>	-	

**Description:**

It allows selecting which configuration telegram is used by the drive during the Profibus DP network initialization. This telegram defines the format and quantity of input/output data exchanged with the network master.

During the network master configuration, by using the GSD file, it is possible to select the desired data module for the exchange of cyclic data between the master and the slave. It is possible to exchange from 2 to 6 input/output (I/O) words (16 bits each), depending on the selected option. The value programmed in this parameter must coincide with the module selected by the network master configuration tool.

The content of the first two input/output words is pre-defined. The other words are programmable through the parameters P742 up to P749:

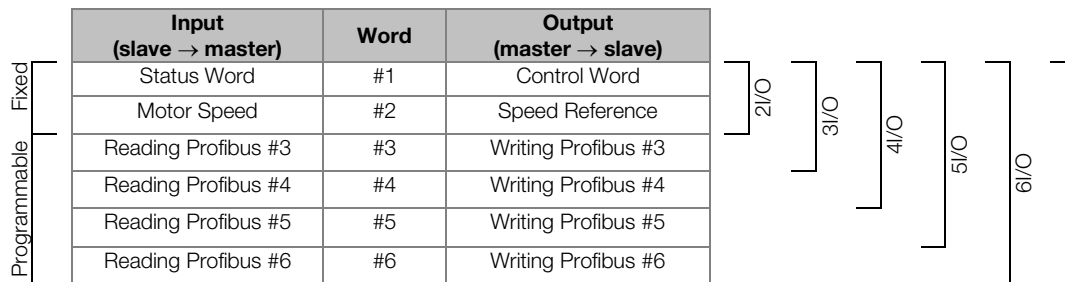
**NOTE!**

- The format of the control, status, speed reference and motor speed words depends on the parameter P741 programming.
- If this parameter is changed, the slave will assume the new configuration only when there is no cyclic communication with the master.

**P754 – PROFIBUS BAUD RATE DETECTION**

<b>Range:</b>	0 = 9.6 kbit/s 1 = 19.2 kbit/s 2 = 93.75kbit/s 3 = 187.5 kbit/s 4 = 500 kbit/s 5 = Not detected 6 = 1500 kbit/s 7 = 3000 kbit/s 8 = 6000 kbit/s 9 = 12000 kbit/s 10 = Reserved 11 = 45.45 kbit/s	<b>Default:</b> -
<b>Properties:</b>	RO	

**Description:**

It is a Profibus DP communication specific parameter, defined by the PROFdrive standard, to indicate the baud rate detected by the Profibus DP interface.

## 5 PROFIBUS DP NETWORK OPERATION

The CFW300 inverter de frequência with Profibus DP communication accessory operates as a slave in the network and supports the network services of DP-V0 and DP-V1 communication protocols. Information about the inverter operation using the services specified on these versions is presented below.

### 5.1 PROFIBUS DP-V0

#### 5.1.1 Cyclic Data

The communication via cyclic data allows the data transfer in two directions:

- Input data: Data transmitted from the slave to the master, for monitoring the status and the variables of each slave.
- Output data: Data transmitted from the master to the slave, for control and transmission of operation data to the equipment.

These data are transmitted in regular time periods, defined by the baud rate, number of slaves in the network and the amount of data exchanged with each slave.

The number of input/output (I/O) words available for the CFW300 depends on the format of the configuration telegram, programmed through the parameter P751. It is possible to communicate from 2 to 6 input words and the same number of output words. The contents of these words depend on the setting of the parameters P742 to P749.

The same programming done at the parameter P751 must also be configured at the network master, using a master configuration tool and the CFW300 GSD file, selecting one of the available modules described in the GSD file.

#### 5.1.2 SYNC/FREEZE

The CFW300 inverter de frequência supports the SYNC/UNSYNC and FREEZE/UNFREEZE commands. These are global commands that the master can send to all the network slaves, allowing simultaneous update of I/O data in the network equipments.

The SYNC/UNSYNC commands act on the master output data. When receiving a SYNC command, the command and speed reference values received by each slave are frozen. Values received later by the slave are stored, but will only be updated after the reception of a new SYNC command, or after the UNSYNC command, which cancels this function.

The FREEZE/UNFREEZE commands act in a similar form as the SYNC, but their action is associated to the master input data. When receiving a FREEZE command, variable and status values of each slave are frozen. These values remain fixed until a new FREEZE command be received, or after the UNFREEZE command, which cancels this function.

### 5.2 PROFIBUS DP-V1

In addition to the services defined by the first version of the Profibus DP specification (DP-V0), where it is mainly defined how to perform the exchange of cyclic data for equipment control and monitoring, the CFW300 inverter de frequência with the Profibus DP communication accessory also supports the DP-V1 additional services for acyclic communication. Using these services, it is possible to read/write drive parameters using DP-V1 acyclic function, both by the network master (class 1 master) and by a commissioning tool (class 2 master).

#### 5.2.1 Available Services for Acyclic Communication

The device supports the following services for acyclic communication in the Profibus DP network:

- Communication between class 1 master and slave (MS1):
  - Data acyclic reading (DS\_Read)
  - Data acyclic writing (DS\_Write)

- Communication between class 2 master and slave (MS2):
  - Initiates the connection (Initiate)
  - Data acyclic reading (DS\_Read)
  - Data acyclic writing (DS\_Write)
  - Aborts the connection (Abort)

DP-V1 requests use an SD2 type Profibus DP telegram – with variable data length. This type of telegram has the following fields:

Telegram Header										Data Unit	Telegram End	
SD	LE	LEr	SD	DA	SA	FC	DSAP	SSAP		DU	FCS	ED
68h	xx	Xx	68h	xx	xx	xx	xx	xx		xx ...	xx	16h

- SD Telegram start delimiter (Start Delimiter)
- LE Telegram length, from the DA field to the DU (Length)
- LEr Telegram length repetition (Length repeat)
- DA Destination Address
- SA Source Address
- FC Function Code
- DSAP Destination Service Access Point
- SSAP Source Service Access Point
- DU Data unit, size 1 to 244 (Data Unit for DP services)
- FCS Telegram checking byte (Frame Checking Sequence)
- ED Telegram end delimiter (End Delimiter)

In this telegram it matters to describe the data structure in the DU field, where the form to access the drive parameters is defined. The other fields follow the defined by the Profibus specification and, normally, are controlled by the network master.

### 5.2.2 Data Addressing

In the functions for reading and writing via acyclic data, these data are addressed with a numbering indicating which slot and index are being accessed. The slots can be used to address different physical segments of an equipment (a modular equipment for instance) or even logical segments inside a single equipment. The index indicates which data inside the segment is being accessed.

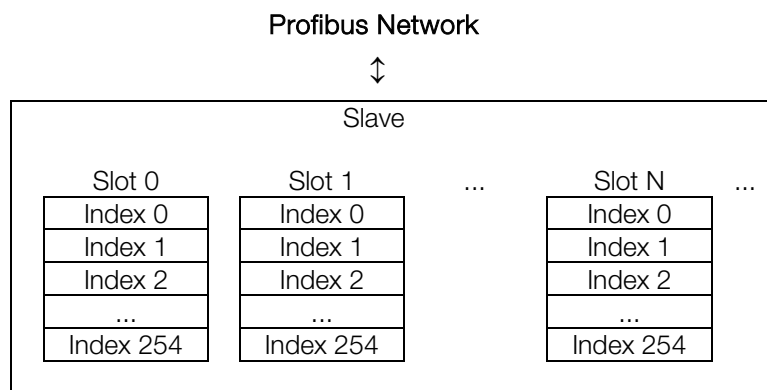


Figure 5.1: Acyclic Data Addressing

### 5.2.3 Reading/Writing DP-V1 Telegrams

In the Profibus DP protocol, the writing (DS\_Write) and reading (DS\_Read) DP-V1 telegrams used to access the parameters have the following structure:

Writing Telegram (DS\_Write):

Request (master -> slave)	Header	Data Unit (DU)					End
		Function 5Fh	Slot 0	Index 47	Size n	Request Data (n bytes)	

Positive Response (slave -> master)	<i>Header</i>	<i>Data Unit (DU)</i>				<i>End</i>
		Function 5Fh	Slot 0	Index 47	Size 0	
Negative Response (slave -> master)	<i>Header</i>	<i>Data Unit (DU)</i>				<i>End</i>
		Function DFh	Error Decode 128	Error Code 1 xx	Error Code 2 xx	

Reading Telegram (DS\_Read):

Request (master -> slave)	<i>Header</i>	<i>Data Unit (DU)</i>				<i>End</i>
		Function 5Eh	Slot 0	Index 47	Size 240	
Positive Response (slave -> master)	<i>Header</i>	<i>Data Unit (DU)</i>				<i>End</i>
		Function 5Eh	Slot 0	Index 47	Size n	
Negative Response (slave -> master)	<i>Header</i>	<i>Data Unit (DU)</i>				<i>End</i>
		Function DEh	Error Decode 128	Error Code 1 xx	Error Code 2 xx	

Each telegram field can assume the following values:

<b>Function</b>	5Fh – Writing request, positive response for writing 5Eh – Reading request, positive response for reading DFh – Negative response for writing DEh – Negative response for reading
<b>Slot</b>	0 (It is the standard slot for accessing the drive parameters, according to PROFIdrive)
<b>Index</b>	47 (It is the standard index for accessing the drive parameters, according to PROFIdrive)
<b>Size</b>	Number of bytes for reading and writing. Writing request: 'n' bytes, according to the number of bytes in the request telegram. Positive response for writing: 0 bytes Reading request: 240 bytes (It requests the maximum number of reading bytes, because the size of the slave response is variable). Positive response for reading: 'n' bytes, according to the number of bytes in the response telegram.
<b>Error Decode</b>	128
<b>Error Code 1</b>	Error code, according to the problem found in the request: B0h: access error – invalid slot B2h: access error – invalid index B5h: access error – modification not allowed for the parameter B6h: access error – modification in read-only parameter B7h: access error – incorrect values for parameter access B8h: access error – invalid parameter number C3h: Resource error – Response not available for the reading request
<b>Error Code 2</b>	0
<b>Request Data</b>	Variable size field of the writing request (DS_Write), which contains the data for accessing the drive parameters.
<b>Response Data</b>	Variable size field of the reading response (DS_Read), which contains the result of the access to the drive parameters.

### 5.2.4 Data Structure for Parameter Access – WEG

Besides the structure for the access to the parameters according to the PROFIdrive specification, it is also possible to use a simplified structure for the access to the parameters through the following addressing:

- Slot 0.
- Index 48.

With the telegrams described in the section 4.2.3, it is possible to get access to the parameters using the following mechanism:

- Parameter modification: the modification of parameters is performed with a writing telegram (DS\_Write), with 4 data bytes, where the two first represent the parameter number and the two last represent the parameter content, always with the most significant byte transmitted first. The response to the writing telegram indicates whether or not the modification was successful.

- Parameter reading: for the reading of parameters, first a writing telegram (DS\_Write) with 2 data bytes representing the parameter number must be sent. After this telegram has been successfully sent, a reading telegram (DS\_Read) must be sent, and the response will have 2 data bytes with the parameter content.

The reading telegrams as well as the writing telegrams are able to report errors in the parameter requests, according to the codes described for the Error Code 1 field.

The fields with the request and response data contain the structure where the parameters accessed at the drive are defined. In this access the request and response data have the following structure:

**Table 5.1: Request data structure**

<b>Request data header</b>	Request Reference	Request ID	}	Repeated 'n' times, according to the number of accessed parameters
	DO-ID	Nr. of Parameters (n)		
<b>Parameter address</b>	Attribute	Nr. of Elements	}	Repeated 'n' times, according to the number of parameters in the header
	Parameter Number			
	Sub-index			
	:			
<b>Parameter value (only for parameter modification requests)</b>	Format	Number of Values	}	Repeated 'n' times, according to the number of parameters in the header
	Value 1			
	Value 2...			
	:			

<b>Request Reference</b>	A number between 1 and 255 that will be retransmitted in the response telegram.
<b>Request ID</b>	It represents the type of request made to the slave: 1 = Parameter reading 2 = Parameter modification
<b>DO-ID</b>	0
<b>Nr. of Parameters</b>	The number of parameters accessed in the request.
<b>Attribute</b>	10h (request of the parameter value)
<b>Nr. of Elements</b>	For parameters of the array type, it represents the number of elements accessed in the parameter. For the CFW300 only a few parameters specified by the PROFIdrive specification have this format, the other parameters are always formed by a single value, and therefore this field must be set in 0 or 1.
<b>Parameter Number</b>	The number of a drive valid parameter (the most significant byte is transmitted first).
<b>Sub-index</b>	For parameters of the array type, it represents the array element starting from which the access will be made (the most significant byte is transmitted first). For parameters formed by a single item, this field must be set in 0.
<b>Format</b>	It defines the format for the writing parameter. For the CFW300 parameters the value 42h (16 bit word) must be used.
<b>Number of Values</b>	The number of values to be written (defined in the number of elements).
<b>Value</b>	Value to write in the parameter (the most significant byte is transmitted first).

**Table 5.2: Response data structure**

<b>Response data header</b>	Request Reference mirror	Response ID	}	Repeated 'n' times, according to the number of accessed parameters
	DO-ID mirror	No. of Parameters (n)		
<b>Parameter value (only for parameter reading responses, or in case of error)</b>	Format	Number of Values	}	Repeated 'n' times, according to the number of accessed parameters
	Value 1 or error code			
	Value 2 or error code...			
	:			

<b>Request Reference mirror</b>	A mirror of the value received in the request telegram.
<b>Response ID</b>	It represents the type of response sent by the slave: 1 = Successful parameter reading 2 = Successful parameter modification 129 = Parameter reading with error 130 = Parameter modification with error
<b>DO-Id Mirror</b>	Mirror of the value received in the request telegram.
<b>Nr. of Parameters (n)</b>	The number of parameters accessed in the request.
<b>Format</b>	It defines the format of the accessed parameter: 42h = 16 bit word 44h = Parameter access error
<b>Number of values</b>	The number of values read from the parameter, or the number of error codes from the parameter access.
<b>Value</b>	Value read from the parameter (the most significant byte is transmitted first).
<b>Error code</b>	In case of parameter illegal access (error in reading or writing of any of the parameters), the code of the type of found error will be indicated: 0000h = parameter does not exist 0001h = modification of read-only parameter 0002h = parameter value out of the limits 0003h = indicated sub-index does not exist 0004h = parameter not of the array type 0005h = incorrect format for the parameter 0009h = description not available (only value) 000Fh = text not available (only value) 0016h = incorrect access to the parameter 0017h = unknown format 0018h = incorrect number of values

### 5.2.5 Example of Telegrams for Acyclic Access to the Parameters

Below are shown examples of sequences to access the parameters of the drive. As aforementioned, every access to the parameters is performed first with a writing telegram with the request, and then with a reading telegram to obtain the result of the request.

Example1: reading of the motor speed (P002) and current (P003) parameters.

Request (made by the master using the telegram DS\_Write):

Byte Number	Field	Value	Description
1	Request Reference	1	
2	Request ID	1	Reading Request
3	DO-ID	0	
4	Number of Parameters	2	Reading of 2 Parameters
5	Attribute	10h	Reading of the parameter value
6	Number of Elements	1	Reading of only one value
7	Parameter number (byte + sig.)	0	Number of the first parameter read = P002
8	Parameter number (byte - sig.)	2	
9	Sub-index (high part)	0	Parameter has no sub-index
10	Sub-index (low part)	0	
11	Attribute	10h	Reading of the parameter value
12	Number of Elements	1	Reading of only one value
13	Parameter number (byte + sig.)	0	Number of the second parameter read = P003
14	Parameter number (byte - sig.)	3	
15	Sub-index (byte + sig.)	0	Parameter has no sub-index
16	Sub-index (byte - sig.)	0	

Positive response (sent by the slave in the response of telegram DS\_Read)

Assuming P002 = 100 rpm and P003 = 5.0 A



Byte Number	Field	Value	Description
1	Request Reference	1	Copied from the request telegram
2	Request ID	1	Positive reading request
3	DO-ID	0	
4	Number of Parameters	2	Reading of 2 Parameters
5	Format	42h	WORD-type value (16 bits)
6	Number of values	1	Reading of only one value
7	Parameter value (byte + sig.)	0	P002 = 100 rpm
8	Parameter value (byte - sig.)	100	
9	Format	42h	WORD-type value (16 bits)
10	Number of values	1	Reading of only one value
11	Parameter value (byte + sig.)	0	P003 = 5.0 A
12	Parameter value (byte - sig.)	50	

Negative response (sent by the slave in the response of telegram DS\_Read)  
Assuming error in the reading of the second parameter

Byte Number	Field	Value	Description
1	Request Reference	1	Copied from the request telegram
2	Request ID	129	Negative reading request
3	DO-ID	0	
4	Number of Parameters	2	Reading of 2 Parameters
5	Format	42h	WORD-type value (16 bits)
6	Number of values	1	Reading of only one value
7	Parameter value (byte + sig.)	0	P002 = 100 rpm
8	Parameter value (byte - sig.)	100	
9	Format	44h	Reading error
10	Number of values	1	Only one value available
11	Error code (byte + sig.)	0	Error 0000h (assuming that the requested parameter does not exist).
12	Error code (byte - sig.)	0	

Example 2: change of the upper speed limit parameter (P134).

Request (made by the master using the telegram DS\_Write)  
Assuming desired change to P134 = 1000rpm.

Byte Number	Field	Value	Description
1	Request Reference	1	
2	Request ID	2	Change request
3	DO-ID	0	
4	Number of Parameters	1	Change of one parameter
5	Attribute	10h	Change of the parameter value
6	Number of Elements	1	Change of only one value
7	Parameter number (byte + sig.)	0	Number of the changed parameter = P134
8	Parameter number (byte - sig.)	134	
9	Sub-index (high part)	0	Parameter has no sub-index
10	Sub-index (low part)	0	
11	Format	42h	WORD-type value (16 bits)
12	Number of values	1	Only one value changed
13	Parameter value (byte + sig.)	03h	P134 = 1000rpm
14	Parameter value (byte - sig.)	E8h	

Positive response (sent by the slave in the response of telegram DS\_Read):

Byte Number	Field	Value	Description
1	Request Reference	1	Copied from the request telegram
2	Request ID	2	Positive change request
3	DO-ID	0	
4	Number of Parameters	1	Change of one parameter

Negative response, assuming error in the change (sent by the slave in the response of telegram DS\_Read):

Byte Number	Field	Value	Description
1	Request Reference	1	Copied from the request telegram
2	Request ID	130	Negative change request
3	DO-ID	0	
4	Number of Parameters	2	Change of one parameter
5	Format	44h	Error in the change
6	Number of values	1	Only one value available
7	Error code (byte + sig.)	0	Error 0002h (assuming the value for the parameter is off limits).
8	Error code (byte - sig.)	2	

## 6 FAULTS AND ALARMS RELATED TO THE PROFIBUS DP COMMUNICATION

### A138/F238 – PROFIBUS DP INTERFACE IN CLEAR MODE

**Description:**

It indicates that the slave has received from the network master the command to enter the Clear mode.

**Actuation:**

The indication occurs if, during the cyclic communication, the Profibus DP network master sends to the network a global telegram telling the slaves that they must leave the operation mode and enter the Clear mode. The conditions for the transmission of this command depend on the network master, but it normally indicates a special operation condition, such as during the programming of the master.

The message of alarm A138 or fault F238 will in this case be signalized through the HMI, depending on the P313 programming. In case of alarm, the indication will automatically disappear if a new telegram to leave this mode is received.

**Possible Causes/Correction:**

- Verify the network master status, making sure it is in execution (RUN) mode.

### A139/F239 – PROFIBUS DP INTERFACE OFFLINE

**Description:**

It indicates an interruption in the communication between the Profibus DP network master and the drive. The Profibus communication interface changed to the offline state.

**Actuation:**

It acts when for any reason an interruption in the communication between the drive and the Profibus DP network master occurs after the cyclic communication has been initiated. The time programmed for this detection is received through the parameterization telegram sent by the master.

The message of alarm A139 or fault F239 will in this case be signalized through the HMI, depending on the P313 programming. In case of alarm, the indication will automatically disappear at the moment when the cyclic communication is reestablished.

**NOTE!**

When energizing the equipment, the Profibus DP interface will be initialized in the offline state. The error indication, however, will be done only if a transition from online to offline occurs.

**Possible Causes/Correction:**

- Verify whether the network master is configured correctly and operating normally.
- Search for short-circuit or bad contact in the communication cables.
- Make sure the cables are not changed or inverted.
- Verify whether termination resistors with correct values were installed only at the extremes of the main bus.
- Verify the entire network installation – cable passage, grounding.

### F032 – FAULT OF COMMUNICATION WITH THE ACCESSORY

**Description:**

Fault that indicates problem in the data exchange between the CFW300 and the CPDP communication module. It indicates that the CFW300 stopped receiving valid data from the CPDP module for longer than 1 second.

**Actuation:**

After the timeout in the data exchange is identified, the HMI will show the fault message F032.

**Possible Causes/Correction:**

- Accessory is damaged;



- Poor connection of the accessory;
- Accessory identification problem.



WEG Drives & Controls - Automação LTDA.  
Jaraguá do Sul – SC – Brazil  
Phone 55 (47) 3276-4000 – Fax 55 (47) 3276-4020  
São Paulo – SP – Brazil  
Phone 55 (11) 5053-2300 – Fax 55 (11) 5052-4212  
automacao@weg.net  
www.weg.net